

Smart Management Terminal

User Manual

Please read this manual carefully before operating the unit and keep it for further reference

Notes

- Please read this user manual carefully to ensure that you can use the device correctly and safely.
- There may be several technically incorrect places or printing errors in this manual. The updates will be added into the new version of this manual. The contents of this manual are subject to change without notice.
- This device should be operated only from the type of power source indicated on the marking label. The voltage of the power must be verified before using the same. Kindly remove the cables from the power source if the device is not to be used for a long period of time.
- Do not install this device near any heat sources such as radiators, heat registers, stoves or other devices that produce heat.
- Do not install this device near water. Clean only with a dry cloth.
- Do not block any ventilation openings and ensure proper ventilation around the machine.
- Do not power off the device at normal recording condition.
- This machine is for indoor use only. Do not expose the machine in rain or moist environment. In case any solid or liquid get inside the machine's case, please turn off the device immediately and get it checked by a qualified technician.
- Do not try to repair the device by yourself without technical aid or approval.
- In this manual, the trademarks, product names, service names, company names, products that are not owned by our company are the properties of their respective owners.
- It is recommended to back up and clear the personal data stored in the device before the device is returned to us for repair or replacement except those data that are essential for purposes of repair or replacement. The device will be restored to the default factory settings and all personal data will be cleared after repair or replacement. Our company ensures that the customer's data is not made available to third parties if the device is exchanged.
- This manual is suitable for many models. All examples and pictures used in the manual are from one of the models for reference purpose.
- The local language versions of this manual will be provided to users in the corresponding regions and countries.

Disclaimer

- With regard to the product with internet access, the use of product shall be wholly at your own risks. Our company shall be irresponsible for abnormal operation, privacy leakage or other damages resulting from cyber attack, hacker attack, virus inspection, or other internet security risks; however, our company will provide timely technical support if necessary.
- Surveillance laws vary from country to country. Check all laws in your local region before using this product for surveillance purposes. We shall not take the responsibility for any consequences resulting from illegal operations. In the event of any conflicts between this

manual and the applicable law, the later prevails.

- The storage of the personal data depends on the capacity of the storage devices the users use and all data stored in the device shall be handled by themselves. Our company shall not be responsible for the data loss.

Cybersecurity Recommendations

- Use a strong password. At least 8 characters or a combination of characters, numbers, and upper and lower case letters should be used in your password.
- Set the password expiration time and regularly change the passwords of your devices to ensure that only authorized users can access the system (recommended time is 90 days).
- The system will automatically check the latest firmware version once a day. Once the latest version is checked, you'd better update it to ensure the system is current with the latest security patches and fixes.
- It is recommended to change the service default ports (like HTTP-80, HTTPS-443, etc.) to reduce the risk of outsiders being able to access.
- It is recommended to set the firewall of your router. But note that some important ports cannot be closed (like HTTP port, HTTPS port, Data Port).
- It is not recommended to expose the device to the public network. When it is necessary to be exposed to the public network, please set the external hardware firewall and the corresponding firewall policy.
- It is not recommended to use the v1 and v2 functions of SNMP.
- In order to enhance the security of WEB client access, please create a TLS certificate to enable HTTPS.
- Use black and white list to filter the IP address. This will prevent everyone, except those specified IP addresses from accessing the system.
- If you add multiple users, please limit functions of guest accounts.
- If you enable UPnP, it will automatically try to forward ports in your router or modem. It is really very convenient for users, but this will increase the risk of data leakage when the system automatically forwards ports. Disabling UPnP is recommended when the function is not used in real applications.
- Check the log. If you want to know whether your device has been accessed by unauthorized users or not, you can check the log. The system log will show you which IP addresses were used to log in your system and what was accessed.

Regulatory Information

FCC Information

1. FCC compliance


The products have been tested and found in compliance with the council FCC rules and

regulations part 15 subpart B. These limits are designed to provide reasonable protection against harmful interference. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. The user will be required to correct the interface at his own expense in case the harmful interference occurs.

2. FCC conditions:

Operation of this product is subject the following two conditions: (1) this device may not cause harmful interface, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE Information

 The products have been manufactured to comply with the following directives.
EMC Directive 2014/30/EU

RoHS

The products have been designed and manufactured in accordance with Directive EU RoHS Directive 2011/65/EU and its amendment Directive EU 2015/863 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



2012/19/EU (WEEE directive): The Directive on waste electrical and electronic equipment (WEEE Directive). To improve the environmental management of WEEE, the improvement of collection, treatment and recycling of electronics at the end of their life is essential. Therefore, the product marked with this symbol must be disposed of in a responsible manner.

Directive 94/62/EC: The Directive aims at the management of packaging and packaging waste and environmental protection. The packaging and packaging waste of the product in this manual refers to must be disposed of at designated collection points for proper recycling and environmental protection.

REACH(EC1907/2006): REACH concerns the Registration, Evaluation, Authorization and Restriction of Chemicals, which aims to ensure a high level of protection of human health and the environment through better and earlier identification of the intrinsic properties of chemical substances. The product in this manual refers to conforms to the rules and regulations of REACH. For more information of REACH, please refer to DG GROWTH or ECHA websites.

Table of Contents

1	Introduction	1
1.1	Summary	1
1.2	Features	1
1.3	Front Panel Descriptions	4
1.4	Rear Panel Descriptions	5
1.5	Connections.....	8
2	Basic Operation Guide.....	10
2.1	Startup &Shutdown	10
2.1.1	Startup	10
2.1.2	Shutdown.....	10
2.2	Remote Controller	10
2.3	Mouse Control.....	12
2.4	Text-input Instruction	12
2.5	Common Button Operation	13
3	Wizard & Main Interface	14
3.1	Startup Wizard.....	14
3.2	Main Interface	18
3.2.1	Main Interface Introduction.....	18
3.2.2	Setup Panel.....	20
3.2.3	Main Functions.....	21
4	Camera Management.....	23
4.1	Add/Edit Camera	23
4.1.1	Add Camera.....	23
4.1.2	Edit Camera.....	25
5	Live View Introduction	26
5.1	Live View Interface Introduction	26
5.1.1	Smart Temperature Screening View	32
5.1.2	Corridor Pattern	33
5.2	Preview Image Configuration	34
5.2.1	OSD Settings	34
5.2.2	Image Settings	34
5.2.3	Image Adjustment	35
6	People Management	38
7	Attendance Management	43
7.1	Attendance Rule Settings	43
7.2	Leave and Business Trip Settings	43
7.3	Attendance Search	45
8	Flow Control	47
8.1	Flow Control Settings.....	47
8.2	Flow Control View	47

9	Statistics	49
9.1	Real-Time Statistics	49
9.2	Historical Statistics.....	49
10	Record& Disk Management	51
10.1	Record Configuration	51
10.1.1	Mode Configuration	51
10.1.2	Advanced Configuration.....	53
10.2	Encode Parameters Settings	53
10.3	Schedule Settings	54
10.3.1	Add Schedule.....	54
10.3.2	Record Schedule Configuration.....	56
10.4	Record Mode.....	57
10.4.1	Manual Recording	57
10.4.2	Timing Recording.....	57
10.4.3	Motion Based Recording.....	57
10.4.4	Sensor Based Recording.....	57
10.4.5	Intelligence Recording.....	57
10.5	Disk.....	58
10.5.1	Disk Management.....	58
10.5.2	Storage Mode Configuration	58
10.5.3	View Disk and S.M.A.R.T. Information	59
11	Playback& Backup.....	60
11.1	Instant Playback	60
11.2	Playback Interface Introduction.....	60
11.3	Record Search, Playback &Backup	64
11.3.1	Smart Face Search	64
11.3.2	Smart Human Body Search	69
11.3.3	Search by Time-Sliced Image.....	70
11.3.4	Search by Time	72
11.3.5	Search by Event.....	73
11.3.6	Search & Playback by Tag.....	74
11.3.7	Image Management	74
11.3.8	View Backup Status.....	75
12	AI/Event Management	76
12.1	Body Temperature Settings	76
12.2	Mask Settings	77
12.3	Sensor Alarm.....	77
12.4	Motion Alarm	79
12.4.1	Motion Configuration.....	79
12.4.2	Motion Alarm Handling Configuration	80
12.5	Combination Alarm.....	80
12.6	Exception Alarm.....	81
12.6.1	IPC Offline Settings	81
12.6.2	Exception Handling Settings	81
12.7	Alarm Event Notification	82
12.7.1	Alarm-out	82
12.7.2	E-mail.....	82

12.7.3 Display	82
12.7.4 Buzzer	83
12.7.5 APP Push Message	83
12.8 Manual Alarm.....	83
12.9 View Alarm Status.....	84
13 Account & Permission Management	86
13.1 Account Management.....	86
13.1.1 Add User.....	86
13.1.2 Edit User.....	87
13.2 User Login & Logout	89
13.3 Permission Management	89
13.3.1 Add Permission Group	89
13.3.2 Edit Permission Group	90
13.4 Block and Allow List.....	90
13.5 Preview On Logout	91
13.6 Network Security	91
13.7 Password Security	92
13.8 View Online User.....	92
14 Device Management	93
14.1 Network Configuration	93
14.1.1 TCP/IP Configuration.....	93
14.1.2 Port Configuration.....	94
14.1.3 PPPoE Configuration	96
14.1.4 DDNS Configuration.....	96
14.1.5 E-mail Configuration.....	97
14.1.6 UPnP Configuration	98
14.1.7 802.1X.....	98
14.1.8 NAT Configuration.....	99
14.1.9 FTP Configuration.....	99
14.1.10 SNMP.....	100
14.1.11 View Network Status	101
14.2 Basic Configuration.....	101
14.2.1 Common Configuration.....	101
14.2.2 Date and Time Configuration	101
14.2.3 PoE Power Management	102
14.2.4 Recorder OSD Settings.....	103
14.3 Factory Default.....	103
14.4 Device Software Upgrade	103
14.5 Backup and Restore.....	104
14.6 Restart Automatically	104
14.7 View Log.....	104
14.8 View System Information.....	105
15 Remote Surveillance.....	106
15.1 Mobile Client Surveillance.....	106
15.2 Web LAN Access	106
15.3 Web WAN Access.....	107
15.4 Web Remote Control.....	108

15.4.1 Live View via Web Client..... 109

15.4.2 People Management via Web Client..... 111

15.4.3 Attendance Management via Web Client..... 111

15.4.4 Face Greeting 112

15.4.5 Playback via Web Client..... 113

15.4.6 Search and Backup via Web Client..... 114

15.4.7 Settings via Web Client 114

15.4.8 Upgrade via Web Client 115

Appendix A FAQ..... 116

Appendix B Calculate Recording Capacity 122

Appendix C Compatible Device List 124

Appendix D Communication Port List 125

Appendix E Personal Data Collection Description 126

Appendix F Default Account List..... 127

Appendix G Command List 128

1 Introduction

1.1 Summary

The smart management terminal (SMT) series is specially designed and developed for AI application management, like body temperature measurement management, time attendance, access control, etc. It supports real-time face capture display, temperature display and alarm out, statistics, video preview, search and playback.

1.2 Features

Basic Functions

- Support network device access including facial panel, AI camera, IP camera, attendance terminal, thermal network camera, etc.
- Support the H.265 and H.264 IP cameras
- Support standard ONVIF protocol
- Support dual stream recording of each camera
- Support IP cameras to be added quickly or manually
- Support collective or individual configuration of the cameras' OSD, video parameters, motion and so on
- Support a maximum of 32 user permission groups including Administrator, Advanced and Ordinary which are the default permission groups of the system
- Support multiple users to be created, multiple web clients login by using one username at the same time and the user's permission control to be enabled or disabled
- Support a maximum of 5 web clients login at the same time

Live View

- Support 4K×2K/1920×1080/1280×1024 HDMI and 1920×1080/1280×1024 VGA high definition synchronous display (depending on models)
- Support multi-screen modes such as 1/4/6/8/9/13/16 (depending on models)
- Support auto adjustment of the camera's image display proportion
- Support audio monitoring of the camera to be enabled or disabled
- Support manual snapshot of the preview camera
- Support quick tool bar operation of the preview window
- Support motion detection
- Support image and lens adjustment (only available for some cameras)
- Support quick camera adding in the camera window of the live preview interface

AI Functions

- Real-time display of all abnormal data, including abnormal temperature, mask off, block list, etc.
- Real-time face capture view, human body capture view, face comparison view, body temperature view.
- Support precise face recognition with masks
- Statistics of over temperature and non-mask detection in recent 24 hours or 7 days

- Statistics of the people information, including staff, allow list, block list, VIP, stranger and staff counts
- Statistics of people entry and exiting in recent 24 hours or 7 days
- Support smart temperature screening viewing mode (only thermal camera channel available)
- Support records search by mask status, by normal/over temperature or by event (stranger/allow list/ block list/VIP)
- Support face attendance
- Support face greeting via Web client
- Support over temperature alarm
- Support non-mask detection alarm
- Support people flow control

Disk Management

- A maximum of 2 SATA HDDs with the 1U case and a maximum of 1 SATA HDD with the small 1U case
- Each SATA interface of the SMT supports the HDDs with max 10TB storage capacity
- Support disk group configuration and management and each camera can be added into different disk groups with different storage capacity
- Support disk information and disk working status viewing
- Support batch formatting of the disks

Record Configuration

- Support main stream and sub stream recording at the same time and batch or single configuration of the record stream
- Support manual and auto record modes
- Support schedule recording, sensor alarm recording and motion detection recording, etc.
- Support schedule recording and event recording setting with different record streams
- Support record schedule setting and recycle recording
- Support pre-recording and delay recording configuration of the event recording

Record Playback

- Support time scale operation in quick playback and the playback date and time can be set randomly by scrolling the mouse; the time interval of the time scale can be zoomed
- Support record search by time slice/time/event/tag
- Support smart search by face or human body
- Support time view and camera view in searching by time slice mode
- Support time slice search by month, by day, by hour and by minute and time slice to be displayed with camera thumbnail
- Support a maximum of 16 cameras to be searched by time (depending on models)
- Support event search by manual/motion/sensor/intelligent events
- Support tag search by the added tags
- Support instant playback of the selected camera in the live preview interface
- Support a maximum of 16 synchronous playback cameras
- Support acceleration (maximum 32 times of the normal speed), deceleration (minimum

1/32 times of the normal speed) and 30s' addition or reduction to current playing time

Record Backup

- Support record to be backed up through USB (U disk, mobile HDD)
- Support record to be backed up by time/event/image search
- Support record cutting for backing up when playing back
- Support a maximum of 10 backup tasks in background and backup status viewing

Alarm Management

- Support alarm schedule setting
- Support enabling or disabling of the motion detection, external sensor alarm input, combination alarm and exception alarms including IP address conflict alarm, disk IO error alarm, disk full alarm, no disk alarm, illegal access alarm, network disconnection alarm, IPC offline alarm and so on, alarm linkage configuration supportable
- Support IPC offline alarm linkage configuration of snap, pop-up video, etc.
- Support event notification modes of alarm-out, pop-up video, pop-up message box, buzzer, APP push, e-mail and so on
- The captured images can be attached into the e-mail when alarm linkage is triggered
- Support alarm status view of alarm-in, alarm-out, motion detection, AI alarm and exception alarm
- Support alarm to be triggered and cleared manually
- Support system auto reboot when exception happens

Network Functions

- Support TCP/IP and PPPoE, DHCP, DNS, DDNS, UPnP, NTP, SMTP protocol and so on
- Support allow and block list function and the IP address/IP segment/MAC address can be allowed or blocked.
- Support multiple browsers including IE8/9/10/11, Firefox, Opera, Chrome (available only for the versions lower than 45) and Safari in MAC system
- Support remote preview, configuration, import and export of the SMT parameters and other system maintenance operations including remote upgrading and system restart
- Support remote camera configuration of the SMT including video parameters, image quality and so on
- Support remote search, playback and backup of the SMT
- Support manual alarm to be triggered and cleared remotely
- The auto-focusing camera can be adjusted through web client (support zoom in/out, but one key focus is not currently supported)
- Support NVMS or other platform management software to access the SMT and manage it
- Support NAT function and QRCode scanning by mobile phones and tablets
- Support mobile surveillance by phones or tablets with iOS or Android OS
- If one camera recording is enabled or disabled manually through web client, it will be simultaneously enabled or disabled in the SMT

Other Functions

- The SMT can be controlled and operated by the buttons on the front panel, the remote

controller and the mouse

- Setting interfaces can be switched to one another conveniently by clicking the main menus on the top of the setting interfaces
- Support SMT information viewing including basic, camera status, alarm status, record status, network status, disk and backup status
- Support factory restoring, import and export of the system configuration, log view and export and local upgrading by USB mobile device
- Support auto recognition of the display's resolution
- You can click the right mouse button at any interface to go back to the upper interface
- You can click the middle mouse button at any interface to go to the live view interface
- The display language and video format of the SMT will not be changed and the system logs will be reserved if you reset the SMT to factory default
- Press and hold the right mouse button for 5 seconds in any interface to switch the output to VGA and the SMT will display the video at the lowest resolution which the SMT supports

1.3 Front Panel Descriptions





The following descriptions are for reference only.

Type I:

Name	Descriptions
REC	When recording, the light is blue
Net	When access to network , the light is blue
Power	Power indicator, when connection , the light is blue
Fn	No function temporarily


Type II:

Name	Descriptions
Power	Power Indicator, when connected, the light is blue
HDD	The light turns blue when reading/writing HDD
Net	The light turns blue when it is able to access the network
Backup	The light turns blue when backing up files and data
Play	The light turns blue when playing video
REC	Power Indicator, when connected, the light is blue
AUDIO +/-	1. Adjust audio 2. Increase the value in setup
P.T.Z / -	1. Enter PTZ mode 2. Decrease the value in setup
MENU	Enter Menu in live
INFO	Check the information of the device
BACKUP	Enter backup mode in live
SEARCH	Enter search mode in live
Exit	Exit the current interface


Name	Descriptions
	Manually record
	Play/Pause
	Speed down
	Speed up
1-9	Input digital number and select camera
0/--	Input number 0, the number above 10
Direction Key	Change direction
Multi-Screen Switch	Change the screen mode
Enter	Confirm selection
USB	To connect external USB device like USB mouse or USB flash

1.4 Rear Panel Descriptions


Here we only take a part of real panels for example to introduce their interfaces and connections. The interfaces and locations of the interfaces are only for references. The real product shall prevail.

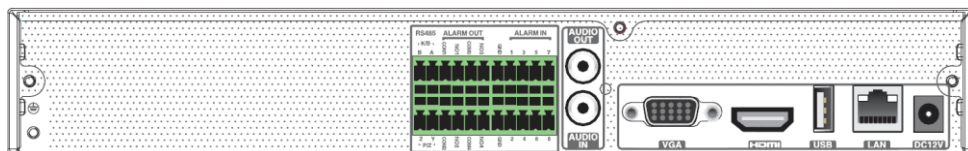

No.	Name	Descriptions
1	RS485 A/B interface	Connect to a keyboard. A is TX+; B is TX-
2	RS485 Y/Z interface	Connectors for speed dome. Y is TX+, Z is TX- (This interface of some models is unavailable.)
3	ALARM OUT	Relay output; connect to external alarm
4	ALARM IN	Alarm inputs for connecting sensors
5	GND	Grounding
6	AUDIO OUT	Audio output; connect to sound box
7	AUDIO IN	Audio input; connect to audio input device, like microphone, pickup, etc.
8	VGA	Connect to monitor
9	HDMI	Connect to high definition display device
10	LAN	Network port
11	USB	Connect USB storage device or USB mouse
12	DC12V	DC12V power input

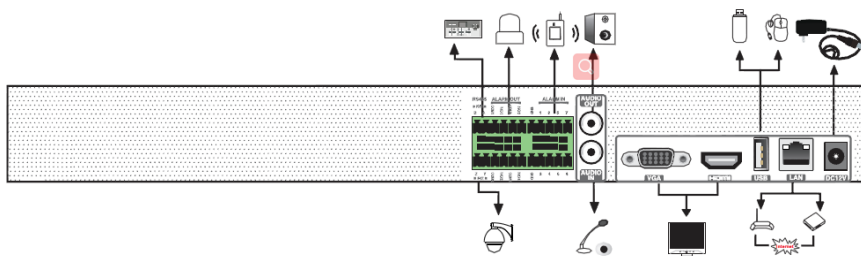


No.	Name	Descriptions
1	RS485 A/B interface	Connect to a keyboard. A is TX+; B is TX-
2	RS485 Y/Z interface	Connectors for speed dome. Y is TX+, Z is TX- (This interface of some models is unavailable.)
3	ALARM OUT	Relay output; connect to external alarm
4	ALARM IN	Alarm inputs for connecting sensors
5	GND	Grounding
6	AUDIO OUT	Audio output; connect to sound box
7	AUDIO IN	Audio input; connect to audio input device, like microphone, pickup, etc.
8	VGA	Connect to monitor
9	HDMI	Connect to high definition display device
10	LAN	Network port
11	USB	Connect USB storage device or USB mouse
12	DC12V	DC12V power input

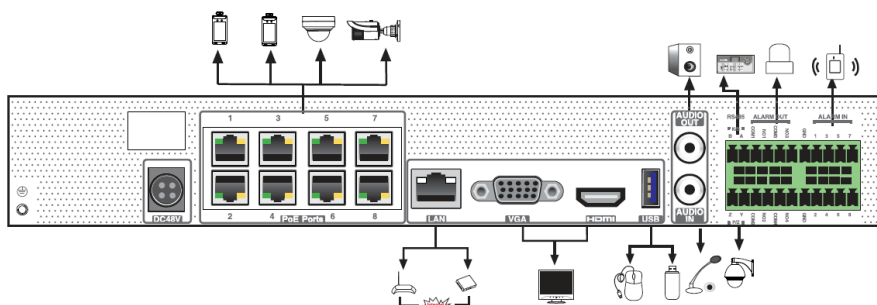

No.	Name	Descriptions
1	Power Supply	DC48V power supply interface
2	PoE ports	8 PoE network ports; connect to 8 PoE IP cameras/panel

No.	Name	Descriptions
3	LAN	Network port
4	VGA	Connect to monitor
5	HDMI	Connect to 1920×1080 high definition display device
6	USB	USB3.0 interface, connect USB storage device or USB mouse
7	AUDIO IN	Audio input; connect to audio input device, like microphone, pickup, etc.
8	AUDIO OUT	Audio output; connect to sound box
9	RS485 A/B interface	Connect to a keyboard. A is TX+; B is TX-
10	RS485 Y/Z interface	Connectors for speed dome. Y is TX+, Z is TX- (This interface of some models is unavailable.)
11	ALARM OUT	Relay output; connect to external alarm
12	ALARM IN	Alarm inputs for connecting sensors
13	GND	Grounding

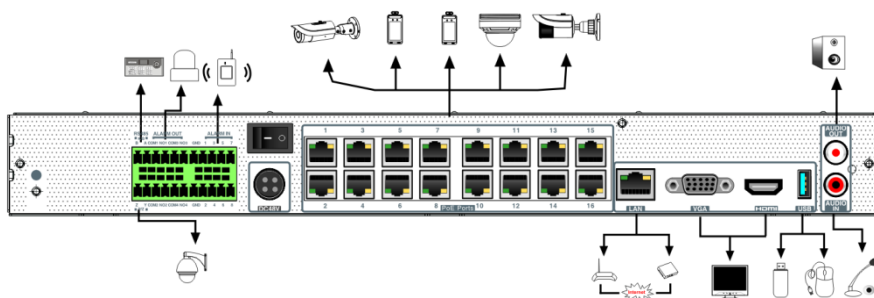

No.	Name	Descriptions
1	RS485 A/B interface	Connect to a keyboard. A is TX+; B is TX-
2	RS485 Y/Z interface	Connectors for speed dome. Y is TX+, Z is TX- (This interface of some models is unavailable.)
3	ALARM OUT	Relay output; connect to external alarm
4	ALARM IN	Alarm inputs for connecting sensors
5	GND	Grounding
6	DC48V	DC48V power supply interface
7	PoE ports	PoE network ports; connect to PoE IP cameras/panel
8	LAN	Network port
9	VGA	Connect to monitor
10	HDMI	Connect to 1920×1080 high definition display device
11	USB	USB3.0 interface, connect USB storage device or USB mouse
12	AUDIO IN	Audio input; connect to audio input device, like

No.	Name	Descriptions
		microphone, pickup, etc.
13	AUDIO OUT	Audio output; connect to sound box

1.5 Connections

● Video Connections

Video Output: Supports VGA/HDMI video output. You can connect to monitor through these video output interfaces simultaneously or independently.


● Audio Connections

Audio Input: Connect to microphone, pickup, etc.

Audio Output: Connect to headphone, sound box or other audio output devices.

● Alarm Connections

Some models may not support this function. Take 8CH alarm inputs and 4CH alarm output for example.

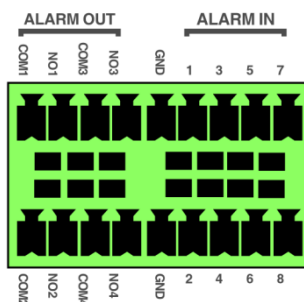


Alarm Input:

Alarm IN 1~8 are 8 CH alarm input interfaces. There are no type requirements for sensors. NO type and NC type are both available.

The way to connect sensor and the device is as shown below:




The alarm input is an open/closed relay. If the input is not an open/closed relay, please refer to the following connection diagram:

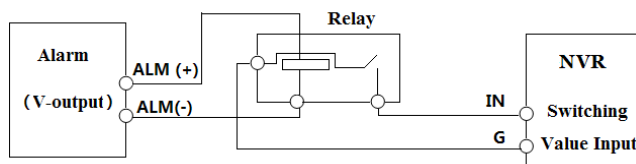

Alarm Output:

The way to connect alarm output device:

Pull out the green terminal blocks and loosen the screws in the alarm-out port. Then insert the signal wires of the alarm output devices into the port of NO and COM separately. Finally, tighten the screws. Provided that the external alarm output devices need power supply, you can connect the power supply as per the following figures.

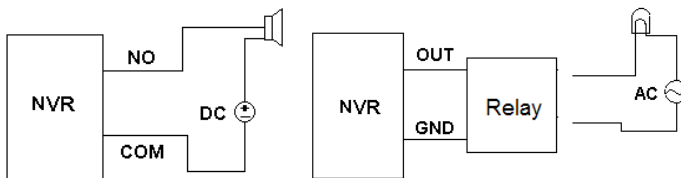

● RS485 Connection



The P/Z interfaces are unavailable temporarily. K/B interfaces are used to connect keyboard.

2 Basic Operation Guide

2.1 Startup & Shutdown

Please make sure all the connections are done properly before you power on the unit. Proper startup and shutdown are crucial to extending the life of your device.

2.1.1 Startup

- ① Connect the output display device to the VGA/HDMI interface of the SMT.
- ② Connect with the mouse and power. The device will boot and the power LED would turn blue.
- ③ After you read the privacy statement, a WIZARD window will pop up (you should select the display language the first time you use the SMT). Refer to [3.1 Startup Wizard](#) for details.

2.1.2 Shutdown

You can power off the device by using remote controller or mouse.

By remote controller:

- ① Press the Power button. This will take you to a shutdown window. The unit will power off after a while by clicking the “OK” button.
- ② Disconnect the power.

By mouse:

- ① Click Start→Shutdown to pop up the Shutdown window. Select “Shutdown” in the window. The unit will power off after a while by clicking the “OK” button.
- ② Disconnect the power.

2.2 Remote Controller


- ① It uses two AAA size batteries.
- ② Open the battery cover of the remote controller.
- ③ Place batteries. Please take care the polarity (+ and -).
- ④ Replace the battery cover.

Key points to check in case the remote doesn't work.

1. Check batteries polarity.
2. Check the remaining charge in the batteries.
3. Check IR controller sensor for any masking.

If it still doesn't work, please change a new remote controller to try, or contact your dealers. You can just turn the IR sensor of the remote controller towards the IR receiver of the SMT to control it when you are controlling multiple devices by remote controller.

There are two kinds of remote controller. The interface of remote controller is shown as below.

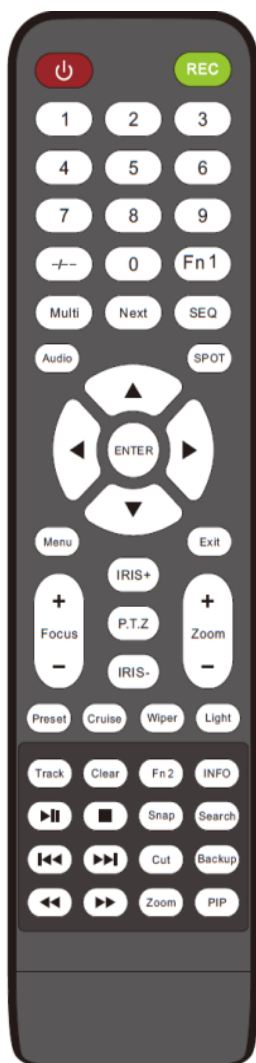



Button	Function
Power Button	Switch off—to stop the device
Record Button	To start recording
-/-- /0-9	Input number or choose camera
Fn1 Button	Unavailable temporarily
Multi Button	To choose multi screen display mode
Next Button	To switch the live image
SEQ	To go to sequence view mode
Audio	To enable audio output in live mode
Switch	No function temporarily
Direction button	To move cursor in setup or pan/title PTZ
Enter Button	To confirm the choice or setup
Menu Button	To go to menu
Exit Button	To exit the current interface
Focus/IRIS/Zoom/PTZ	To control PTZ camera
Preset Button	To enter into preset setting in PTZ mode
Cruise Button	To go to cruise setting in PTZ mode
Track Button	No track function temporarily
Wiper Button	No function temporarily
Light Button	No function temporarily
Clear Button	No function temporarily
Fn2 Button	No function temporarily
Info Button	Get information about the device
	To control playback.Play(Pause)/Stop/Previous Frame/Next Frame/Speed Down/Speed Up
Snap Button	To take snapshots manually
Search Button	To go to search mode
Cut Button	No function temporarily
Backup Button	To go to backup mode
Zoom Button	To zoom in the images
PIP Button	No function temporarily

Note:

You shall press P.T.Z button to enter PTZ setting mode, choose a channel and press P.T.Z button again to hide the P.T.Z control panel. Then you can press preset, cruise, track, wiper or light button to enable the relevant function.



Button	Function
REC	Record manually
Search	To enter search mode
MEUN	To enter menu
Exit	To exit the current interface
ENTER	To confirm the choice or setup
Direction button	To move cursor in setup
ZOOM	To zoom in
PIP	No function temporarily
	To control playback. Play(Pause)/Next Frame/Speed Up/Stop/Previous Frame/Speed Down
	
Multi	To choose multi-screen display mode
Next	To switch the live image
SEQ	To go to sequence view mode
INFO	Get information about the device

2.3 Mouse Control

➤ Mouse control in Live Display& Playback interface

In the live display & playback interface, double click on any camera window to show the window in single screen mode; double click the window again to restore it to the previous size.


In the live display & playback interface, if the interfaces display in full screen, move the mouse to the bottom of the interface to pop up a tool bar. The tool bar will disappear automatically after you move the mouse away from it for some time; move the mouse to the right side of the interface to pop up a panel and the panel will disappear automatically after you move the mouse away from it.

➤ Mouse control in text-input

Move the mouse to the text-input box and then click the box. The input keyboard will pop up automatically.

Note: Mouse is the default tool for all operations unless an exception as indicated.

2.4 Text-input Instruction

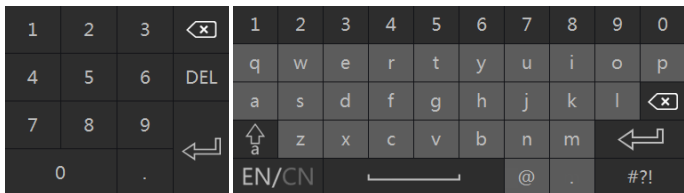

The system includes two input boxes. Refer to the above pictures. The left box is the number input box and the right box is the input box which provides inputs of numbers, letters and punctuation characters. The introductions of keys on the input boxes are shown below.




Button	Meaning	Button	Meaning
	Backspace key		Switch key of punctuation character
	Delete Key		Enter key
	Switch key between upper and lower letter		Space key
	Switch key of language		

2.5 Common Button Operation

Button	Meaning
	Click it to show the menu list.
	Click it to change the sequence of the list.
	Click it to change the camera displaying mode.
	Click it to close the current interface.
	Click it to go to the earliest date of camera recording.
	Click it to go to the latest date of camera recording.


3 Wizard & Main Interface

3.1 Startup Wizard

The disk icons will be shown on the top of the startup interface. You can view the number and status of each disk quickly and conveniently through these icons (: no disk; : unavailable disk; : RW available disk).

You can quickly configure the SMT by wizard setup to make the SMT work normally. You must configure the wizard if you start the SMT for the first time (or click “Skip” to cancel the wizard next time). Maybe different versions have different wizard steps. The following wizard steps are for reference only.

- ① Choose the language and locality as needed if it is the first time for you to use the wizard and then read the privacy statement, checkmark “I have read and agree” and click “OK”.
- ② ***Date and Time Configuration.*** The date and time of the system need to be set up if you use the wizard for the first time. Refer to the following figure. Set the time zone, system time, date format, time format and video format. The DST will be enabled by default if the time zone selected includes DST. Click “Next” to continue.

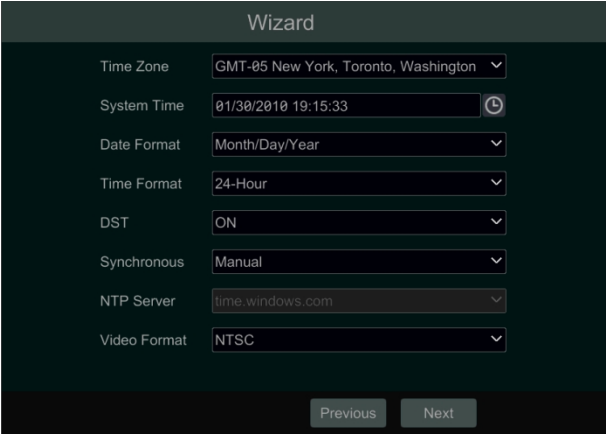


The screenshot shows a 'Wizard' configuration window with the following settings:

Setting	Value
Time Zone	GMT-05 New York, Toronto, Washington
System Time	01/30/2010 19:15:33
Date Format	Month/Day/Year
Time Format	24-Hour
DST	ON
Synchronous	Manual
NTP Server	time.windows.com
Video Format	NTSC

At the bottom, there are 'Previous' and 'Next' buttons.

- ③ ***System Login.*** Set your own password when you use the wizard for the first time (the default username of the system is *admin*); select the login username and enter the corresponding password next time.

Enable pattern lock and click “Edit” to set the pattern lock.

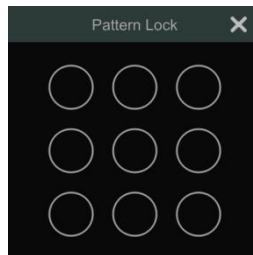

Click “Next” to set questions and answers for password security of admin. If you forget the password, please refer to Q4 in [Appendix A FAQ](#) for details.

Click “Next” to continue.

④ **Disk Settings.** You can view the disk number, disk capacity of the SMT and serial number, R&W status of the disk. Click “Format” to format the disk. Click “Next” to continue. Then click “Wizard Setup”.

⑤ **Network Settings.** Check “Obtain an IP address automatically” and “Obtain DNS automatically” to get the IP address and DNS automatically (the DHCP function of the router in the same LAN should also be enabled), or manually enter them. Enter the HTTP port, RTSP port and Server port (please see [14.1.2 Port Configuration](#) for details). Click “Next” to continue.

Wizard

Network Settings > Add Camera > Record Settings > QRCode

Ethernet Port 1 (Online)

☒ Obtain an IP address automatically

Address: 10 . 10 . 10 . 100

Subnet Mask: 255 . 255 . 240 . 0

Gateway: 10 . 10 . 0 . 1

☒ Obtain DNS automatically

Preferred DNS:

Alternate DNS:

HTTP Port: 80

HTTPS Port: 443

RTSP Port: 554

Server Port: 6036

Previous Next Cancel

Note:

➤ If you use the SMT with the PoE network ports, the online state of the internal Ethernet port will be shown on the interface. Refer to the picture below. Please refer to [14.1.1 TCP/IP Configuration](#) for detail introduction of the internal Ethernet port.

Wizard

Network Settings > Add Camera > Record Settings > QRCode

Ethernet Port 1 (Online)

☐ Obtain an IP address automatically

Address: 10 . 20 . 52 . 8

Subnet Mask: 255 . 255 . 0 . 0

Gateway: 10 . 20 . 0 . 1

☐ Obtain DNS automatically

Preferred DNS: 8 . 8 . 8 . 8

Alternate DNS:

HTTP Port: 80

HTTPS Port: 443

RTSP Port: 554



Server Port: 6036


Internal Ethernet Port (Online)


Address: 10 . 151 . 151 . 1


Subnet Mask: 255 . 255 . 255 . 0


Previous Next Cancel

⑥ **Add Camera.** Click “Refresh” to refresh the list of online IP cameras which are in the same local network with SMT and then click  to add the searched camera. Click “Add All” to add all the cameras in the list. Click  to delete the added camera. Click “Delete All” to delete all the added cameras.

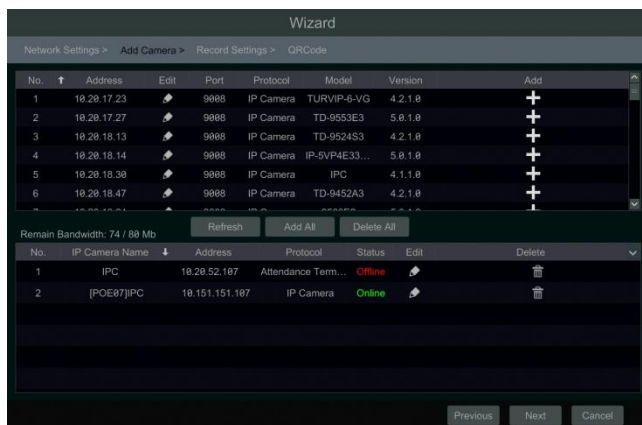

Click  to edit the searched IP camera as shown on the below left. Enter the new IP address, subnet mask, gateway, username and the password of the camera. Click “OK” to save the settings.

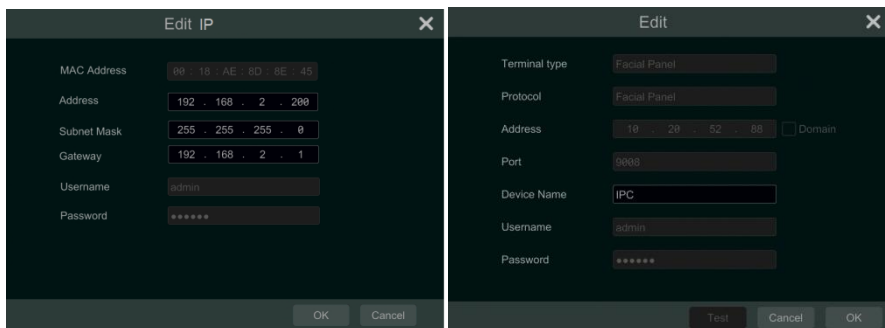

Click  to edit the added camera as shown on the above right. Enter the new camera name, IP address, port, username and the password of the camera. Then click “Test” to test the connection. Click “OK” to save the settings. You can change the device name only when the added device is online. Click “Next” to continue.

⑦ **Record Settings.** Two record modes are available: auto and manual.

Auto: Select one auto mode in the interface as shown below and then click the “Next” to save the settings. Click “Advanced” to self-define record mode. See [10.1.1 Mode Configuration](#) for details.

Wizard

Network Settings > Add Camera > Record Settings > QRCode

Mode: Auto

☐ Motion Record
☐ Sensor Record
☐ Motion Record+Sensor Record
☐ Always(24x7) Record+Motion Record
☐ Always(24x7) Record+Sensor Record
☐ Always(24x7) Record+Motion Record+Sensor Record
☒ Always(24x7) Record+Motion Record+Sensor Record+Analytics Record

Advanced

Previous Next Cancel

Manual: Set the “Sensor Record”, “Motion Record” and “Schedule Record” of each camera. Click “OK” to save the settings. See [10.1.1 Mode Configuration](#) for details.

Wizard

Network Settings > Add Camera > Record Settings > QRCode

Mode: Manual


Camera Name	Sensor Record	Motion Record	Analytics Record	Schedule Record
IP Camera1	<None>	<None>	<None>	<None>

Previous Next Cancel



⑧ **QRCode.** Enable the NAT function in the interface or set it in the network configuration after exiting the wizard (please refer to [14.1.8 NAT Configuration](#) for details). You can scan the QRCode through mobile client which is installed in the mobile phone or tablet PC to log in the mobile client instantly. Please refer to [15.1 Mobile Client Surveillance](#) for details. Click “OK” to save the settings.

3.2 Main Interface

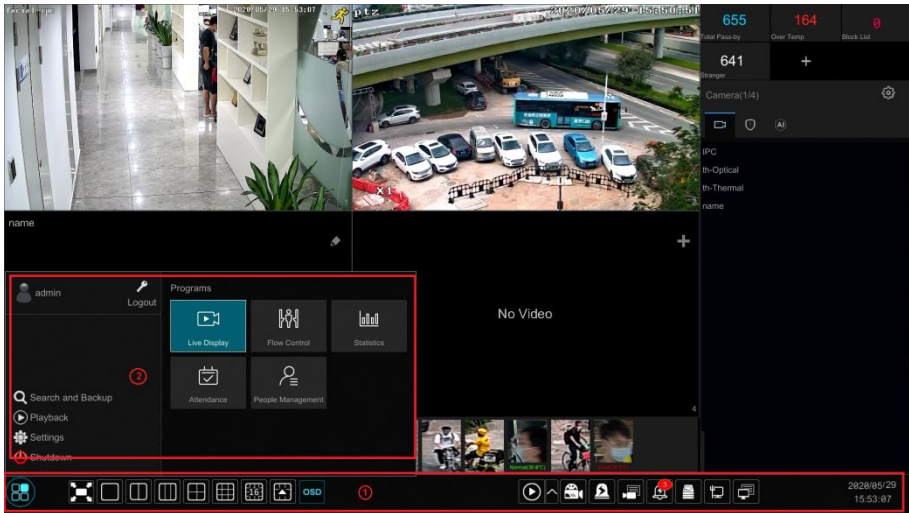3.2.1 Main Interface Introduction


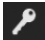












The buttons in area ① are introduced in the table below.

Button	Meaning
	Start button. Click it to pop up area ③.
	Full screen button. Click it to show full screen; click it again to exit the full screen.
	Screen mode button.
	Click it to enable OSD; click again to disable OSD.
	Click  to set the default playback time before starting instant playback (11.1 Instant Playback) or going to the playback interface for playback operations (11.2 Playback Interface Introduction); click  to go to the playback interface. For instance, if you choose “5 minutes ago” as the default playback time, you can playback the record from the past five minutes.
	Manual record button. Click it to enable/disable record.
	Manual alarm button. Click it to trigger or clear the alarm-out manually in the popup window.
	Record status button. Click it to view the record status.
	Alarm status button. Click it to view the alarm status.
	Disk status button. Click it to view the disk status.
	Network status button. Click it to view the network status.
	Information button. Click it to view system information.

Note: The buttons displayed in the live display interface may be different for different models. The above picture is for reference only. The real product shall prevail.

Introduction of area②:

Icon / Button	Meaning
 Admin	It shows the current login user.
 Logout	Click it to log out the system.
 Live Display	Click to return to the live display interface
 Attendance	Click it to go to the attendance configuration and search interface.
 Flow Control	Click it to set the people number available to enter and view the number of the people inside
 People Management	Click it to go to the people management interface, see 6 People Management for details.
 Statistics	Click to view the statistics of over temperature, face snapshot, non-mask, attendance and personnel records.
 Search and Backup	Click it to go to record search and backup interface, see 11.3 Record Search, Playback & Backup for details.
 Playback	Click it to go to playback interface (click  on the toolbar at the bottom of the live preview interface to set the default playback time), see 11.2 Playback Interface Introduction for details.
 Settings	Click it to pop up the setup panel, see 3.2.2 Setup Panel for details.
 Shutdown	Click it and then select “Logout”, “Reboot” or “Shutdown” in the popup window.


3.2.2 Setup Panel

Click Start→Settings to bring the setup panel as shown below.



The setup panel includes seven modules. Each module provides some function entries with links for convenient operation.

Here we take **Camera** module as an example. The **Camera** module provides convenient links such as “Add Camera”, “Edit Camera”, “Image Settings”, “OSD Settings” and “Motion Settings”. Click **Camera** to go to the camera management interface as shown below.

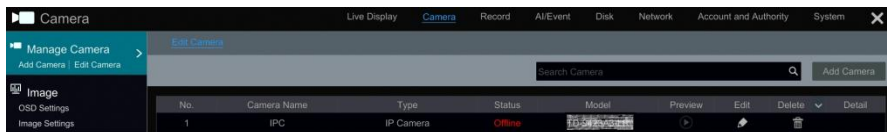

Click the main menus on the top of the camera management interface to go to corresponding interfaces. Refer to the picture below. For instance, you can go to system setup interface by clicking “System” tag.



3.2.3 Main Functions

➤ Camera

The module covers the functions such as **Camera Management** (see [Chapter 4 Camera Management](#) for details), **Image Settings** (see [5.2 Preview Image Configuration](#) for details) and **Motion** (see [12.4 Motion Configuration](#) for details)

➤ Record

The module covers the functions such as **Encode Parameters** and **Record Schedule** and so on. Please see [Chapter 10 Record & Disk Management](#) for details.

➤ AI/Event

The module covers the functions such as **Body Temperature Settings, Mask Settings, Flow Control, Event Notification, Combination Alarm, Exception, Sensor and Motion Alarm, Alarm Out Settings**, etc. Please see [Chapter 12 AI/Event Management](#) for details.

➤ Disk

The module covers the functions such as **Disk Management, Storage Mode** and **Disk Information** and so on. Please see [Chapter 10 Record & Disk Management](#) for details.

➤ Network

The module covers the functions such as **TCP/IP, DDNS, Port, E-mail** and **Network Status** and so on. Please see [14.1 Network Configuration](#) for details.

➤ Account and Authority

The module covers the functions such as **Account Management** (see [13.1 Account](#)

Management for details) and **Permission Management** (see 13.3 Permission Management for details) and so on.

➤ System


The module covers the functions such as **Basic Configuration** (see 14.2 Basic Configuration for details), **Device Information** (see 14.8 View System Information for details), **Log Information** (see 14.7 View Log for details) and **Configuration File Import & Export** (see 14.5 Backup and Restore for details) and so on.


4 Camera Management

4.1 Add/Edit Camera

4.1.1 Add Camera

The network of the SMT should be set before adding IP camera (see [14.1.1 TCP/IP Configuration](#) for details).


Refer to the pictures below. Click **Add Camera** in the setup panel or  in the top right corner of the preview window to pop up the “Add Camera” window as shown below. You can quickly add or add the IP camera manually.

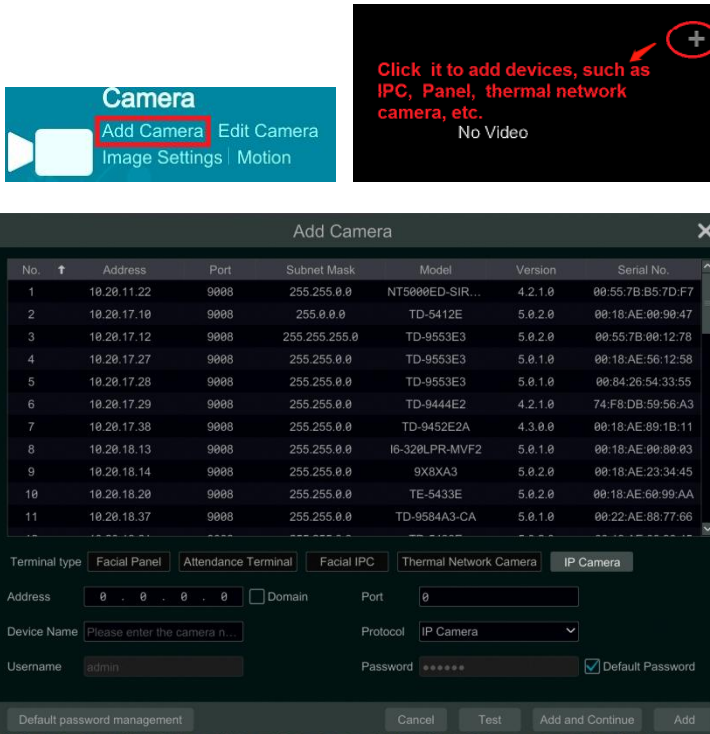


➤ Quickly Add

Select the cameras/panels and then click “Add” to add them. The system will automatically identify the terminal type. Of course, you can choose the terminal type manually for some panels or AI cameras. Then click “Add” to add cameras/panels. Uncheck “Default Password” and enter the username and password manually if they are not the default one.

Click “Default password management” to modify the default password of each cameras/panels.

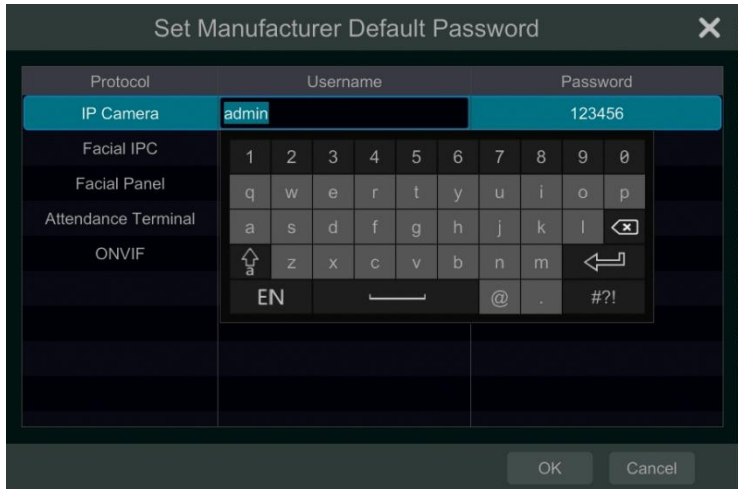

➤ Add Manually

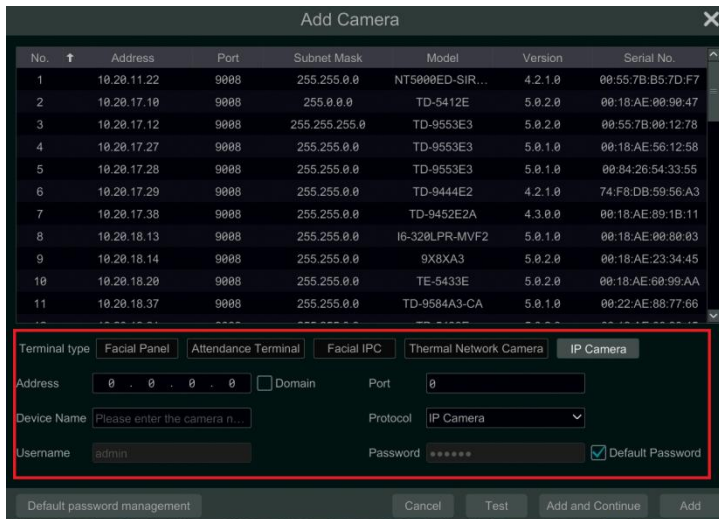

1. Select the terminal type according to the device you want to add.

IP Panel: all types except thermal network camera can be selectable. Facial panel or attendance terminal is suggested.






Facial IPC: The IPC which supports face recognition can choose this one.

Please select the terminal type according to the actual usage of the device you want to add.

2. Enter the IP address/domain, port, device name, username and password.

3. Click “Add” to add the camera/panel.

4.1.2 Edit Camera

Click “Edit Camera” in the setup panel to go to the interface as shown below. Click  to view the live image of the camera in the popup window. Click  to edit the camera (see *Add camera* in [3.1 Startup Wizard](#) for details). Click  to delete the camera; click  in the “Delete” header line and select “Delete All” to delete all added devices. For the device with line crossing counting function, you can click  to enter the flow control setting interface (See 8.1 Flow Control Settings for details).



Note:

If you use the SMT with the PoE network ports, the IP cameras/panels (with PoE function) which are directly connected to the PoE port of the SMT will be displayed automatically in the camera list. Refer to the picture below. The IP camera/panel which occupies the PoE resource has a prefix shown before its camera name. The prefix consists of PoE plus PoE port number. The IP camera which connects to the PoE port cannot be deleted from the camera list manually.


- The IP camera directly connected to the PoE port of the SMT through private protocol will be shown automatically in the camera list.
- One of the two conditions must be met if the IP camera/panel which is directly connected to the PoE port of the SMT through ONVIF protocol should be shown automatically in the camera list.
 - ✓ The IP camera/panel which is directly connected to the PoE port is in the same network segment with the internal Ethernet port.
 - ✓ The DHCP (obtain an IP address automatically) of the IP camera/panel which is directly connected to the PoE port is enabled.

If the IP camera which is connected to the PoE port cannot be displayed automatically in the camera list, please refer to Q6 in [Appendix A FAQ](#) for details.

5 Live View Introduction



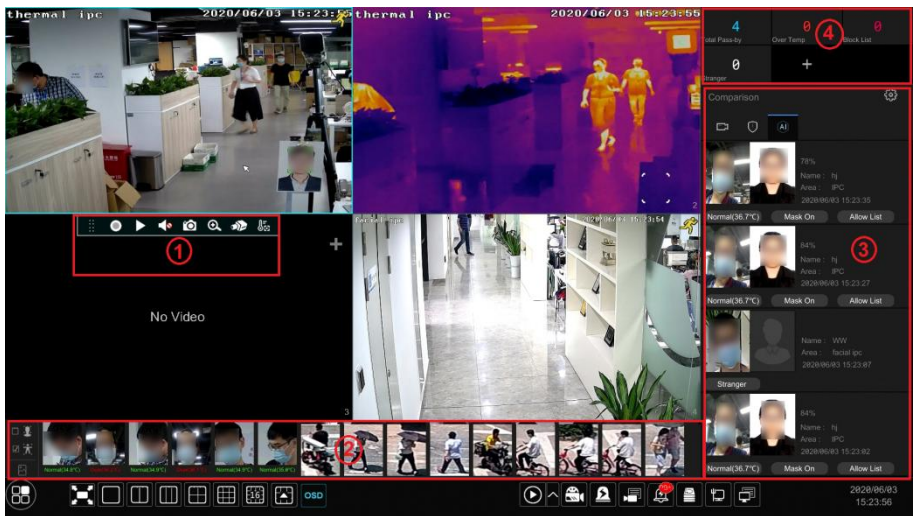


5.1 Live View Interface Introduction

You should add IP cameras/panels first after logging onto the system (see [4.1.1 Add Camera](#) for details). Refer to the interface as shown below, drag one camera in the preview window to another window for camera window exchanging. Click **OSD** button and then you can view the record symbols. The record symbols with different colors in the live preview window refer to different record types when recording: green stands for manual record, red stands for sensor based record, yellow stands for motion based record, blue stands for schedule record and cyan stands for intelligence record.




Click the preview window to show the tool bar as shown in area ①; right click on the preview window to show the menu list. The tool bar and menu list are introduced in the table below.


Button	Menu List	Meaning
	--	Move tool. Click it to move the toolbar anywhere.
	Manually Record On	Click it to start recording.
	Instant Playback	Click to playback the record; click “Instant Playback” to select or self-define the instant playback time. See 11.1 Instant Playback for details.
	Enable Audio	Click it to enable audio. You can listen to the camera audio by enabling audio.
--	Original Proportions/ Overspread window	Click it to select the display proportion of the window.

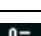Button	Menu List	Meaning
	Snapshot	Click it to pop up the snap window. Click “Save” in the window to save the image. Click “Export” to export the image.
	Zoom In	Click it to go to single channel amplification interface.
	--	Click it to go to image adjustment interface. Refer to 5.2.3 Image Adjustment for details.
	Manually Open Door	Click it to open the door manually (only available for IP panels)
	Smart Temperature Screening	Click it to enter the smart temperature screening mode (only available for thermal network cameras)
--	Camera Info	Click it to view the camera information.


The instructions of Area ②




If it is enabled, only face pictures can be viewed. If the thermal camera or temperature measurement panel is added, the temperature and temperature status will be shown under the picture.



If it is enabled, only the human body pictures can be viewed. (The human body detection must be enabled in the added camera.)

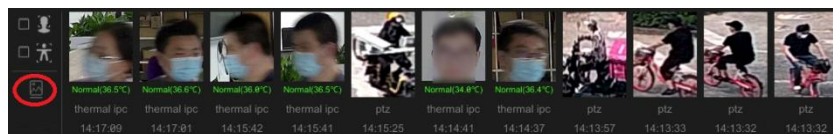

Click it to view the snapshot camera/panel name and snapshot time of the image. Click the captured image in area ② to view the details.

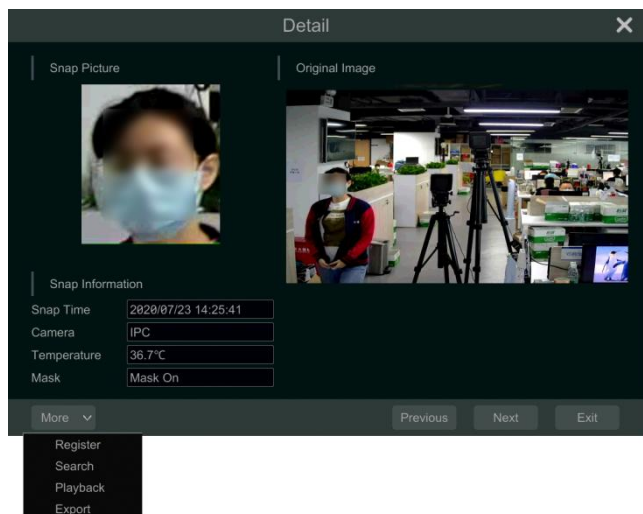


In the above interface, you can view the detailed information of the captured image, such as snapshot time, temperature, mask status, etc. A dropdown list will be displayed by clicking “More”. Click “Register” to add the face picture to the face database; click “Search” to quickly enter the smart search interface; click “Playback” to quickly enter the playback interface; click “Export” to export the face image.

Introduction of area③


➤ Camera list


Click  to view the camera list.

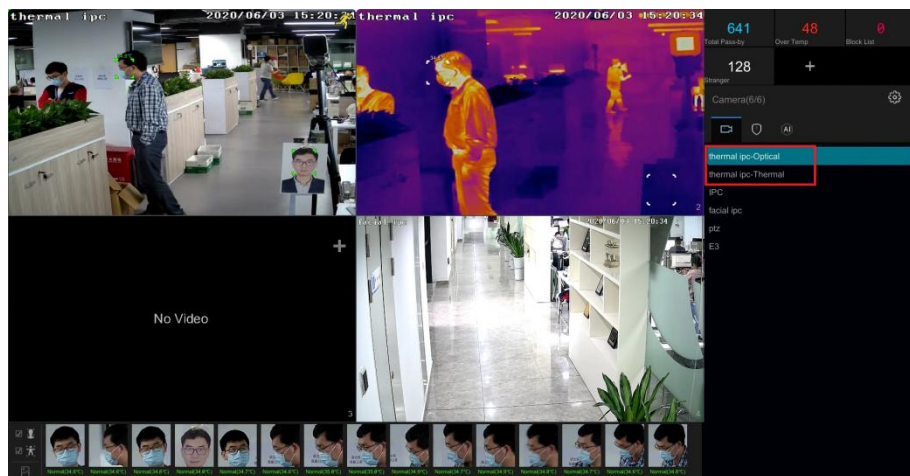

For the thermal network camera, you can choose to view its thermal image or optical image as shown below.

➤ Comparison Result View


Click  to view face match results as shown below, including similarity, personal information, mask status, body temperature, the snapshot camera, etc.

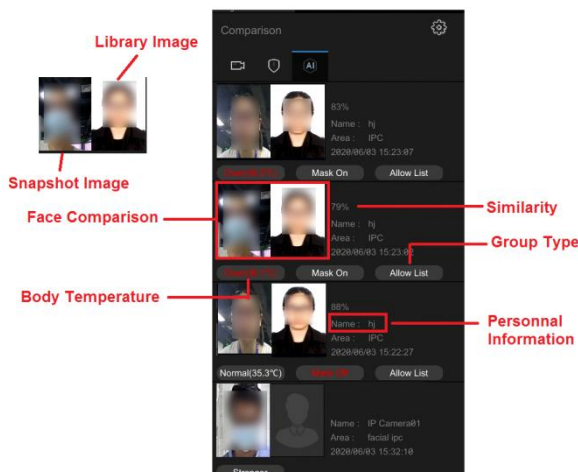

Note:

- Only the face match result of the camera/panel can be displayed here. Please add face pictures to the face database first (See [6 People Management](#) for details), or no result will be shown here.
- To show the mask status temperature here, the following requirements shall be satisfied.
 - The mask detection must be supported by the IP cameras/panels and this function shall be enabled in the IP cameras/panels.
 - The non-mask detection alarm of the SMT shall be enabled in advance (Click Start→Settings→AI/Event→Mask Settings to go to the mask settings interface and then enable it. See [12.2 Mask Settings](#) for details).
- The added IP cameras/panels must support temperature measurement, or the body temperature will not be shown here. Please click Start→Settings→AI/Event→Body Temperature Settings to go to the body temperature settings interface and then set the temperature threshold. See [12.1 Body Temperature Settings](#) for details).


Click the picture in the comparison list to view the detail information of face comparison.

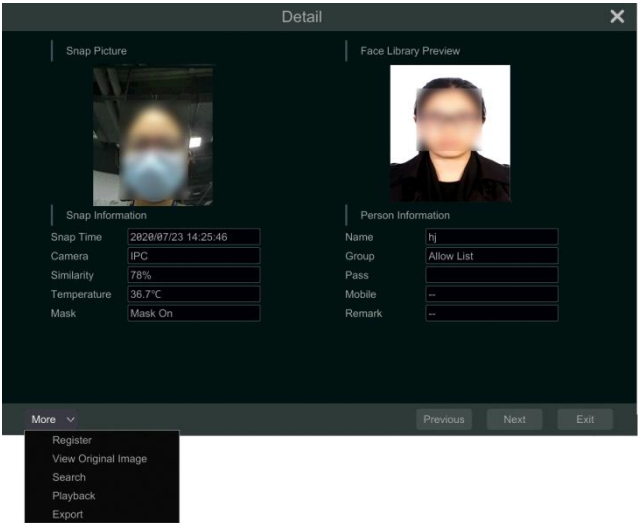


In the above interface, you can view the captured image, the library image, the snapshot information and the person information.


Click “More” to view more menus. Click “Register” to add the face picture to the face database; click “View Original Image” to view the original image; click “Search” to quickly enter the smart search interface; click “Playback” to quickly enter the playback interface; click “Export” to export the face image.

➤ **Real-time Warning**

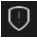Click  to view the real-time warning records as shown below.

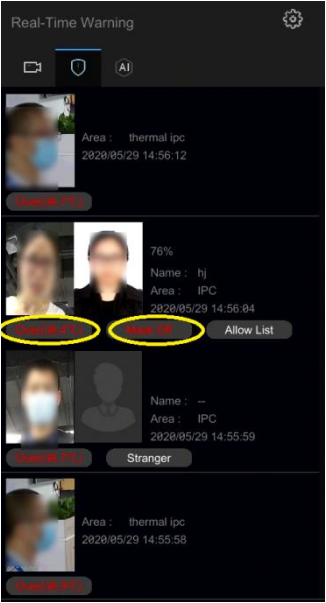


All exception events will be shown under this tab, such as mask off, over temperature or blacklist.


Click  to choose target box or rule line overlaid on the live image.





Introduction of area④

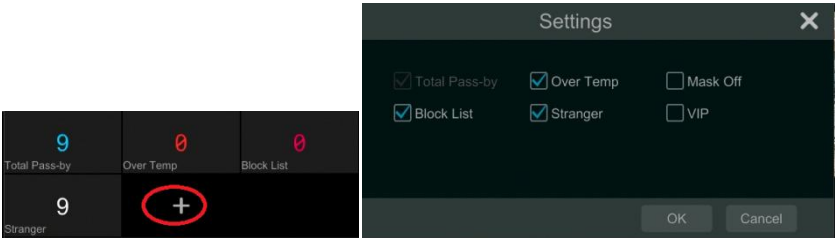In the live display interface, you can directly view the real-time statistical information as shown below left.




Click  to select more of the real-time statistics.

➤ Single Channel Amplification


Right click on the preview window and select “Zoom in” to go to the following interface. Press and drag the blue box to select the zoom in area. Click  /  to zoom in/out the image. Click the camera selection box to select other cameras for amplification. Click “Back” to return to the live preview interface.




5.1.1 Smart Temperature Screening View

Select the thermal camera window and then click on it to choose  or right click to choose “Smart Temperature Screening” to go to the following interface.



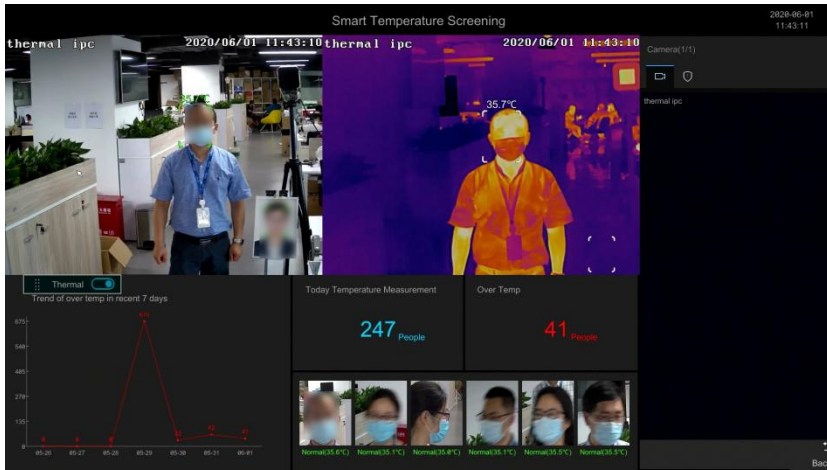

In this interface, you can view the visible light image and thermal image simultaneously. Additionally, the body temperature, 7-day over temperature statistics, today temperature measurement and over temperature counts, the real-time captured face pictures can be viewed.

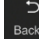Disable “Thermal” to view the optical image only. Click  to return to the live view interface.

5.1.2 Corridor Pattern

Select corridor pattern in display mode. You can change the direction of the video image by using this function. Please refer to User Manual of relevant camera.



: Click to view two-screen corridor pattern.




: Click to view three-screen corridor pattern.

5.2 Preview Image Configuration


5.2.1 OSD Settings

Click Start→Settings→Camera→Image→OSD Settings to go to the interface as shown below.

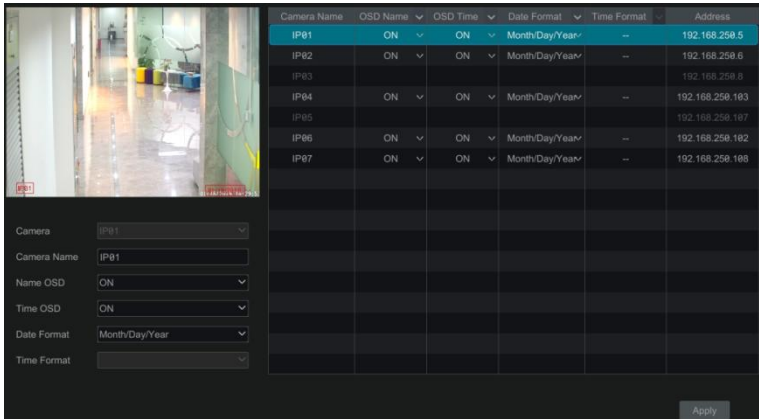


Select the camera, enter the camera name (or double click the camera name in the camera list to change the camera name), enable or disable the name and time OSDs (if enabled, drag the red name and time OSDs directly in the image view area to change the OSDs' display position) and select the date and time formats. Click “Apply” to save the settings.

5.2.2 Image Settings

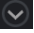
Click Start→Settings→Camera→Image→Image Settings to go to the following interface. Select the camera and then set the brightness, contrast, saturation and hue of the camera. Click the “Advanced” button or  in the camera list on the right side of the interface to pop up the “Image Adjust” interface and then set the relevant setting items. Please refer to [5.2.3 Image Adjustment](#) for detailed introductions of these items.

You can click “Default” to restore the image settings to the default factory settings.

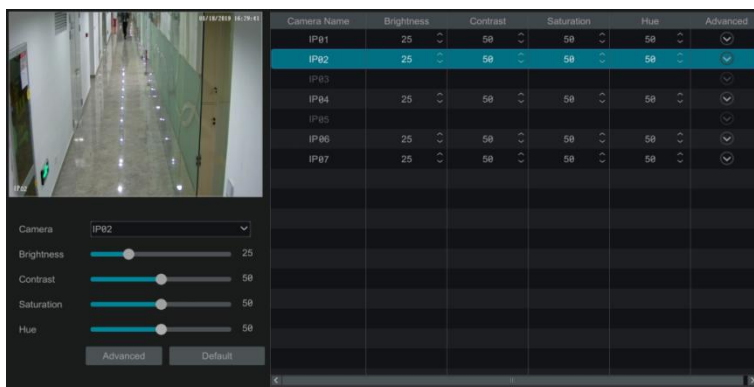

5.2.3 Image Adjustment

Go to live preview interface and then click  button on the tool bar under the camera window to go to the image adjustment interface.

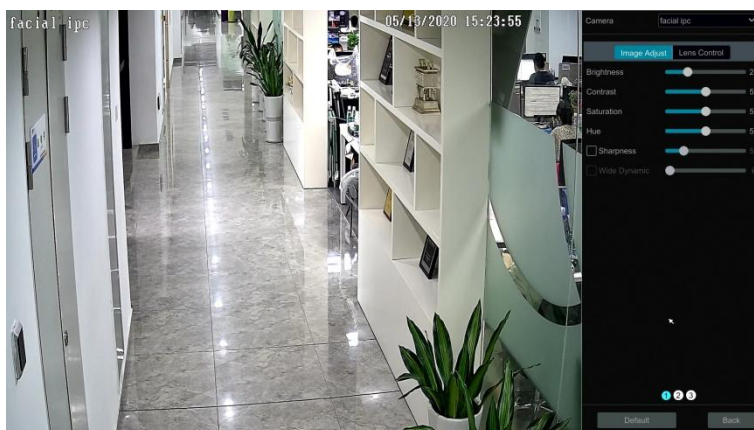

➤ Image Adjustment

Select the camera and then click “Image Adjustment” to go to image adjustment tab. Refer to the above picture. Drag the slider to set the camera’s brightness, contrast, saturation and hue value. Check sharpen, wide dynamic and denoise and then drag the slider to set the value. Click “Default” to set these parameters to default values.


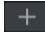
The introductions of these parameters are as follows:


Parameter	Meaning
Brightness	It is the brightness level of the camera’s image.
Contrast	It is the color difference between the brightest and darkest parts.
Saturation	It is the degree of color purity. The color is purer, the image is brighter.

Parameter	Meaning
Hue	It relates to the total color degree of the image.
Sharpen	It relates to the resolution level of the image plane and the sharpness level of the image edge.
Wide Dynamic	The wide dynamic range (WDR) function helps the camera provide clear images even under back light circumstances. When there are both very bright and very dark areas simultaneously in the field of view, WDR balances the brightness level of the whole image and provide clear images with details.
Denoise	Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.
White Balance	Adjust the color temperature according to the environment automatically.
BLC	HLC: lowers the brightness of the entire image by suppressing the brightness of the image's bright area and reducing the size of the halo area. BLC: If enabled, the auto exposure will activate according to the scene so that the object of the image in the darkest area will be seen clearly.
Corridor Pattern	0°, 90°, 180° or 270° can be selected. (Only some cameras support this pattern)
Image Mirror	Turn the current video image horizontally.
Image Flip	Turn the current video image vertically.
High FPS Mode	High frame rate mode, if is it enabled, the frame rate of the camera's main stream can be set to 1080P/720P @60fps/50fps. (Only some cameras support this mode)

The above image parameter settings are for reference only. The image parameter settings of the different manufacturers' cameras may be different.

➤ Lens Control

Select the camera and then click “Lens Control” to go to lens control tab. Click  or  to adjust the zoom and focus parameters of the camera's lens. Click “Save” to save the settings.

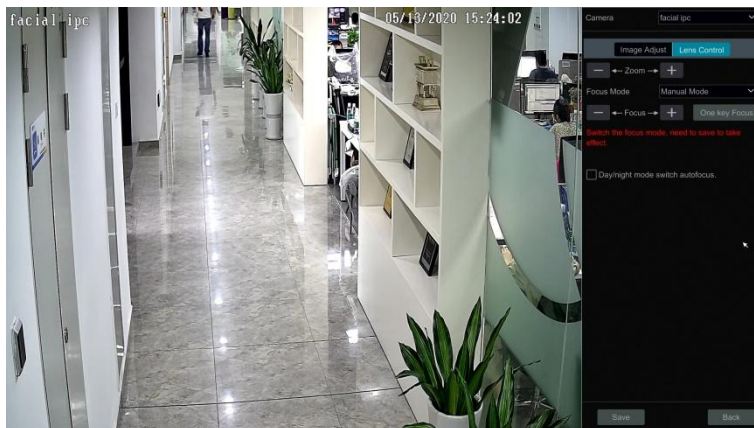

The introductions of these parameters and buttons are as follows.


Button/Parameter	Meaning
	Click / to zoom in/out the image.
Focus Mode	If manual mode is selected, focus button & “One Key Focus” & “Day/night mode switch autofocus” will be available; if auto mode is selected, the time interval setup will be available.
	Click / to increase/decrease the focal length.
	Click it to focus instantly.
Day/night mode switch autofocus	If checked, the lens will focus automatically when the camera is switching day/night mode.
Time Interval	It is the time interval when camera lens is auto-focusing. The interval can be set in the drop-down list.

Note: if the lens of the camera connected to the SMT is fixed, the lens control function is unavailable.


6 People Management


Click Start→People Management to go to the people management interface.

The first group is mainly used for attendance management. Please enter the company name, department and personal position as needed.

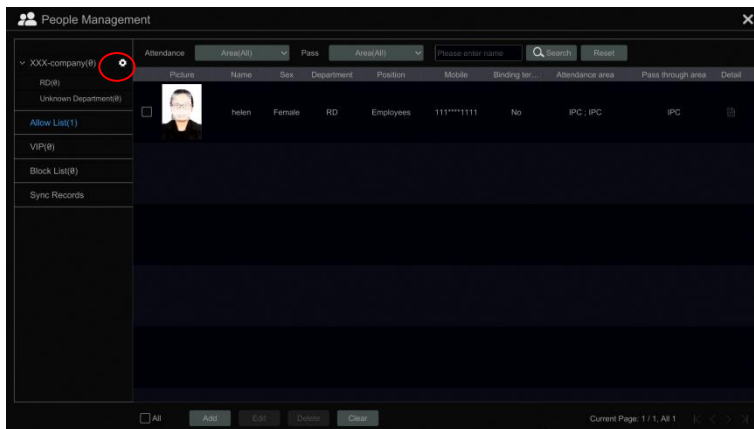




- **Add department and position**

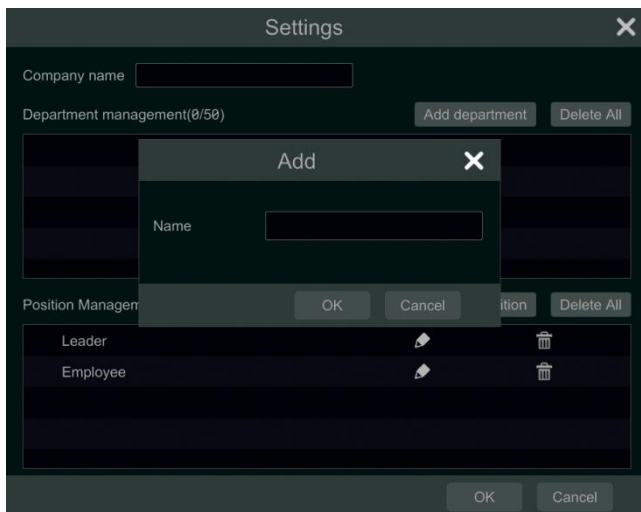Click  to pop up the following window.




In this interface, you can set the company name, add department and position.

Click “Add department” to add the department name. Click  to modify the name.

Click “Add Position” to add the position name. Click  to modify the name. Click  to delete the corresponding department or position. Click “Delete All” to delete all department or position. A maximum of 50 departments and 20 positions can be added. Then you can add people for each department.

● Add people information for each group

Allow list, VIP and block list are fixed groups. Their group name cannot be changed. Choose the group you want to add the people information. Then click “Add” to add the face picture and the relevant information.

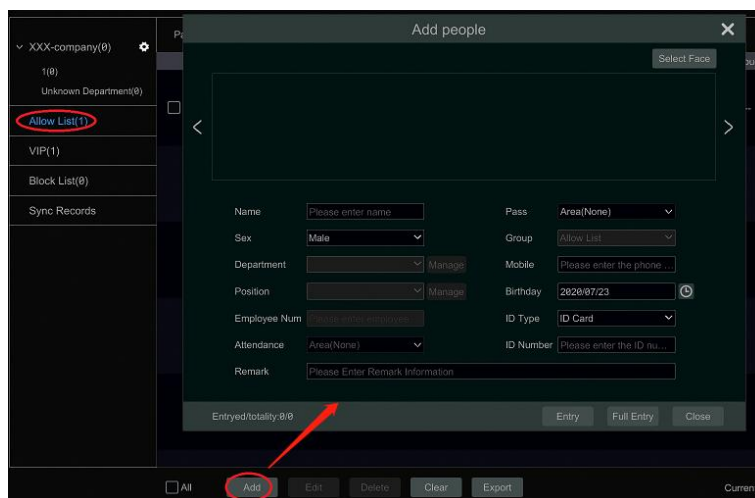


Click “Select face” to choose a face from snapshot gallery or external faces. Fill out other information and then click “Entry”. Note that different group will need to fill out different personal information.

Attendance area: You can choose the device whose terminal/protocol type is facial panel or attendance terminal. This area needs to be selected when you add the personal information for the first group (xxx-company), or the attendance records cannot be searched.


Pass area: You can choose the device whose terminal/protocol type is attendance terminal.

To add a face picture from snapshot gallery:

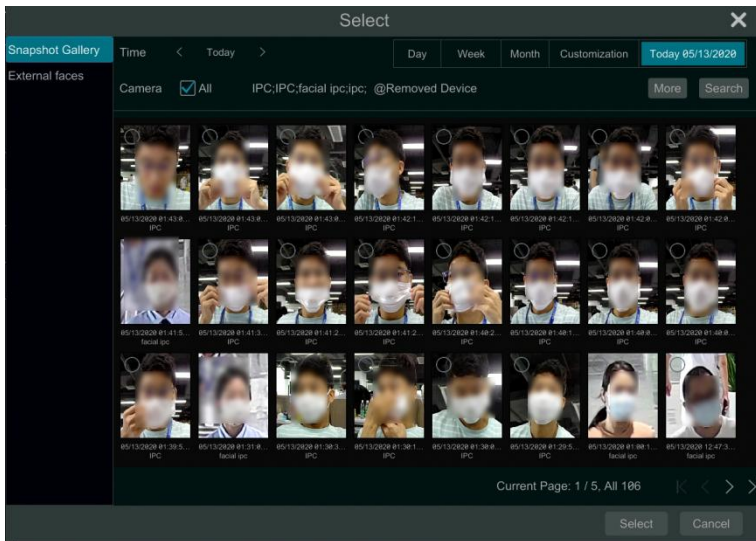

1. Select time and date and then click “More” to choose cameras.
2. Click “Search” to search the captured face pictures.
3. Select a picture and then click “Select” to add this face picture.

To add a face picture from external faces

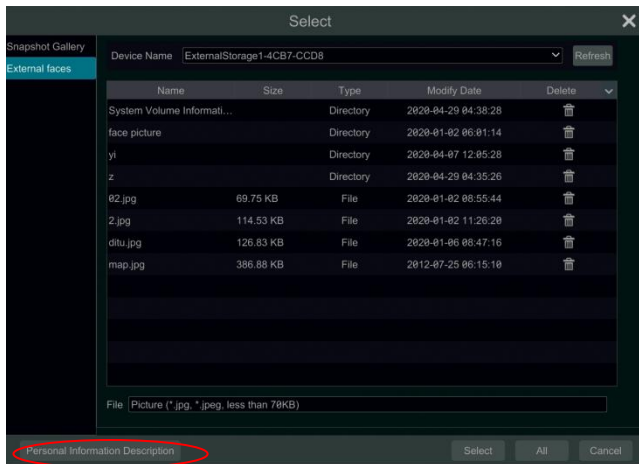

1. Insert your mobile storage device into the SMT.
2. Select “External faces”.
3. Select the desired face picture and then click “Select” to add this face picture.

Multiple face pictures can be added from “External faces” too. Put pictures and the personal information file (.cvs/.txt) under the same directory of your mobile storage device. Select this directory and click “Full Entry” to add.



Click “Export” in the people management interface, select a group and then export a template file (.cvs). Edit the personal information in this template file or use Excel/WPS to edit the personal information according to the following sample and then save it as a CSV/TXT file.

	A	B	C	D	E	F	G	H
1	(01)Name	(02)Sex	(03)BirthDay	(04)ID Type	(05)ID Number	(08)Mobile	(12)Image name	(13)No.
2	Helen	1	2009/1/1	ID Card	12121211212	137xxxxxxx	Helen.jpg	120
3	LT	0	2009/1/1	ID Card	334455662	136xxxxxxx	LT.jpg	119

You can click “Personal Information Description” to view the detailed edition rules.

● Personal information Search



After you add the people information, you can enter the name of the person to search his/her information. You can also search the person by selecting attendance area and pass-through area. Click “Reset” to reset the search content.

If you want to change the information of the person, you can select it and then click “Edit” to change his/her information.

● Export Personal Information

After you add the personal information, you can export them from different group in the people management interface. Click “Export” and then a group selection box will pop up. Choose the group you want to export and then click “Next” to choose the export location. The personal information file (.cvs) and image (.jpg) will be exported simultaneously. After the personal information is exported, you can edit them and then directly use the modified file and image when importing next time. Additionally, you can directly export the template file to quickly edit personal information before you want import images and their information from the “External faces” interface in bulk.

● Sync Records

XXX-company(9)

RD(9)

Unknown Department(8)

Allow List(2)

VIP(8)

Block List(8)

Sync Records

Camera

All




Group


All

Please enter name

Search

Reset

No.	Picture	Name	Sex	Group	Department	Creation time	Camera	Terminal type	Time	Status
1		helen	Female	Allow List	RD	05/10/2020 10:42:56 ...	attendance te ...	Attendance T ...	05/11/2020 03:11:35 ...	Success
2		123	Male	Allow List	--	05/13/2020 04:21:16 ...	attendance te ...	Attendance T ...	05/13/2020 04:21:17 ...	Failure
3		helen	Female	Allow List	RD	05/10/2020 10:42:56 ...	facial ipc	Facial IPC	05/10/2020 10:43:12 ...	Success

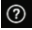In this interface, you can view whether the added picture is synchronized to the face database of the camera/panel. Please click  to view the detailed synchronization rules.

7 Attendance Management

7.1 Attendance Rule Settings

Click Start→Attendance→Rule Settings to go to the rule setting interface.

Attendance

Search

Rule Settings

Leave and Business Trip

Start Working

09:00

⌚

Later than

5

minute(s) is "late"

End Working

18:00

⌚

Earlier than

5

minute(s) is "leave early"

Work calendar type:

☒ Week

☐ By Month

☐ Customization

Please select holiday

Monday

Tuesday

Wednesday

Thursday

Friday

Saturday

Sunday

Special date settings:

<

2020-05

>

Sun	Mon	Tues	Wed	Thur	Fri	Sat
					1 Work	2 Holiday
3 Holiday	4 Work	5 Work	6 Work	7 Work	8 Work	9 Holiday
10 Holiday	11 Work	12 Work	13 (Today) Work	14 Work	15 Work	16 Holiday
17 Holiday	18 Work	19 Work	20 Work	21 Work	22 Work	23 Holiday
24 Holiday	25 Work	26 Work	27 Work	28 Work	29 Work	30 Holiday
31 Holiday						

☒ Working Day

☐ Holiday

☐ Special date

Save


1. Set the working start and end time, “late” and “leave early” rules.
2. Select work calendar type and set the working day and holiday as needed.

Special date settings (customization):


Click a date on the calendar to switch between working day and holiday. Then click “Save” to save the settings.

7.2 Leave and Business Trip Settings

Click Start→Attendance→Leave and Business Trip to go to the following interface.
Click “Add” to add the leave and business trip record.

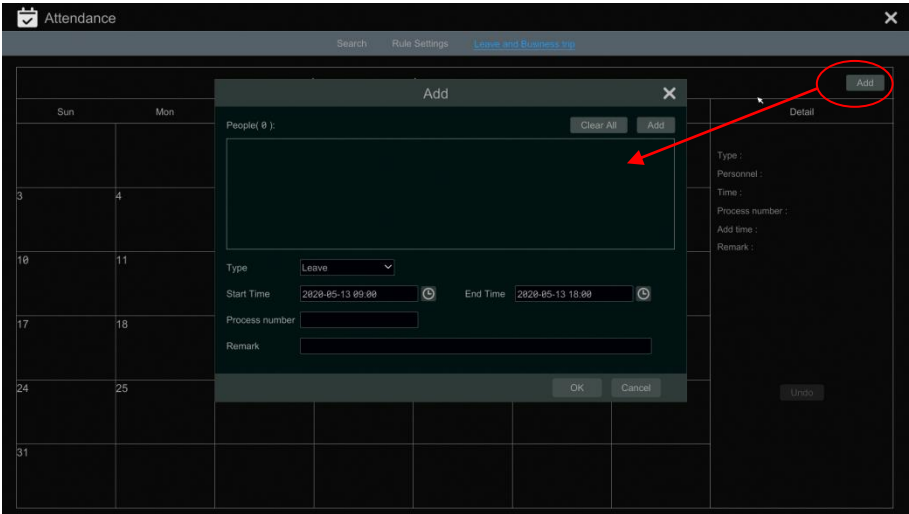

In the “Add” interface, click “Add” to add the person who wants to ask for leave or go on a business trip.

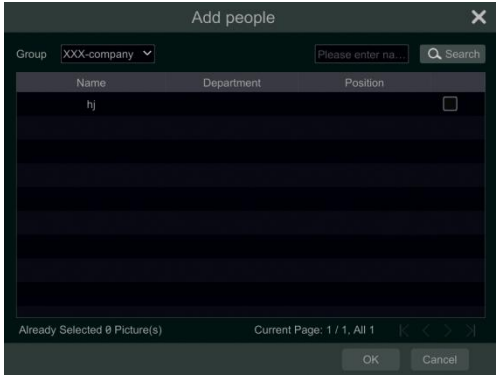

The system will automatically display the people information of the company group. Of course, you can also search the person by entering his/her name. Then check the desired person and click “OK”.


Add

People(1):

Clear All

Add

Online



Hidden

Type

Leave

Start Time

2020-05-13 09:00

End Time

2020-05-13 18:00

Process number

Remark

OK

Cancel

You can check multiple people at a time as needed.
Select the type, start and end time. Then enter the process number and remark as needed.
Finally, click “OK” to add the leave or business trip information of this person.

Attendance

Search

Rule Settings

Leave and Business Trip

<

2020-05

>


Add

Sun	Mon	Tues	Wed	Thur	Fri	Sat	Detail
					1	2	Type : Leave Personnel : 2 Time : 2020-05-13 09:00 - 2020-05-13 18:00 Process number : Add time : 05/13/2020 05:13:18 AM Remark :
3	4	5	6	7	8	9	
10	11	12	13 (Today) Leave : 2 Leave : 2	14	15	16	
17	18	19	20	21	22	23	
24	25	26	27	28	29	30	<div>Undo</div>
31							

Then the leave/business trip information will be shown on the calendar. Click the leave or business trip tag to view its detailed information on the right. Click “Undo” to cancel this leave or business trip information, and then the tag will turn grey.


7.3 Attendance Search


Click Start→Attendance→Search to go to the following interface.

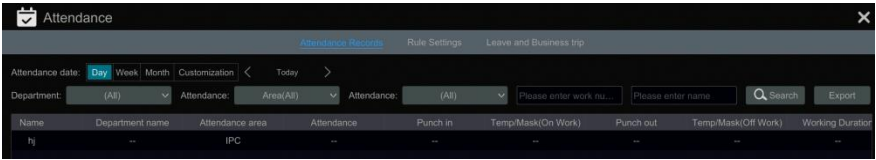

1. Select the attendance date or period as needed. If you search the attendance by day, you can view the temperature/mask status records when punching in /out on that day.
2. Select the department, attendance area and attendance type, or enter the person's name. Then click "Search".

The attendance file (.cvs) can be exported. "Attendance Report" or "Attendance Report and Snap Picture" can be export for the results searched by day. If there are too many contents you need to export, you can choose "Run In Background" and view its backup progress by clicking the icon in the lower right corner.

Select a person and then click  to view the detailed attendance information of the person.

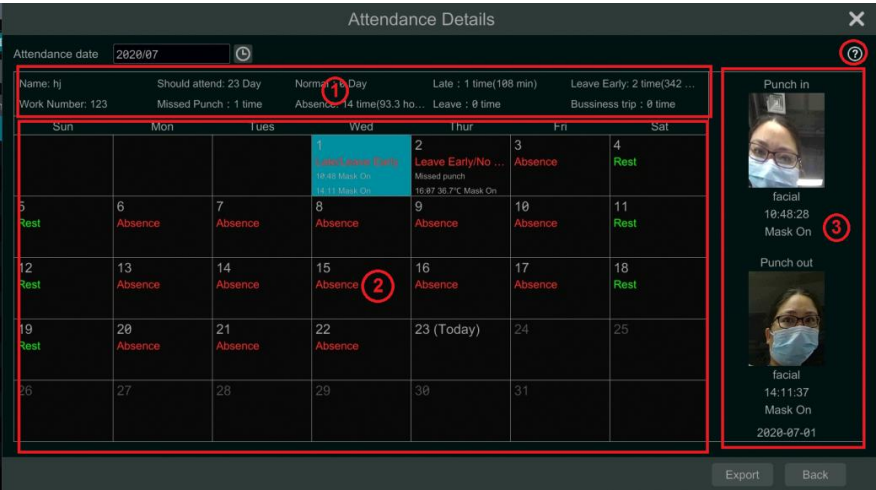


In the above interface, you can see the detailed attendance information of the selected person.

Attendance date: click to select the month you want to view.

Area①: You can view the attendance statistical information.

Area②: You can view the attendance information of each day.

Area③: You can view the captured picture of the person punching in/out on a specified day.

Click  to view the attendance rule.

Click "Export" to export the specified person's attendance information of the searched month. "Attendance Report" or "Attendance Report and Snap Picture" can be export. If there are too many contents you need to export, you can choose "Run In Background" and view its backup progress by clicking the icon in the lower right corner.


Click "Back" to return to the attendance search interface.

8 Flow Control

Before you use this function, please add the AI camera with line crossing counting function first. (Click Start→Camera→Add camera to add a camera)

8.1 Flow Control Settings

Click Start→AI/Event→Flow Control to go to the following interface.

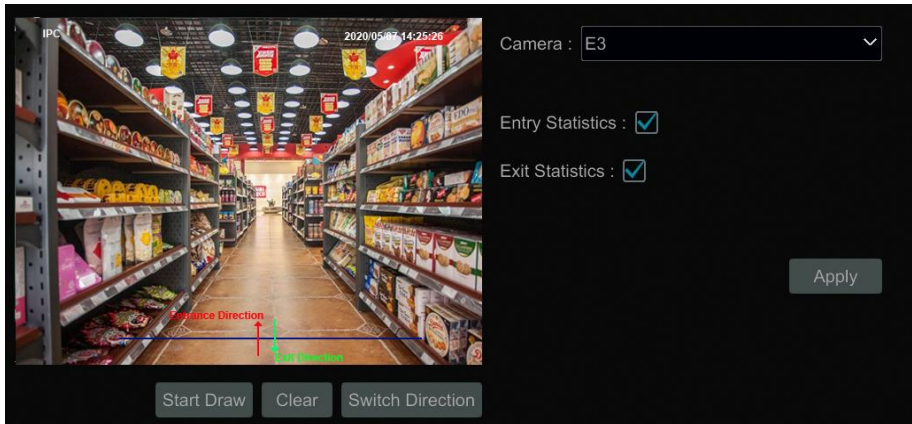


- ① Select the camera that supports target counting (or line crossing people counting).
- ② Select entry or exit statistics as needed.
- ③ Click “Start Draw” and then drag the mouse on the small window to draw the crossing line. Click “Clear” to clear the current line. Click “Stop Draw” to stop drawing. Click “Switch Direction” to switch the entrance and exit direction.
- ④ Click “Apply” to save the settings.

8.2 Flow Control View

Click Start→Flow Control to go to the following interface.

In this interface, you can view the number of the people inside and the number of the available people. If the number of the people inside exceeds the available number, the icon will turn red and it will tell the customers/visitors to wait.


Right click in the flow control interface to return to the live display interface.

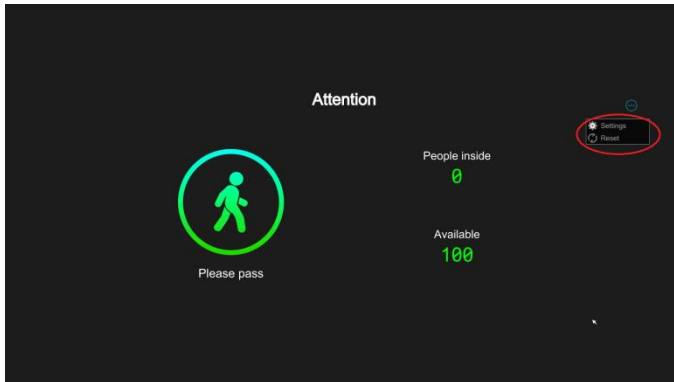

Click “Reset” and then the number of the people inside will be cleared.

Click “Settings” to set the number of people allowed to stay and enable auto reset.

Please set the available number and auto reset as needed. If the auto reset is enabled, the system will automatically reset the number of the people inside at the set time every day.

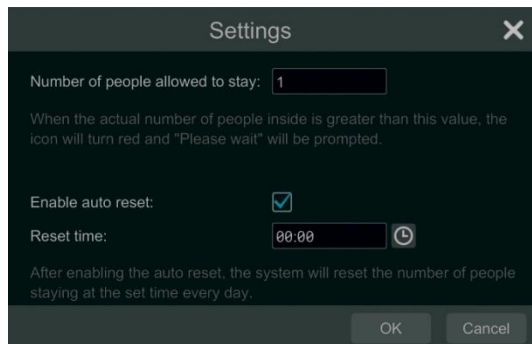


Click Start→ Statistics. This will bring you to the statistics interface. You can view the 24-hour/7-day statistics of the people entry and exiting.


9 Statistics

9.1 Real-Time Statistics


In the live display interface, click Start→ Statistics to go to the following interface.

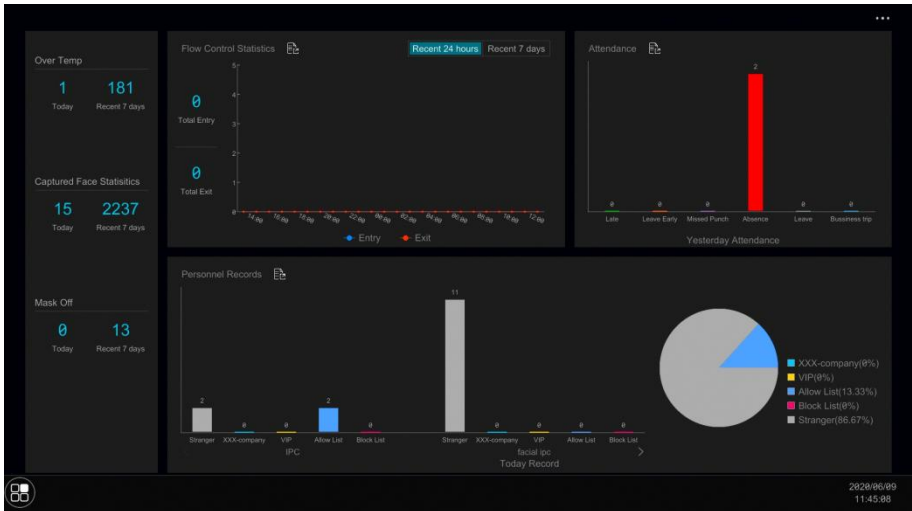


In the above interface, you can view the bar graph and pie chart of the statistical information. Various statistical information can be viewed, such as over temperature counts, captured face counts, non-mask counts, people entry& exiting counts, attendance statistics and personnel records.

The statistical information of the people entry and exiting, attendance and personnel records can be exported by clicking .

9.2 Historical Statistics

Click  to enter the historical statistics interface.

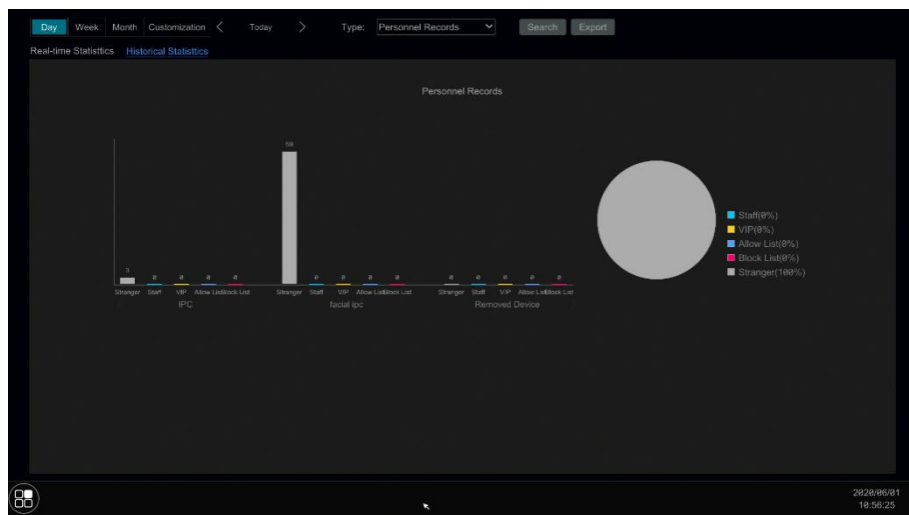

Select the searched time period.

Select the statistical type. Six options: flow control statistics, attendance, personnel records, over temp, captured face statistics and mask off.

Click “Search” to view the statistics during the specified time.

Click “Export” to export the statistical data.

Click the “Real-time Statistics” tab to return to the statistics interface.


Right click on the interface to return to the live display interface.

10 Record& Disk Management

10.1 Record Configuration

10.1.1 Mode Configuration

Please format the HDDs before recording (refer to [10.5.1 Disk Management](#) for details). Click Start→Settings→Record→Mode Settings to go to the mode settings interface. You can set the record time under the “Manual Record Settings” and then click “Apply” to save the settings. There are two record modes: auto mode and manual mode.

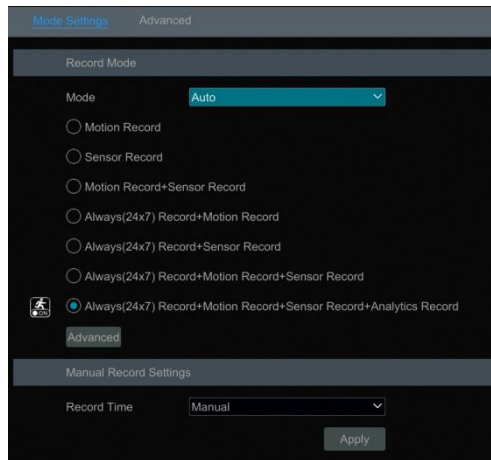

➤ Auto Mode

Motion Record: Motion alarm record will be enabled when motion alarm happens.

Sensor Record: Sensor alarm record will be enabled when sensor alarm happens.

Motion Record + Sensor Record: Motion/sensor alarm record will be enabled when motion/sensor alarm happens.


Always(24 x7) Record + Motion Record: Normal record is enabled all the time; motion alarm record will be started when motion alarm happens.

Always(24 x7) Record + Sensor Record: Normal record is enabled all the time; sensor alarm record will be started when sensor alarm happens.


Always(24 x7) Record + Motion Record + Sensor Record: Normal record is enabled all the time; motion/sensor alarm record will be enabled when motion/sensor alarm happens.

Always(24 x7) Record + Motion Record + Sensor Record + Analytics Record: Normal record is enabled all the time; analytics record will be enabled when analytics alarm happens.

You can add more auto modes on analytics record. Click “Advanced” to pop up a window as shown below. Check the modes in the window and then click “Add” to show the modes in the record mode list (in the window, the checked modes can be shown in the record mode list while the unchecked modes cannot; you shall check “**Analytics Record**”).

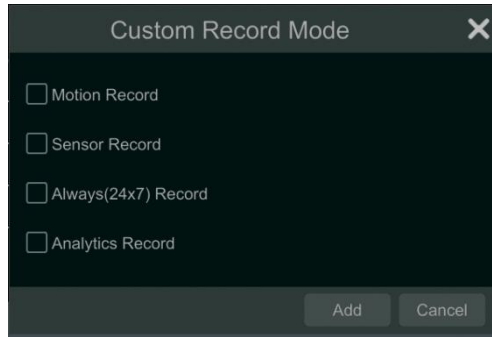

Select one auto mode to pop up the corresponding window. Set the encode, GOP, resolution, FPS, bitrate type, quality, max bitrate and audio of each camera and then click “OK” to save the settings. Please adjust the parameters according to the actual condition.

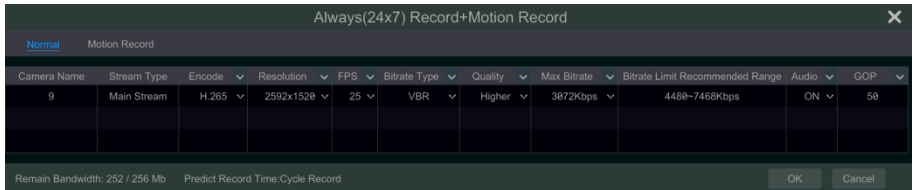

Video Encode: the available options will be H.265 and H.264 if the connected IP camera supports H.265, or the option will be H.264 only.

Resolution: the higher the resolution is, the clearer the image is.

FPS: the higher the frame rate is, the more fluency the video is. However, more storage room will be taken up.

Bitrate Type: CBR and VBR are optional. CBR means that no matter how much change is seen in the video scene, the compression bitrate will be kept constant. VBR means that the compression bitrate will be adjusted according scene changes. For example, for scenes that do not have much movement, the bitrate will be kept at a lower value. This will help to optimize the network bandwidth.

Quality: When VBR is selected, you need to choose image quality. The higher the image quality you choose, the more bitrate will be required.

Max Bitrate: 32Kbps ~10240Kbps are optional.

GOP: group of pictures.

➤ Manual Mode

If the manual mode is selected, you need to set the encode parameters and record schedules of each camera. See [10.2 Encode Parameters Settings](#) and [10.3 Schedule Settings](#) for details.

10.1.2 Advanced Configuration

Click Start→Settings→Record→Advanced to go to the following interface. Enable or disable cycle record (cycle record: the earliest record data will be replaced by the latest when the disks are full). Choose the record stream. Set the pre-alarm record time, post-alarm record time and expiration time of each camera and then click “Apply” to save the settings.

Mode Settings [Advanced](#)

Advanced Record Settings

☒ Cycle Record (Check this to overwrite the oldest recordings when storage is full)

Dual Stream Record ▼

Camera's Record Parameters

Camera Name	Pre-alarm Record Time ▼	Post-alarm Record Time ▼	Expiration Time ▼
IP Camera1	5 Secs ▼	10 Secs ▼	Never Expire ▼
IP Camera02	5 Secs ▼	10 Secs ▼	Never Expire ▼
name109	5 Secs ▼	10 Secs ▼	Never Expire ▼
IPC	5 Secs ▼	10 Secs ▼	Never Expire ▼

Apply

Pre-alarm Record Time: set the time to record before the actual recording begins.

Post-alarm Record Time: set the time to record after the actual recording is finished.

Expiration Time: set the expiration time for recorded video. If the set date is overdue, the recorded data will be deleted automatically.

10.2 Encode Parameters Settings

Click Start→Settings→Record→Encode Parameters to go to the interface as shown below. Set the encode, resolution, FPS, GOP, bitrate type, quality, max bitrate and audio of main stream for each camera in “Event Recording Settings” and “Schedule Recording Settings” interfaces. Click “Apply” to save the settings. You can set the record stream of each camera one by one or set them in bulk for all cameras.

[Event Recording Settings](#) [Schedule Recording Settings](#)

Camera Name	Stream Type	Encode ▼	Resolution ▼	FPS ▼	Bitrate Type ▼	Quality ▼	Max Bitrate ▼	Bitrate Limit Recommendation
IP Camera1	Main Stream	H.265 ▼	3840x2160 ▼	30 ▼	VBR ▼	Higher ▼	5120Kbps ▼	5632~19338Kbps
IP Camera02	Main Stream	H.265 ▼	2160x2160 ▼	30 ▼	VBR ▼	Higher ▼	3872Kbps ▼	5632~10848Kbps


Remain Bandwidth: 246 / 256 Mb Predict Record Time:0 Day


Apply


10.3 Schedule Settings

10.3.1 Add Schedule

When the record mode is set to “Manual”, you can click Start→Settings→Record→Record Schedule→Edit Schedules or click Start→Settings→Alarm→Event Notification→Edit Schedules to go to the interface as shown below (or click Start→Settings→AI/Event→Event Notification→Edit Schedule). “24 x 7”, “24 x 5” and “24 x 2” are the default schedules; you cannot edit or delete “24 x 7” while “24 x 5” and “24 x 2” can be edited and deleted. Click the schedule name to display the detailed schedule information on the left side of the interface. The seven rows stand for the seven days in a week and each row stands for 24 hours in a day. Blue stands for the selected time and gray stands for unselected time.

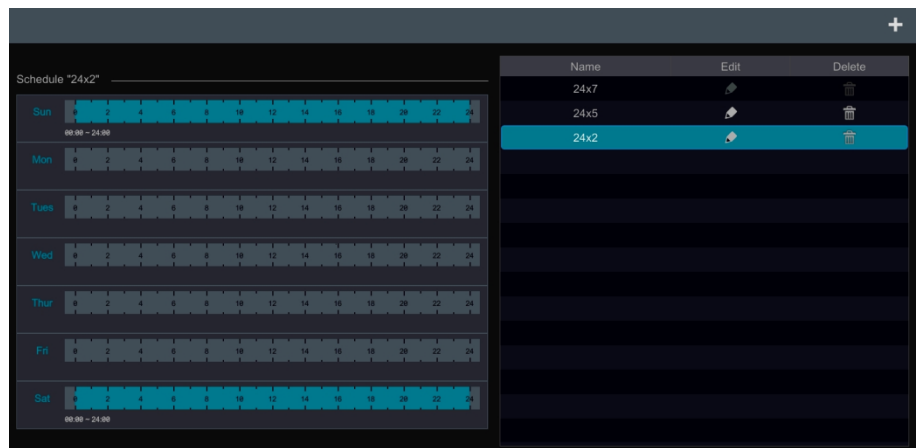

Click  to add a new schedule. Refer to the picture below.

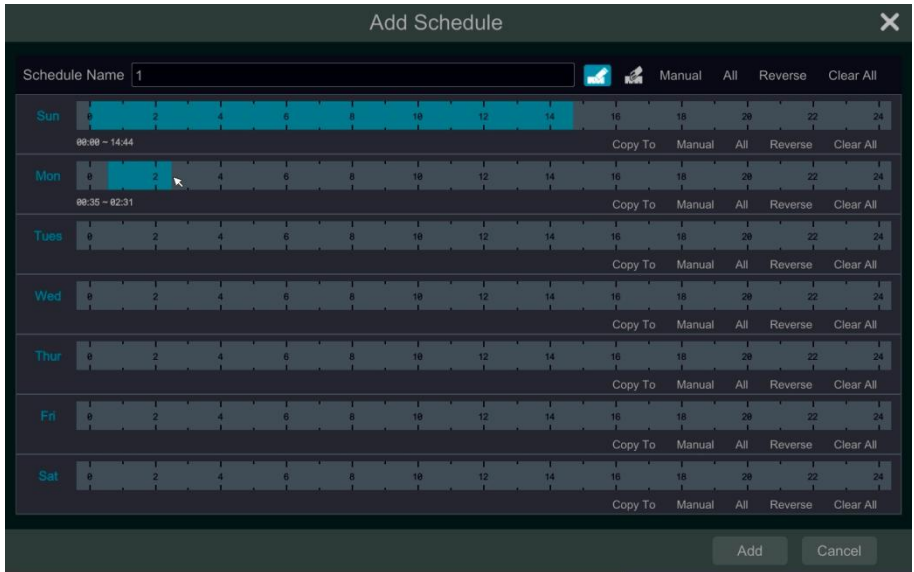


Set the schedule name and schedule time and then click “Add” to save the schedule. You can set day schedule or week schedule. : add button; : delete button.

➤ Set Day Schedule


Click and then drag the cursor on the time scale to set record time; click and then drag the cursor on the time scale to delete the selected area.

You can manually set the record start time and end time. Click or and then click “Manual” on each day to pop up a window as shown below. Set the start and end time in the window and then click “OK” to save the settings.

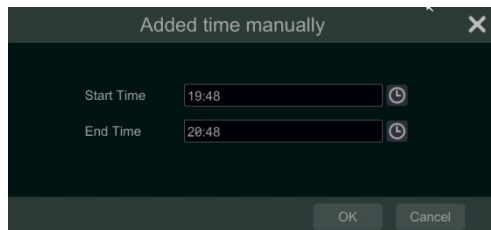




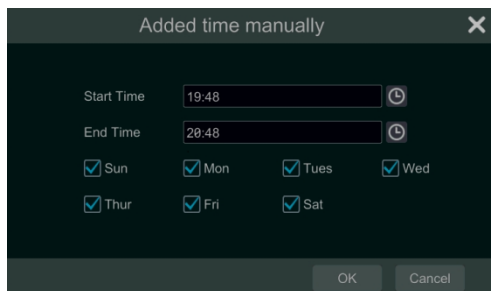
Click “All” to set all day recording; click “Reverse” to swap the selected and unselected time in a day; click “Clear All” to clear all the selected area in a day.

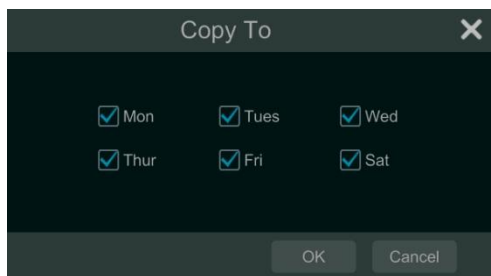Click “Copy To” to copy the schedule of the day to other days. Refer to the picture below. Check the days in the window and then click “OK” to save the settings.



➤ Set Week Schedule

Click  or  and then click “Manual” beside  to set the week schedule. Refer to the picture below. Set the start and end time, check the days in the window and then click “OK” to save the settings.





Click “All” to set all week recording; click “Reverse” to swap the selected and unselected time in a week; click “Clear All” to clear all the selected area in a week.

10.3.2 Record Schedule Configuration


Click Start→Settings→Record→Record Schedule→Schedule Configuration to go to the interface as shown below. Only when the record mode is set to “Manual” mode, can this function be activated. Set the schedule of sensor record, motion record, timed record and analytics record. Click “None” in the drop-down menu to clear the schedule. Click “Apply” to save the settings.


Schedule Config		Edit Schedules			
Camera Name	Sensor Record Schedule	Motion Record Schedule	Analytics Record Schedule	Timed Record Schedule	
IPC	<None>	<None>	<None>	<None>	
attendance terminal	<None>	<None>	<None>	<None>	
facial ipc	<None>	<None>	<None>	<None>	
ipc	<None>	<None>	<None>	<None>	

Go to “Edit Schedules” interface and then click  to edit the schedule. The settings of “Edit Schedule” are similar to that of the “Add Schedule”. Click  to delete the schedule.

10.4 Record Mode

10.4.1 Manual Recording

Method One: Click  on the tool bar at the bottom of the live preview interface to enable recording of the camera.

Method Two: Go to live preview interface and then click the right-click menu “Manually Record On” in the camera window or click  on the tool bar under the camera window to start recording.

Note: Click Start → Settings → Record → Mode Settings and then set the manual record time in the interface. Click “Apply” to save the settings.

10.4.2 Timing Recording

Timing Recording: the system will record automatically according to the schedule. Set the timing record schedule of each camera. See [10.3 Schedule Settings](#) for details.

10.4.3 Motion Based Recording

Motion Based Recording: the system will start motion based recording when the motion object appears in the setup schedule. The setup steps are as follows:

- ① Set the motion based recording schedule of each camera. See [10.3 Schedule Settings](#) for details.
- ② Enable the motion and set the motion area of each camera. See [12.4.1 Motion Configuration](#) for details.

The camera will start motion based recording once you finish the above settings.

10.4.4 Sensor Based Recording

- ① Set the sensor based recording schedule of each camera. See [10.3 Schedule Settings](#) for details.
- ② Set the NO/NC type of the sensor, enable the sensor alarm and then check and configure the “Record”. See [12.3 Sensor Alarm](#) for details.

10.4.5 Intelligence Recording

- ① Set the intelligence recording schedule of each IP camera. See [10.3 Schedule Settings](#) for details.
- ② Enable and set the intelligence detection (over temperature, non-mask detection, etc.) See [12 AI/Event Management](#) for details.


The camera will start intelligence recording once you finish the above settings. This function is only available for some devices.

10.5 Disk

10.5.1 Disk Management

➤ Disk Management

Click Start→Settings→Disk→Disk Management to go to disk management interface. You can view the SMT's disk number and disk status and so on in the interface. Click “Format” to format the HDD.

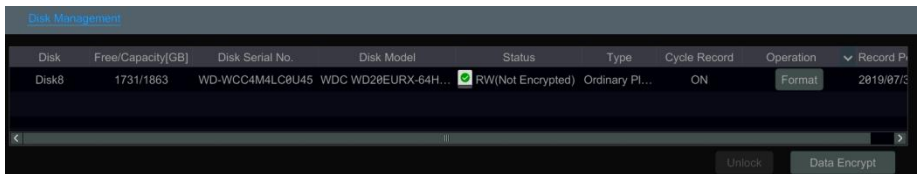

Data Encryption:

- ① Click “Data Encrypt”.
- ② Enter the username and password used to log in the SMT. This username and password shall have the permission of disk management.
- ③ Check the disk you want to encrypt and then enter the password.

After you encrypt the data of a disk, this disk cannot be read by other SMTs unless it is unlocked.


Data Decryption:

- ① Click “Change Encrypt”.
- ② Enter the username and password used to log in the SMT. This user shall have the permission of disk management.
- ③ Check the disk you want to decrypt and then empty the password.
- ④ Click “Close Encrypt”.

Unlock the disk: when one encrypted disk is transferred from another SMT to this SMT, it will be in locked status. Then you can select this locked disk and click “Unlock”. After you enter the password of its data encryption, its status will be “Read Only”. Now you can read the data of this disk but it cannot be written anything.


10.5.2 Storage Mode Configuration

Click Start→Settings→Disk→Storage Mode to go to the interface as shown below.

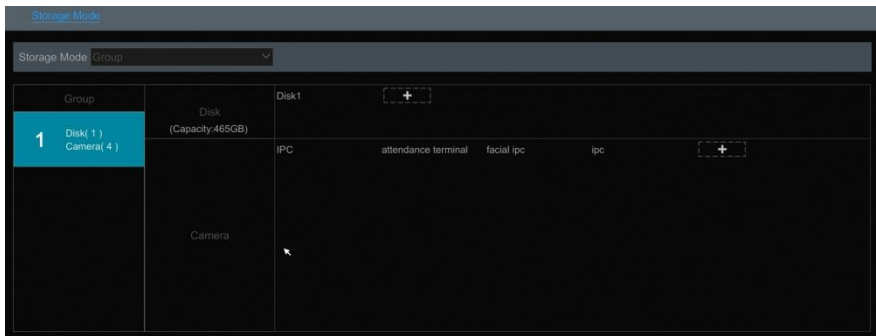

There is one disk group.

The added cameras will be added into the group automatically.

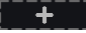For the model with more than one group, each group can add the disks and cameras from other groups. Each disk and camera can only be added into one group. Select a disk group and then click  in the disk or camera row to pop up a window. Check the disks or cameras in the window and then click “Add”.



10.5.3 View Disk and S.M.A.R.T. Information

Click Start→Settings→Disk→View Disk Information to view the HDD information; click “S.M.A.R.T. Information” to view the working status of the HDD. Refer to the picture below.

Disk S.M.A.R.T. Information						
Disk		Disk1				
Disk Serial No.		Z3T656BE				
Disk Model		ST500DM002-1BD142				
Temperature		38				
Power-on Time (day)		831				
S.M.A.R.T. Status		Normal				
ID	Attribution	Value	Worst Value	Threshold	Raw Value	Status
0x01	Read Error Rate	100	99	6	2649832	Normal
0x03	Spin-Up Time	100	100	0	0	Normal
0x04	Start/Stop Count	99	99	20	1325	Normal
0x05	Reallocated Sector Count	100	100	36	0	Normal
0x07	Seek Error Rate	82	60	30	816500920	Normal
0x09	Power-On Hours	78	78	0	19928	Normal
0x0a	Spin Retry Count	100	100	97	0	Normal
0x0c	Power Cycle Count	100	100	20	781	Normal
0xb7	SATA Downshift Error Count	89	89	0	11	Normal
0xb8	End-to-End error	100	100	99	0	Normal
0xbb	Reported Uncorrectable Errors	100	100	0	0	Normal
0xbc	Command Timeout	100	100	0	0	Normal
0xbd	High Fly Writes	100	100	0	0	Normal



11 Playback& Backup


11.1 Instant Playback

Click  on the tool bar at the bottom of the preview camera window to play back the record (click  on the toolbar at the bottom of the live preview interface to set the default playback time). Refer to the picture below. Drag the playback progress bar to change the playback time. You can also click the right-click menu “Instant Playback” in the camera window and then set the instant playback time to play back the record.



11.2 Playback Interface Introduction


Click  on the tool bar at the bottom of the live preview interface or click Start→Playback to go to the playback interface as shown below (click  on the toolbar at the bottom of the live preview interface to set the default playback time).

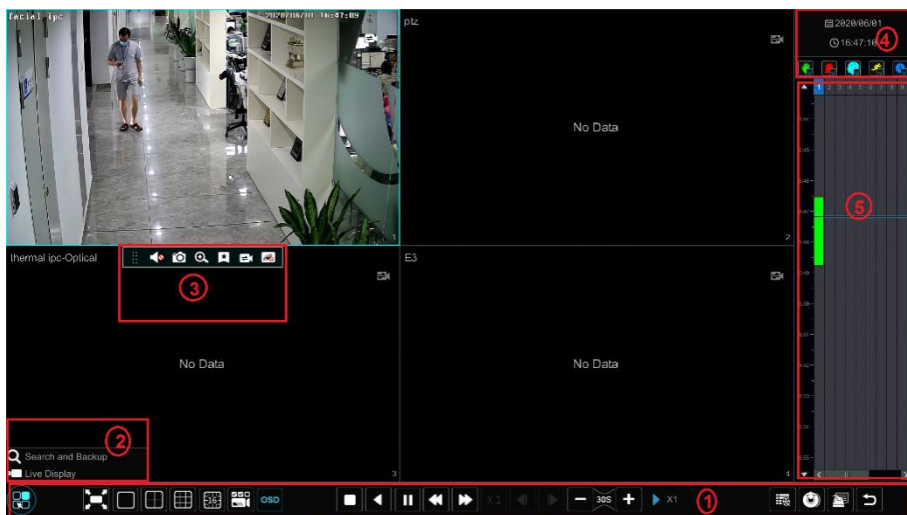

On the panel on the right you will see the channel number and the recorded data coded by color. The bar that runs across them represents the playback time being viewed. You can move this bar around to export, highlight a section of the desired recording, click export and follow the prompts. You can export single or multiple channels at the same time.




The added cameras will playback their records in the playback interface automatically. You can also add the playback camera manually. Click **+** in the playback window to pop up the “Add Camera” window. Check the cameras in the window and then click “Add” to add playback camera. The system supports a maximum of 16 synchronous playback cameras.

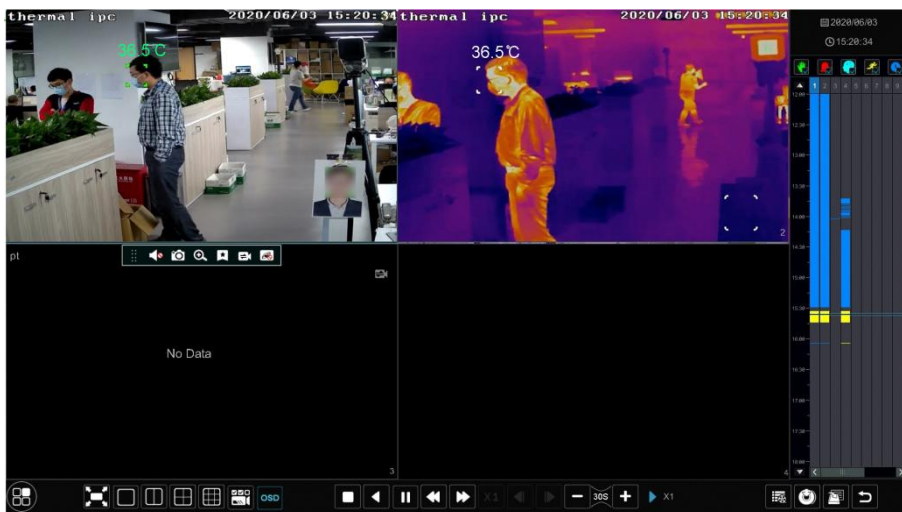For the thermal camera, visible light and thermal image can be played back simultaneously and the body temperature can be viewed on both images. The color of the normal temperature will be blue; the color of the over temperature will be red.





The buttons on the tool bar (area①) at the bottom of the playback interface are introduced in the table below.












Button	Meaning
	Start button. Click it to pop up area ②.
	Full screen button. Click it to show full screen; click it again to exit the full screen.
	Screen mode button (depending on models)
	Select channel. Click it to select the playback channel.
	OSD ON button. Click it to enable OSD; click it again to disable OSD.
	Stop button.
	Rewind button. Click it to play video backward.
	Play button. Click it to play video forward.
	Pause button.
	Deceleration button. Click it to decrease the playing speed.
	Acceleration button. Click it to increase the playing speed.
	Previous frame button. It works only when the forward playing is paused in single screen mode.
	Next frame button. It works only when the forward playing is paused in single screen mode.
	Click to step backward 30s and click to step forward 30s.
	Event list/tag button. Click it to view the event record of manual/schedule/sensor/ motion and the tag information.

Button	Meaning
	Backup button. Drag the mouse on the time scale to select the time periods and cameras, and then click the button to back up the record.
	Backup status button. Click it to view the backup status.
	Back button. Click it to return.







Introduction of area ②:




Button	Meaning
 Search and Backup	Click it to go to record search and backup interface; see 11.3 Record Search, Playback & Backup for details.
 Live Display	Click it to go to live preview interface; see Chapter 5 Live View Introduction for details.

Click on the playback window to show the tool bar as shown in area ③; right click on the window to show the menu list. The tool bar and menu list are introduced in the table below.






Button	Menu List	Meaning
	--	Move tool. Click it to move the tool bar anywhere.
	Enable Audio	Click it to enable audio. You can listen to the camera audio by enabling audio.
	Snap	Click it to snap.
	Zoom In	Click it to go to the zoom in interface. The zoom in interface is similar to that of the camera window in the live preview interface. Click  to pause the record playing; click  to play the record. When the record is paused in forward playing mode, you can click  to view the previous frame and click  to view the next frame.
	Add Tag	Click it to add tag. You can play back the record by searching the added tag. Click it and then enter the tag name in the popup window. Click “Add” to add tag.
	Switch Camera	Click it to switch the playback camera. Click it and then check the camera in the popup window. Click “OK” to change the camera.
	Close Camera	Click it to close the playback camera.

Introduction of area ④:

Click  to set the date; click  to set the time and then the playback camera will play the record from the time you set. You can check the record type as required for record playback; first you should click  on the tool bar at the bottom of the interface to clear all the playback camera, then check the record type (: manual record; : sensor based record; :



motion based record; : schedule record; : intelligence record) and finally click  in the playback window to add camera for playback (the record time scale will show the record data of the checked record type only after the above operations).

Introduction of the record time scale (area ⑤):

A tool bar will appear after moving the mouse to the record time scale. Click  /  to zoom the timeline; click  to recover the timeline to 24 hours' ratio. Drag the timeline or slide the scroll wheel of the mouse on the time scale to show the hidden time on the top or bottom of the timeline. You can also click  to show the hidden time on the top of the timeline or click  to show the hidden time on the bottom of the timeline. Drag the slider at the bottom of the time scale to show the hidden playback cameras.

The record time scale shows different record types with different colors. The green block stands for manual record, red block stands for sensor based record, yellow block stands for motion based record, blue block stands for schedule record and cyan block stands for intelligence record. Click the record block to set the time and then the playback camera will play the record from the time you set.

Backup Introduction:

1. Insert the storage device into the device. Drag on the color block of the time scale to select the backup area and then right click the area or click  to pop up a backup information window.
2. Click the “Backup” button in the window to pop up the backup window. Select the device, backup path and backup format and then click the “Backup” button. Please choose “Encryption” or “No Encryption” as needed. Then click “OK” to start backing up.
3. Click  to view the backup status after finishing backup.


11.3 Record Search, Playback & Backup

The record data and the snapped pictures can be backed up through network, USB (U disk or USB mobile HDD). The file system of the backup devices should be FAT32 format.


11.3.1 Smart Face Search

Click Start→Search and Backup→Smart Search to go to the following interface.


- **Face Search by event**

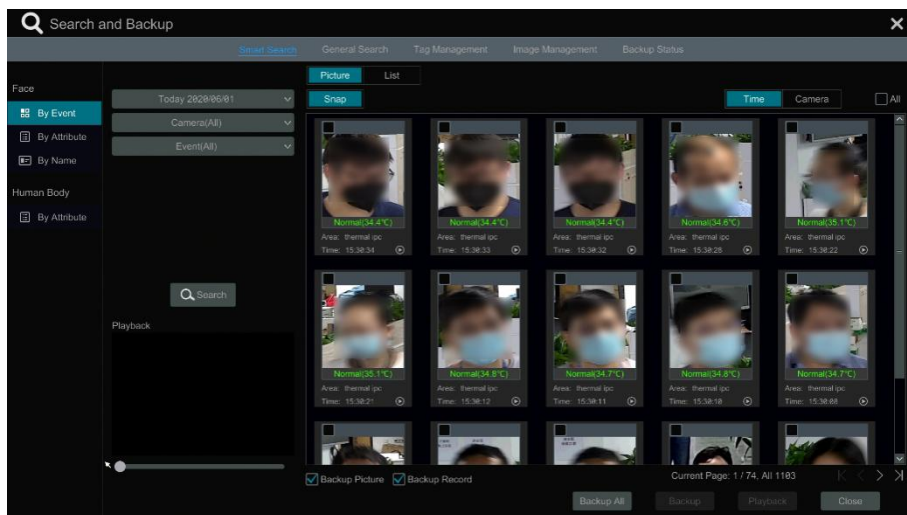

- ① Select the search time. Click the “Today” tab to select the search time. Please choose the search time as needed. After you select the time and then click “OK” to confirm the time you set.
- ② Select the cameras you want to search.
- ③ Select the events. “All”, “Face Detection”, “Face Matching-Block List”, “Face Matching –Allow list”, “Face Matching –VIP” “Stranger”, or “Stranger” can be selected.
- ④ Click “Search” to search the captured pictures.

In this interface, you can view the body temperature of the captured people and the snapshot camera and time. Click  to play the record in the small playback window on the lower left corner of the interface.



Click the search picture to view its detailed information as shown below.

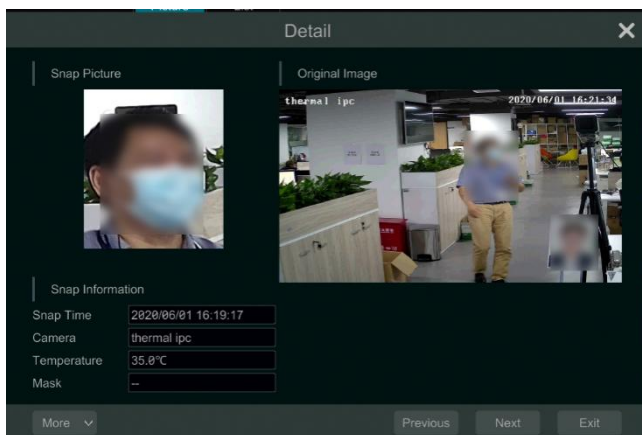

Select the captured picture, check “Backup Picture” or “Backup Record” and then click “Backup” to back up the captured face picture or record. Select the picture and then click “Playback” to go to the playback interface quickly.

If “Face Matching” type is selected, you can view the face match result. Click “Match” to view the face recognition and comparison details as shown below.

In the face match search interface, you can view the detail information of this captured person, including, the face match pictures, similarity, body temperature, mask status, name of the person, his/her company, etc.

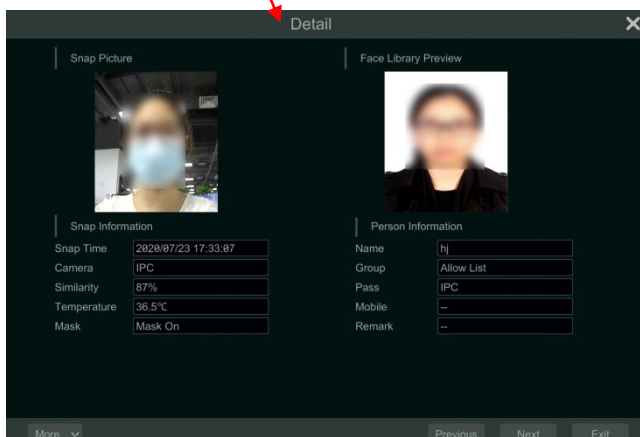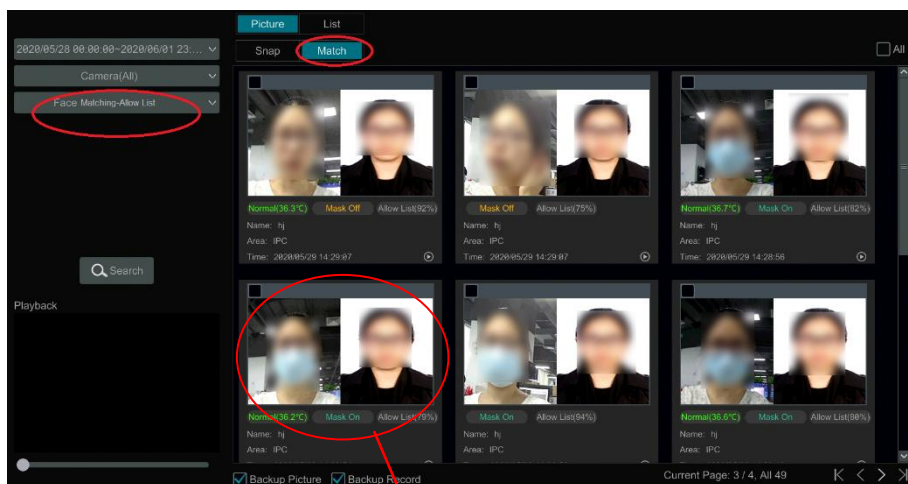

Click the matched picture to pop up a detailed face match box as shown above.

The detailed snapshot information and personal information can be viewed from the detail face match box. Click “More” and then choose “Playback” to view the record quickly. Click “More” and then choose “Export” to back up the captured face picture.

Click the “List” tab to view the snapshot information list as shown below

Picture

List

No.

Name

Snap Time

Personnel T...

Similarity

Temperature

Mask

Area

Details

Backup

1

2

05/13/2020 11:11:58 PM

xxxx

87%

36.8°C

Mask On

IPC

2

2

05/13/2020 11:11:54 PM

xxxx

85%

--

Mask On

IPC

3

2

05/13/2020 11:11:59 PM

xxxx

83%

36.1°C

Mask On

IPC

4

2

05/13/2020 11:11:46 PM

xxxx

84%

--

Mask On

IPC

5

2

05/13/2020 11:06:33 PM

xxxx

76%

--

Mask On

IPC

6

2

05/13/2020 11:06:17 PM

xxxx

79%

--

Mask On

IPC

7

2

05/13/2020 11:06:13 PM

xxxx

76%

--

Mask On

IPC

8

--

05/13/2020 11:06:12 PM

Stranger

--

--

Mask On

IPC

9

--

05/13/2020 11:03:14 PM

Stranger

--

--

--

attendance termi...

10

--

05/13/2020 11:00:25 PM

Stranger

--

--

--

attendance termi...

11

--

05/13/2020 10:57:57 PM

Stranger

--

--

--

attendance termi...

12

--

05/13/2020 10:57:18 PM

Stranger

--

--

Mask On

IPC

13

--

05/13/2020 10:57:19 PM

Stranger

--

--

--

attendance termi...

14

--

05/13/2020 10:57:09 PM

Stranger

--

--

Mask On

IPC

15

--

05/13/2020 10:57:09 PM

Stranger

--

--

--

attendance termi...

16

--

05/13/2020 10:57:05 PM

Stranger

--

--


Mask On

IPC

Click to view the detailed face match information; click to back up the image.

● Face Search by Attribute

- ① Click “By Attribute” and then select the search time. Click the “Today” tab to select the search time. Please choose the search time as needed. After you select the time and then click “OK” to confirm the time you set.
- ② Select the cameras you want to search.
- ③ Select the attribution. Please select the mask status and temperature type as needed.

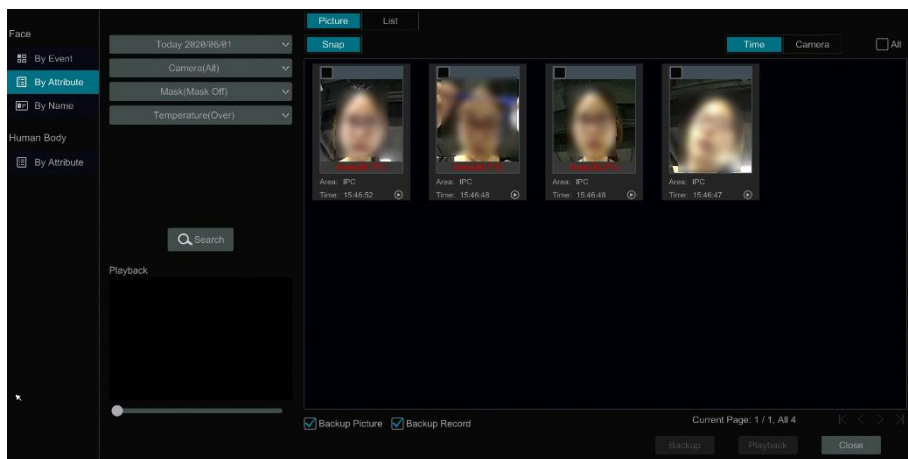

Mask: “All”, “Mask On” or “Mask Off” can be optional.

Temperature: “All”, “Normal” or “Over” can be set. You can also click “Custom Range” to set the temperature range you want to search.

④ Click “Search” to search the result.


● Search Face by Name

① Click “By Name” and then select the search time. Click the “Today” tab to select the search time. Please choose the search time as needed. After you select the time and then click “OK” to confirm the time you set.

② Select the cameras you want to search.


③ Enter the name.


④ Click “Search” to view the result.

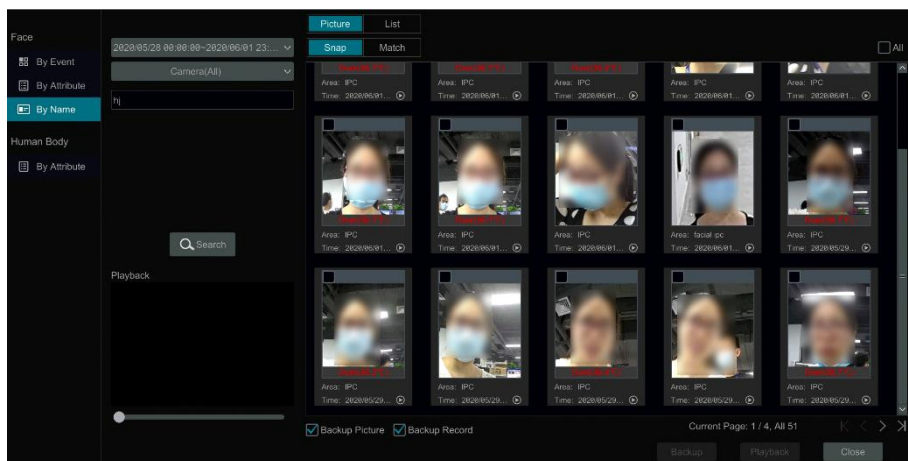


11.3.2 Smart Human Body Search

- ① Click “By Attribute” under “Human Body” and then select the search time. Click the “Today” tab to select the search time. Please choose the search time as needed. After you select the time and then click “OK” to confirm the time you set.
- ② Select the cameras you want to search.
- ③ Select the access direction as needed.
- ④ Click “Search” to view the result as shown below.

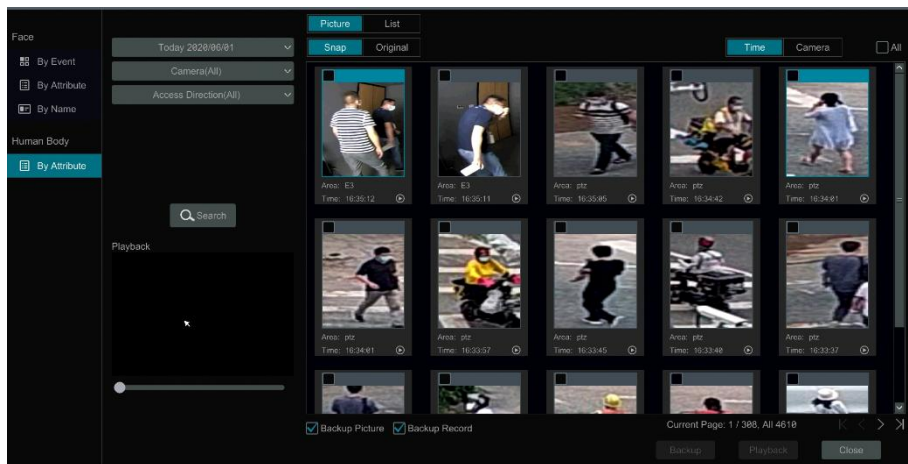


In this interface, you can view the captured people and the snapshot camera and time. Click  to play the record in the small playback window on the lower left corner of the interface. Click the captured picture to view the detailed information as shown below.

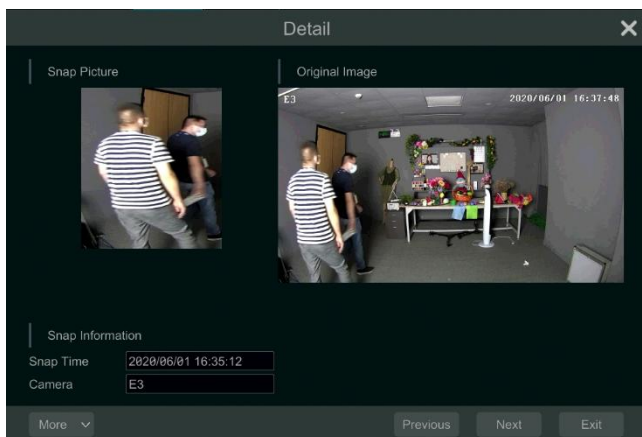


In the above interface, you can view the captured picture and the original image, snap time and

camera. Click “More” to view more menus, including “Playback” and “Export”.
Click the “List” tab to view the list of the searched information.
Click the “Original” tab to view the original pictures.

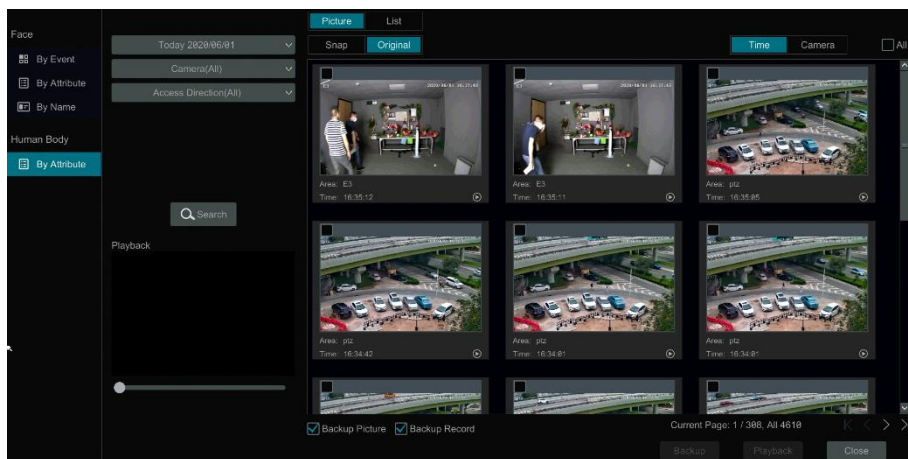

11.3.3 Search by Time-Sliced Image


① Click Start→Search and Backup→General Search→By Time-sliced Image to go to the following interface.

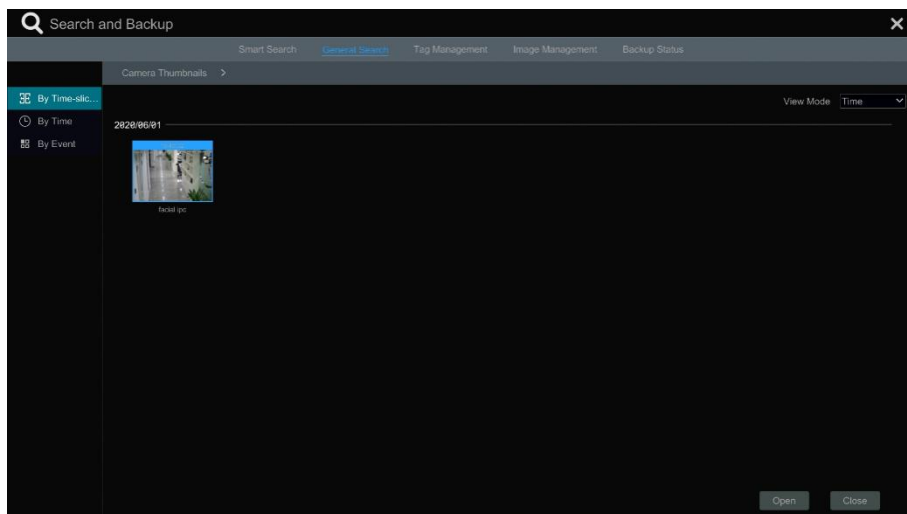

There are two view modes: by time and by camera. In the time view mode, a maximum of 64 camera thumbnails can be shown. If the camera thumbnail number is more than 64, the


cameras will be listed directly by their camera name, not the thumbnail. A maximum of 196 camera names can be listed. If the camera name number is more than 196, the time view mode will be disabled and the camera view mode will be available only.

- ② Select one camera in the interface and then click the “Open” button.
- ③ Click the image box to play the record in the small playback box on the left side of the interface (the box which has image inside indicates that the record data exist).
- ④ Refer to the picture below. Drag the color blocks on the time scale to select the record data and then click the “Backup” button to pop up the “Record Backup” window as shown below. Select the device name, backup format and path and then click the “Backup” button to start the backup.

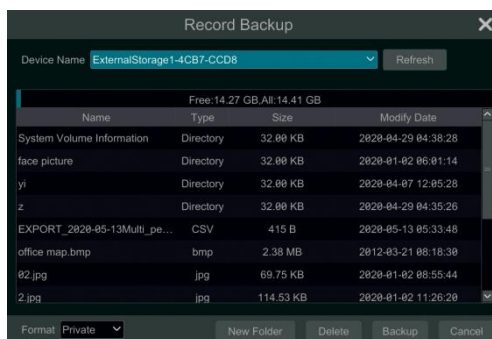

Note: If you back up the record in private format, the system will back up a RPAS player to USB device automatically. The private format record can be played by RPAS player only.

- ⑤ Click “Playback” to play the record in the playback interface (refer to [11.2 Playback Interface Introduction](#) for details). Click “Close” to close the interface.

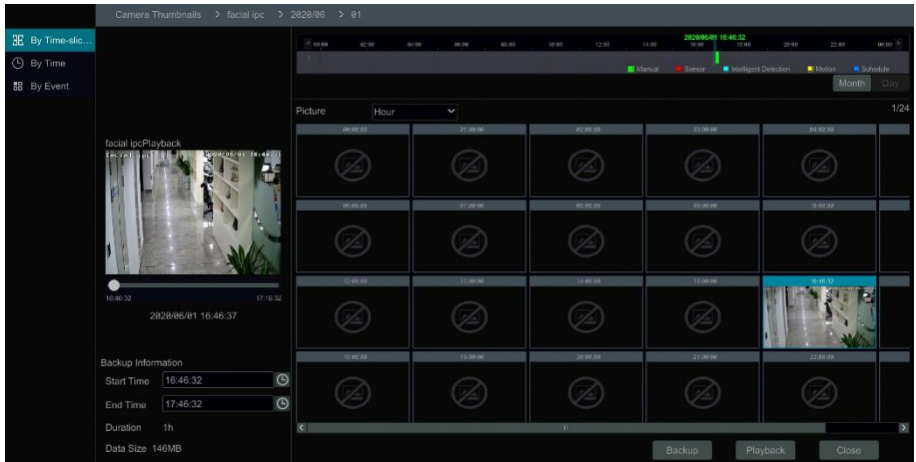

Time Slice Mode Selecting:


Method One: Click “Year”, “Month” or “Day” button under the record time scale to select the time slice mode. In “Day” mode, click / on the left/right side of the time scale to view the record of the last/next day; click “Minute” in the “Picture” option under the time scale to select “Minute” mode(in “Minute” mode, click the time scale to change the time of the 60 display windows) and click “Hour” to select “Hour” mode.

Method Two: Click beside “Camera Thumbnail” on the left top corner of the interface to select the time slice mode.

Method Three: Right-click the mouse on any area of the time-sliced interface to go back to the upper interface.


11.3.4 Search by Time



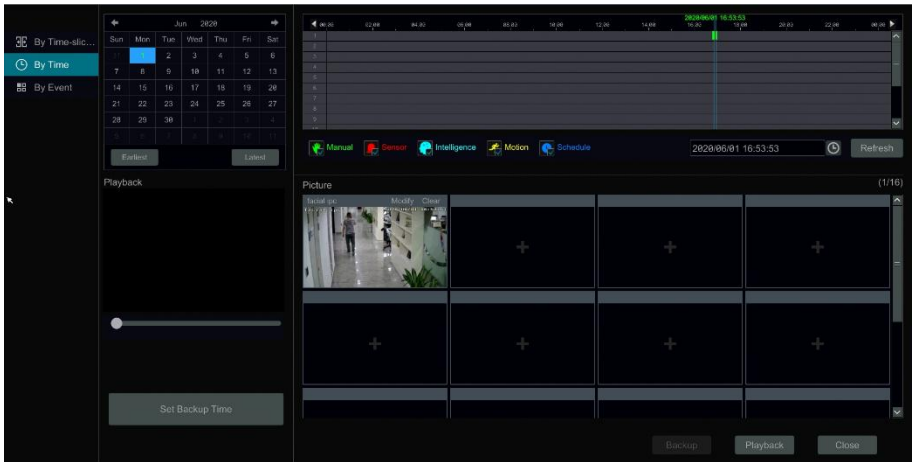

- ① Click Start→Search and Backup→General Search→By Time to go to the following interface.
- ② Click on the bottom of the interface to add playback camera. A maximum of 16 cameras can be added for playback. Click “Modify” on the top right corner of the camera window to change the camera and click “Clear” to remove the camera.
- ③ Click the camera window to play the record in the small playback box on the left side of the interface. You can set the date on the top left of the interface, check the event type as required and click the time scale or click under the time scale to set the time. The camera window will play the record according to the time and event type you set.
- ④ Drag the color blocks on the time scale to select the record data (or click “Set Backup Time” on the bottom left corner of the interface to set the backup start time and end time) and then click “Backup” for record backup. Click “Playback” to play the record in the playback interface.

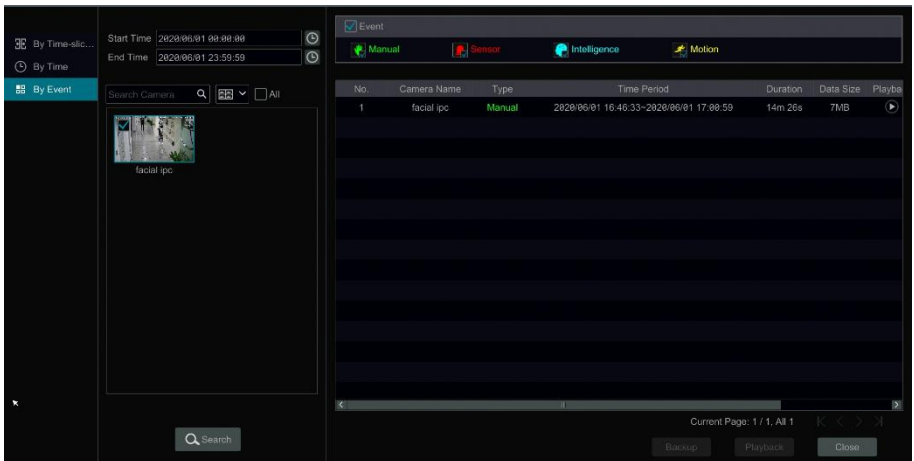

11.3.5 Search by Event


① Click Start→Search and Backup→General Search→By Event to go to the following interface.




- ② Check the event type in the interface as required.
- ③ Click  to set the start time and end time on the top left of the interface.
- ④ Check cameras on the left side of the interface or check “All” to select all the cameras and then click  to search the record. The searched record will be displayed in the list.
- ⑤ Click  in the list to play back the record in the popup window. Click  to back up one record data or check multiple record data in the list and then click “Backup” for record batch backup.
- ⑥ Select one record data in the list and then click “Playback” to play the record in the




playback interface.

11.3.6 Search & Playback by Tag

Only if you add the tags can you play the record by tag search. Click Start→Playback to go to the playback interface and then click  on the bottom of the camera window to add tag when you want to mark the playback time point of the selected camera.

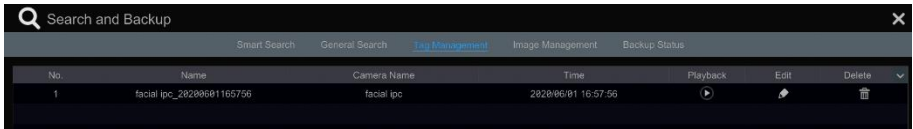
Click Start→Search and Backup→Tag Management to go to “Tag Management” tab.









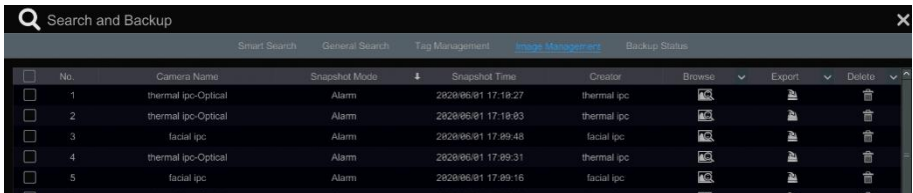

Click  in the interface to play the record. Click  to edit the tag name. Click  to delete the tag.


11.3.7 Image Management

Click Start→Search and Backup→Image Management to go to “Image Management” tab. The system will display all the snapped images automatically in the list.




Click  to delete the image. Click  to pop up the “Export” window. Select the device name and save path in the window and then click the “Save” button.

Click  to pop up the “View Image” window. Click  to export the image. Click  to view the previous image; click  to view the next image; click  to delete the image; click  to play all the images.

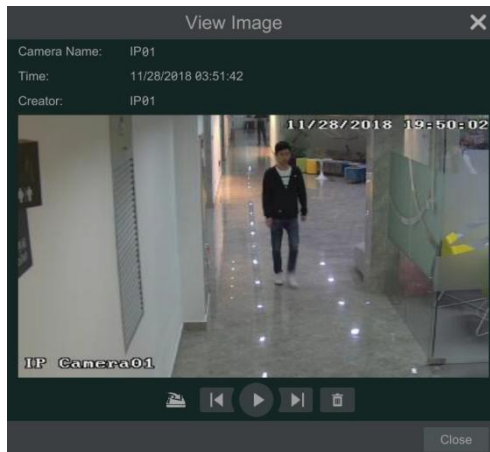

11.3.8 View Backup Status

Click Start→Search and Backup→Backup Status or click  on the tool bar at the bottom of the playback interface to view the backup status.

12 AI/Event Management

12.1 Body Temperature Settings

Click Start→Settings→AI/Event→Temperature/Mask to go to the following interface.

Temperature Detection

Camera Name	<input checked="" type="checkbox"/>
IPC	<input checked="" type="checkbox"/>
thermal ipc	<input checked="" type="checkbox"/>

Rule Parameters Settings

Over Temp ☒

Unit: ☒ Celsius ☐ Fahrenheit

Threshold: 36 °C

Trigger settings ☒

Schedule: 24x7

Trigger General	Alarm-out	Configure
<input checked="" type="checkbox"/> APP Push		
<input type="checkbox"/> Pop-up Message Box		

- ① Enable the temperature detection for temperature measurement devices.
- ② Please select Celsius or Fahrenheit temperature as needed.
- ③ Enable “Over Temp” and set the temperature threshold. If the body temperature measured exceeds this threshold, it will trigger alarm. Over temperature will be shown on the captured face picture and the alarm information will be shown under the real-time warning tab of the live display interface.
- ④ Alarm linkage settings. Enable “Trigger settings” and then select the schedule. Click “Schedule Management” to set the schedule.

Select “APP Push”, “Pop-up Message Box” and “Alarm-out” as needed.

APP Push: check it and choose ON or OFF. If it is ON, the alarm information will be sent to the mobile APP.


Alarm-out: check it and then the “Trigger Alarm-out” window will pop up automatically. Configure the trigger alarm-out in the window. The system will trigger the alarm-out automatically when the over temperature alarm is triggered. You need to set the delay time and

the schedule of the alarm outputs. See [12.7.1 Alarm-out](#) for details.

Pop-up Message Box: if enabled, the system will pop up the corresponding alarm message box automatically when the over temperature alarm is triggered. To set the duration time of the message box, please see [12.7.3 Display](#) for details.

12.2 Mask Settings

Click Start→Settings→AI/Event→Temperature/Mask to go to the following interface.

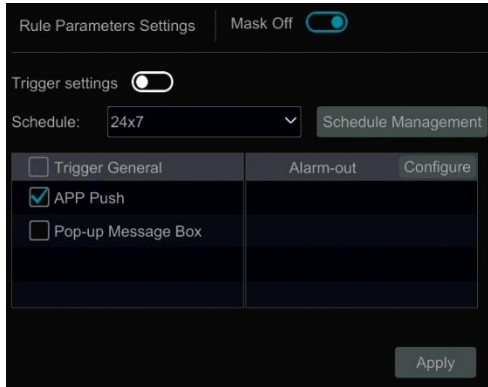

① Turn on “Mask Off”. Then the non-mask detection results of the IP panels/cameras will be received by the device and trigger an alarm. In live view mode, you will view the non-mask alarm information (“mask off”) displayed under the captured face picture in the comparison interface and real-time warning interface.

Note: Before using this function, please ensure that mask detection is supported by the added IP panels/cameras and it has been enabled.

② Enable “Trigger settings” and then select the schedule. Select “APP Push”, “Pop-up Message Box” and “Alarm-out” as needed. The setting steps of the alarm linkage are the same as that of the body temperature settings.

③ Click “Apply” to save the settings.

12.3 Sensor Alarm

To complete the entire sensor alarm settings, you should enable the sensor alarm of each camera and then set up the alarm handling of each camera.

① Click Start→Settings→AI/Event→Sensor to go to the following interface.



The screenshot shows a configuration window titled "Motion Sensor". At the top, there are checkboxes for " buzzer", "Pop-up Video", "Pop-up Message Box", and "E-mail". Below this is a table with columns: No., Alarm Name, Schedule, Type, Enable, Duration, Record, Snapshot, APP Push, and Alarm-out. The table contains 16 rows of sensor configurations. Each row has a "Record" column with a "Configure" button. At the bottom right, there is an "Apply" button.

No.	Alarm Name	Schedule	Type	Enable	Duration	Record	Snapshot	APP Push	Alarm-out
Local-1	Sensor1	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
Local-2	Sensor2	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
Local-3	Sensor3	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
Local-4	Sensor4	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
Local-5	Sensor5	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
Local-6	Sensor6	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
Local-7	Sensor7	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
Local-8	Sensor8	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
IPC-1	Sensor1	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
IPC-2	Sensor2	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
attendanc...	Sensor1	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
attendanc...	Sensor2	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
facial ipc-1	Sensor1	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure
ipc-1	Sensor1	24x7	NO	ON	30 Secs	Configure	Configure	ON	Configure

- ② Select the alarm type (NO or NC) according to trigger type of the sensor.
- ③ Enable the sensor alarm of each camera and select the schedule.
- ④ Check the “Duration”, “Record”, “Snapshot”, “Push”, “Alarm-out” and enable or disable the “Buzzer”, “Pop-up Video”, “Pop-up Message Box” and “E-mail” as required.
- ⑤ Click “Apply” to save the settings.

The configuration steps of the above mentioned alarm linkages are as follows.

Duration: it refers to the interval time between the adjacent motion detections. For instance, if the duration time is set to 10 seconds, once the system detects a motion, it will go to alarm and would not detect any other motion (specific to camera) in 10 seconds. If there is another motion detected during this period, it will be considered as continuous movement; otherwise it will be considered as a single motion.

Record: check it and then the “Trigger Record” window will popup automatically (you can also click the “Configure” button to pop up the window). Select camera on the left side and then click  to set the camera as the trigger camera. Select trigger camera on the right side and then click  to cancel the trigger camera. Click “OK” to save the settings. The trigger cameras will record automatically when the sensor alarm is triggered.

Snapshot: check it and then the “Trigger Snapshot” window will pop up automatically. Configure the trigger camera in the window. The trigger cameras will capture images automatically when the sensor alarm is triggered.

APP Push: check it and choose ON or OFF. If it is ON, the alarm information will be sent to the mobile APP.

Alarm-out: check it and then the “Trigger Alarm-out” window will pop up automatically. Configure the trigger alarm-out in the window. The system will trigger the alarm-out

automatically when the sensor alarm is triggered. You need to set the delay time and the schedule of the alarm outputs. See [12.7.1 Alarm-out](#) for details.

Buzzer: if enabled, the system will begin to buzz when the sensor alarm is triggered. To set the delay time of the buzzer, please see [12.7.4 Buzzer](#) for details.

Pop-up Video: After camera setting, the system will pop up the corresponding video automatically when the sensor alarm is triggered. To set the duration time of the video, please see [12.7.3 Display](#) for details.

Pop-up Message Box: if enabled, the system will pop up the corresponding alarm message box automatically when the sensor alarm is triggered. To set the duration time of the message box, please see [12.7.3 Display](#) for details.

E-mail: if enabled, the system will send an e-mail when the sensor alarm is triggered. Before you enable the email, please configure the recipient's e-mail address first (see [14.1.5 E-mail Configuration](#) for details).

12.4 Motion Alarm

Motion Alarm: when the motion object appears in the specified area, it will trigger the alarm. You should enable the motion of each camera first and then set the alarm handling of the camera to complete the whole configuration of the motion alarm.

12.4.1 Motion Configuration

- ① Click Start→Settings→Camera→Motion Settings to go to the following interface.



- ② Select the camera, enable the motion and set the sensitivity and duration of the camera.
Sensitivity: the higher the value is, the more sensitive it is to motion. You should adjust the


value according to the practical conditions since the sensitivity is influenced by color and time (day or night).

Duration: it refers to the interval time between the adjacent motion detections. For instance, if the duration time is set to 10 seconds, once the system detects a motion, it will go to alarm and would not detect any other motion (specific to camera) in 10 seconds. If there is another motion detected during this period, it will be considered as continuous movement; otherwise it will be considered as a single motion.

- ③ Drag the camera image to set the motion area. You can set more than one motion area. Click “All” to set the whole camera image as the motion area. Click “Reverse” to swap the motion area and the non-motion area. Click “Clear” to clear all the motion areas.
- ④ Click “Apply” to save the settings. Click “Processing Mode” to go to the alarm handling configuration interface of the motion alarm.

12.4.2 Motion Alarm Handling Configuration


- ① Click Start→Settings→AI/Event→Motion Alarm to go to the following interface.

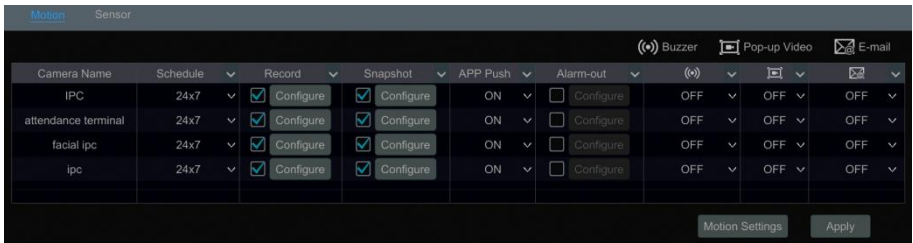

- ② Enable or disable “Record”, “Snapshot”, “APP Push”, “Alarm-out”, “Buzzer”, “Pop-up Video” and “E-mail”. The alarm handling setting of motion alarm is similar to that of the sensor alarm (see [12.3 Sensor Alarm](#) for details).
- ③ Click “Apply” to save the settings. You can click “Motion Settings” to go to the motion configuration interface.

12.5 Combination Alarm


- ① Click Start→Settings→AI/Event→Combination Alarm to go to the following interface.
- ② Customize combination alarm. Set alarm name and click “Configure” under the Combined Alarm Configuration item. Then select alarm type and alarm source. Finally, click “OK” to save the settings.
- ③ Enable or disable “Record”, “Snapshot”, “APP Push”, “Alarm-out”, “Buzzer”, “Pop-up Video” and “E-mail”. The alarm handling setting of combination alarm is similar to that of the sensor alarm (see [12.3 Sensor Alarm](#) for details).
- ④ Click “Apply” to save the settings.

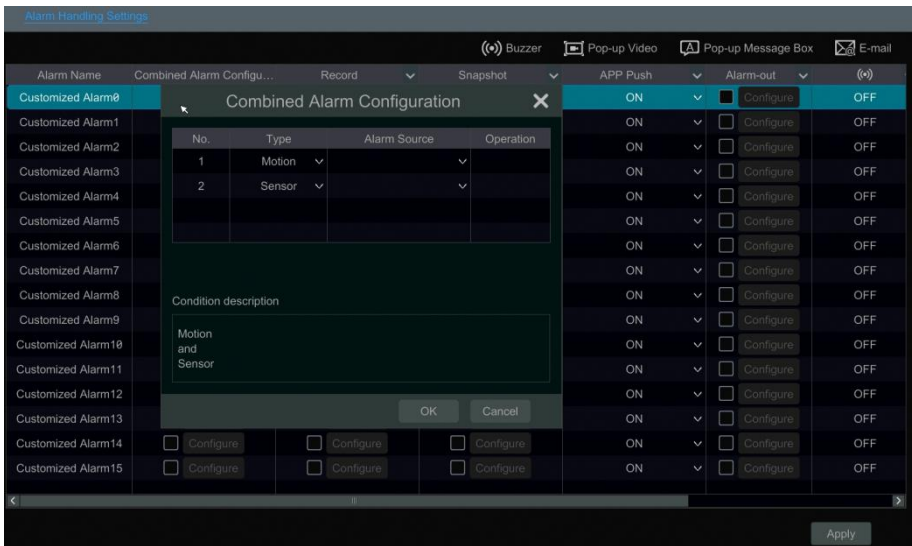

12.6 Exception Alarm

12.6.1 IPC Offline Settings

- ① Click Start→Settings→AI/Event→Exception→IPC Offline Settings to go to the interface as shown below.
- ② Enable or disable “Snapshot”, “APP Push”, “Alarm-out”, “Buzzer”, “Pop-up Video”, “Pop-up Message Box” and “E-mail”. The IPC Offline Settings are similar to that of the sensor alarm (see [12.3 Sensor Alarm](#) for details).
- ③ Click “Apply” to save the settings.

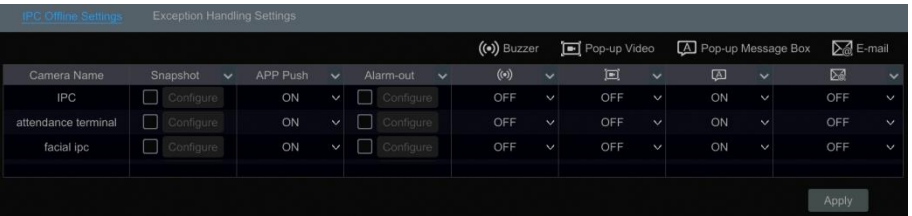

12.6.2 Exception Handling Settings

- ① Click Start→Settings→AI/Event→Exception→Exception Handling Settings to go to the interface as shown below.

IPC Offline Settings

Exception Handling Settings

Buzzer

Pop-up Message Box

E-mail

Event Type	APP Push		Alarm-out				
IP Address Conflict	ON		<div><div></div>Configure</div>		ON		OFF
Disk IO Error	ON		<div><div></div>Configure</div>		ON		OFF
Disk Full	ON		<div><div></div>Configure</div>		ON		OFF
No Disk	ON		<div><div></div>Configure</div>		ON		OFF
Illegal Access	ON		<div><div></div>Configure</div>		ON		OFF
Network Disconnection	ON		<div><div></div>Configure</div>		ON		OFF
HDD is pulled out	ON		<div><div></div>Configure</div>		ON		OFF

- ② Enable or disable “APP Push”, “Alarm-out”, “Buzzer”, “Pop-up Message Box” and “E-mail”. The exception handling settings are similar to that of the sensor alarm (see [12.3 Sensor Alarm](#) for details).
- ③ Click “Apply” to save the settings.

12.7 Alarm Event Notification

12.7.1 Alarm-out

- ① Click Start→Settings→ AI/Event →Event Notification to go to the following interface.

Alarm-out

Edit Schedules

No.	Name	Delay	Schedule	Test	
Local-1	AlarmOut1	10 Secs	24x7	Test	
Local-2	AlarmOut2	10 Secs	24x7	Test	
Local-3	AlarmOut3	10 Secs	24x7	Test	
Local-4	AlarmOut4	10 Secs	24x7	Test	
IP Camera03-1	AlarmOut1	10 Secs	24x7	Test	

Apply

- ② Set the delay time and the schedule of each alarm-out. You can click “Edit Schedules” to edit the schedules (see [10.3.1 Add Schedule](#) for details).
- ③ Click “Apply” to save the settings. You can click “Test” to test the alarm output.

12.7.2 E-mail

Click Start→Settings→AI/Event→Event Notification→E-mail to go to the e-mail configuration interface. Set the e-mail address of the recipients. See [14.1.5 E-mail Configuration](#) for details.

12.7.3 Display

Click Start→Settings→AI/Event→Event Notification→Display to go to the display configuration interface. Set the duration time of the pop-up video and the pop-up message box. If your device support two outputs, please set the output of the pop-up video as needed. After that, click “Apply” to save the settings.

The screenshot shows a configuration window with two sections. The first section, titled "Pop-up Video", has a "Duration" dropdown menu set to "10 Secs". The second section, titled "Pop-up Message Box", has a checkbox labeled "Don't show later" which is unchecked, and a "Duration" dropdown menu set to "10 Secs". An "Apply" button is located at the bottom right of the window.

12.7.4 Buzzer

Click Start→Settings→AI/Event→Event Notification→Buzzer to go to the buzzer configuration interface. Set the delay time of the buzzer and then click “Apply” to save the setting. You can click “Test” to test the buzzer.


The screenshot shows a configuration window titled "Buzzer". It has a "Delay" dropdown menu set to "5 Secs". At the bottom, there are two buttons: "Test" and "Apply".

12.7.5 APP Push Message

Click Start→Settings→AI/Event→Event Notification→APP Push Message to go to the interface as shown below. Check “Enable” and then click “Apply” to save the settings. Click “Test” to test the push server connection status. If Push Server is online, it will push messages to the mobile APP.


The screenshot shows a configuration window titled "APP Push Message". It has a checkbox labeled "Enable" which is checked. Below it, there is a "Push Schedule" dropdown menu set to "24x7". At the bottom, it shows "Push Server Status: 47.88.102.123:7023(Online)". There are "Test" and "Apply" buttons at the bottom right.

12.8 Manual Alarm

Click  on the tool bar at the bottom of the live preview interface to pop up a window. Click “Trigger” to start alarm. Click “Clear” to stop alarm.


Alarm-out Name	Status	Trigger	Clear
AlarmOut1	Normal	Trigger	Clear
AlarmOut2	Normal	Trigger	Clear
AlarmOut3	Normal	Trigger	Clear
AlarmOut4	Normal	Trigger	Clear
IP Camera1_AlarmOut1	Normal	Trigger	Clear
IP Camera2_AlarmOut1	Normal	Trigger	Clear

12.9 View Alarm Status

Click Start→Settings→Alarm→Alarm Status or click  on the tool bar at the bottom of the live preview interface to view the alarm status.

General Alarm				AI Alarm	Exception	Clear Buzzer
Alarm Time	Alarm Type	Alarm Source	Detail			
2020/06/01 17:29:44	Motion	facial ipc	▼			
2020/06/01 17:29:17	Motion	facial ipc	▼			
2020/06/01 17:29:14	Motion	thermal ipc	▼			
2020/06/01 17:28:52	Motion	thermal ipc	▼			
2020/06/01 17:28:36	Motion	facial ipc	▼			
2020/06/01 17:28:13	Motion	facial ipc	▼			
2020/06/01 17:27:31	Motion	thermal ipc	▼			
2020/06/01 17:27:28	Motion	facial ipc	▼			
2020/06/01 17:27:02	Motion	thermal ipc	▼			
2020/06/01 17:25:59	Motion	thermal ipc	▼			
2020/06/01 17:25:37	Motion	thermal ipc	▼			
2020/06/01 17:25:28	Motion	facial ipc	▼			

Three types of alarm status can be viewed, including “General Alarm”, “AI Alarm” and “Exception”.

Click “Clear Buzzer” to stop the buzzer when the buzzer alarm happens. Click  to view the detail information as shown below.

General Alarm

AI Alarm

Exception

Clear Buzzer


Alarm Time	Alarm Type	Alarm Source	Detail
2020/06/01 17:33:36	Motion	thermal ipc	✓
2020/06/01 17:33:14	Motion	thermal ipc	✓
2020/06/01 17:32:51	Motion	thermal ipc	✓
Trigger Record: thermal ipc			
Trigger Alarm-out: None			
Snapshot: ON			
Trigger Buzzer: OFF			
Pop-up video: OFF			
Trigger E-mail: OFF			
2020/06/01 17:32:31	Motion	facial ipc	✓
2020/06/01 17:32:13	Motion	thermal ipc	✓

Close

13 Account & Permission Management

13.1 Account Management

Click Start→Settings→Account and Authority→Account→Edit User to go to the interface as shown below.

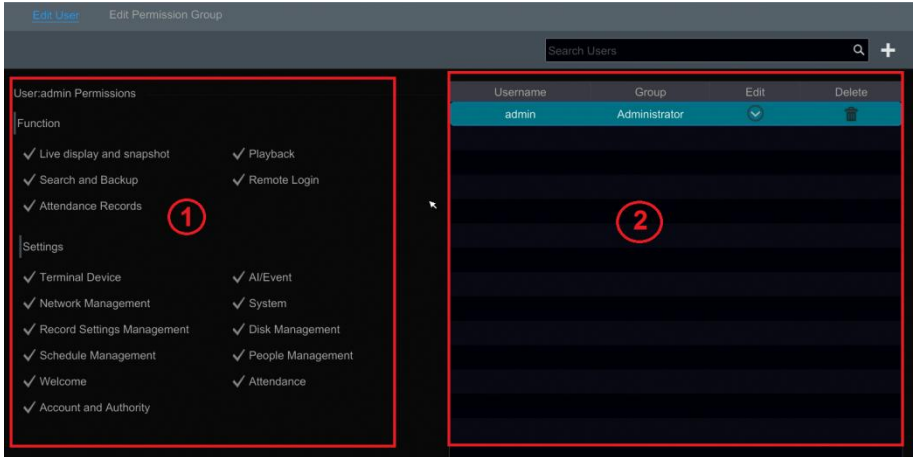


Area ① displays the user permissions. Area ② displays the user list. Click the user in the list to display its user permissions in area ①.

There are three default permission groups (“Administrator”, “Advanced” and “Common”) available when adding accounts. You can manually add new permission group (see [13.3.1 Add Permission Group](#) for details).



Only **admin** and the users that have the “Account and Authority” permission can manage the system’s accounts. Group “Administrator” owns all the permissions displayed in area ① except “Account and Authority” and its permissions cannot be changed while the permissions of “Advanced” and “Common” can be changed.





13.1.1 Add User

① Click Start→Settings→Account and Authority→Account→Add User or click  beside the search box to pop up the window as shown below.

② Set the username, password and group. User can also set the pattern lock here. The e-mail address and MAC address are optional (enter the MAC address after you check it). Click “Add” to add the user.

13.1.2 Edit User

Click Start→Settings→Account and Authority→Account→Edit User and then click  in the user list or double click the user to edit the user information. Click  to delete the user (the user *admin* cannot be deleted).

Username	Group	Edit	Delete
admin	Administrator		
<div> <div>Modify Password</div> <div>Modify Pattern Lock</div> <div>Edit User</div> <div>Edit Security Question</div> </div>			
1	Administrator		
<div> <div>Edit User</div> <div>Recover Password</div> </div>			

➤ Edit Security Question


You can set password security only for *admin*. Click “Edit Security Question” and then set questions and answers in the popup window. If you forget the password for *admin*, please refer to Q4 in [Appendix A FAQ](#) for details. The passwords of other users can be recovered by *admin* or the users that have the “Account and Authority” permission.

➤ Modify Password


Only the password of *admin* can be modified. Click “Modify Password” to pop up a window. Enter the current password and then set new password. Click “OK” to save the settings.

➤ **Modify Pattern Lock**

Click “Modify Pattern Lock” to pop up a window.

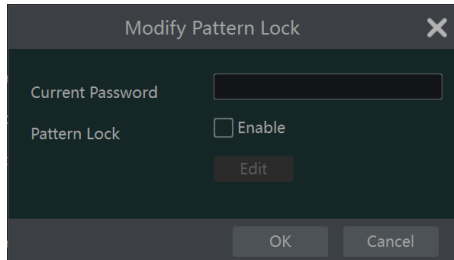

Input current password and then check “Enable” to set pattern lock.

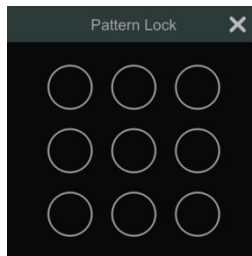



➤ **Recover Password**

Click “Recover Password” to reset the password to **123456**.




➤ **Edit User**

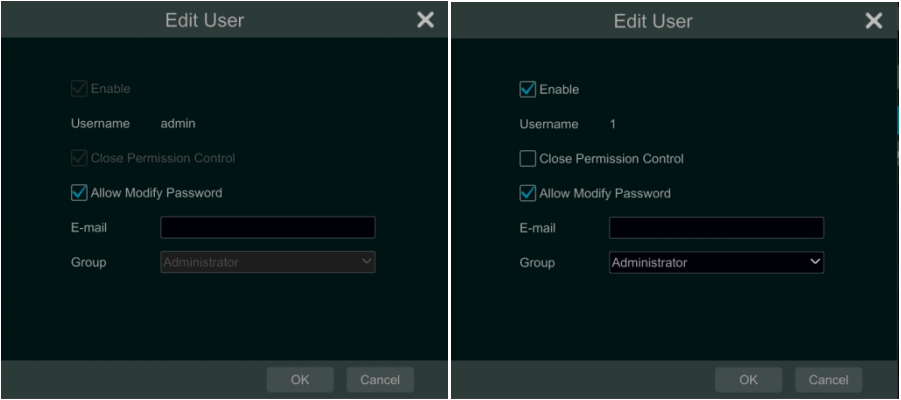Click “Edit User” to pop up the window as shown below. The **admin** is enabled, its permission control is closed and permission group cannot be changed by default. You can enable or disable other users (if disabled, the user will be invalid), open or close their permission control (if closed, the user will get all the permissions which **admin** has) and set their permission groups. Click “OK” to save the settings.

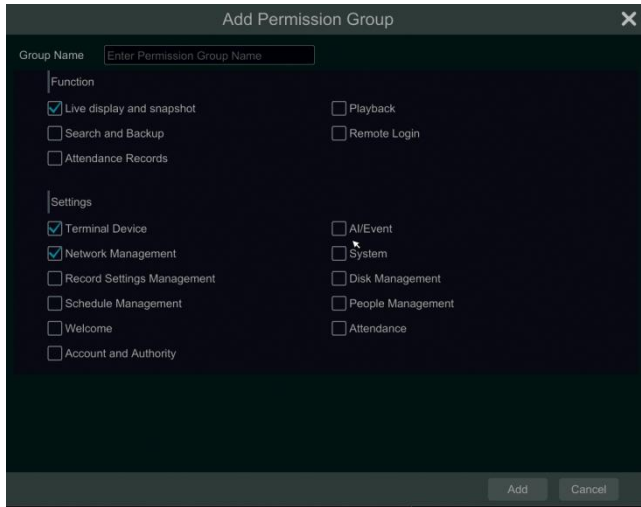




13.3.2 Edit Permission Group

Go to “Edit Permission Group” interface and then click  in the group list to edit the permission group (the operations of the “Edit Permission Group” are similar to that of the “Add Permission Group”, please see [13.3.1 Add Permission Group](#) for details). Click  to save the group as another group. Click  to delete the permission group. The three default permission groups (“Administrator”, “Advanced” and “Common”) cannot be deleted.



13.4 Block and Allow List

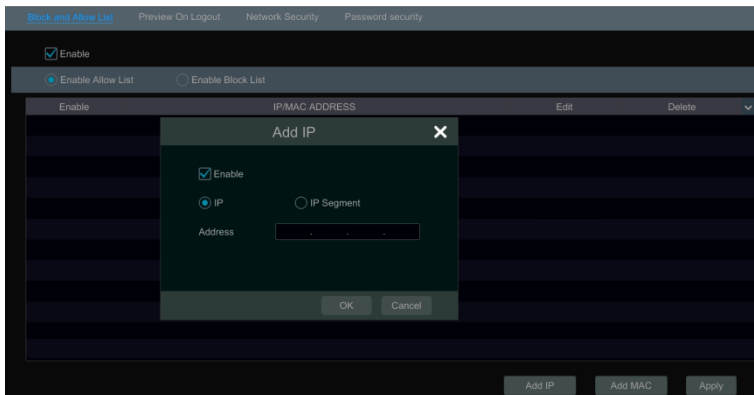① Click Start→Settings→Account and Authority→Security to go to the following interface.



② Check “Enable” and then choose “Enable Allow List (white list)” or “Enable Block List (black list)” (the PC client of which the IP address is in the white list can access SMT remotely

while the PC client in the black list cannot).

③ Add IP/IP segment/MAC. Click “Add IP” or “Add MAC” and then check “Enable” in the popup window (only if you check it can the IP/IP segment/MAC you add be effective). Enter the IP/IP segment/MAC and then click “OK”. In the above interface, click  to edit IP/IP segment/MAC, click  to delete it. Click “Apply” to save the settings.

13.5 Preview On Logout


Click Start→Settings→Account and Authority→Security→Preview on Logout to go to the following interface.

Set a camera and then enable or disable the preview permission on logout as required. If a camera’s preview permission on logout is “ON”, you can view the live image of the camera when the system is logged out, or the live image of the camera cannot be seen when logged out.



13.6 Network Security

Click Start→Settings→Account and Authority→Security→Network Security to go to the following interface. You can enable APR Guard.

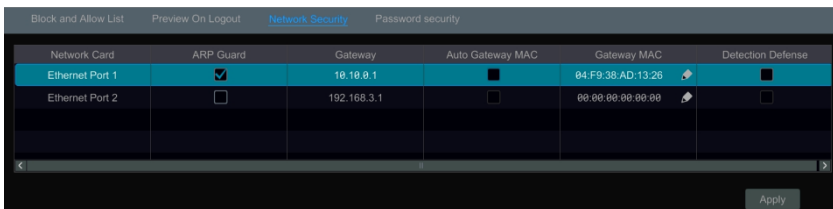

ARP Guard: Address Resolution Protocol Guard. This function can protect the LAN from APR attack and make the network run smoothly. If it is enabled, you can enable auto gateway MAC or manually set gateway MAC. Additionally, detection defense also can be enabled as needed.


13.7 Password Security

Click Start→Settings→Account and Authority→Security→Password Security to go to the following interface.

The screenshot shows a 'Password security' configuration window. It has a dark background with a title bar at the top. Below the title bar, there are two settings: 'Level' and 'Expiration Time'. The 'Level' dropdown menu is currently set to 'Weak'. The 'Expiration Time' dropdown menu is currently set to 'Never Expire'. At the bottom right of the window, there is an 'Apply' button.

In this interface, you can set the level and expiration time of the password.

13.8 View Online User

Click Start→Settings→Account and Authority→User Status to view the online user information(you can view the online user name, login type, IP address and login time; click  to pop up a window showing the preview occupied channel number and playback occupied channel number).

14 Device Management

14.1 Network Configuration

14.1.1 TCP/IP Configuration

Click Start→Settings→Network→TCP/IP to go to the following interface. Check “Obtain an IPv4 address automatically”, “Obtain an IPv6 address automatically” and “Obtain DNS automatically” to get the network addresses automatically, or manually enter the network addresses. You can modify the MTU value according to the network condition (MTU, Maximum Transmission Unit, can be modified according to network condition for higher network transmission efficiency). Click “Apply” to save the settings.

The screenshot shows the 'IP Address Settings' window for 'Ethernet Port 1 (Online)'. It has two main sections. The top section is for IPv4 and IPv6 settings. On the left, under 'Obtain an IPv4 address automatically' (checked), there are input fields for Address (192.168.7.194), Subnet Mask (255.255.248.0), Gateway (192.168.0.1), and MTU (1500). On the right, under 'Obtain an IPv6 address automatically' (checked), there are empty input fields for Address, Mask Length, and Gateway. An 'Advanced' button is located below the IPv4 fields. The bottom section is for DNS settings, with 'Obtain DNS automatically' checked and empty fields for Preferred DNS and Alternate DNS. An 'Apply' button is in the bottom right corner.

Note:

- **Internal Ethernet Port**

If you use the SMT with the PoE network ports, click “Internal Ethernet Port” to go to the following interface.

The internal Ethernet port is the port which is used to connect all the PoE ports with the SMT system. The PoE ports are available if the internal Ethernet port is online; if it is offline, all the PoE ports will be unavailable, may be the internal Ethernet port is broken. The network addresses of the internal Ethernet port can be changed to make the port in the same network segment with the IP cameras which are directly connected to the PoE ports of the SMT (it is not recommended to change the network addresses of the internal Ethernet port).

Mode: Long line mode (EPOE mode) or non-long line mode can be selectable. The non-long line mode is the default setting. If the transmission performance of your network cables connected the PoE ports and IPC are not so good or these network cables are very long, you can choose long line mode (EPOE mode).

14.1.2 Port Configuration

Click Start→Settings→Network→Port to go to the interface as shown below. Enter the HTTP port, HTTPS port and server port of the SMT, and then click “Apply” to save the settings. You can also enable and set RTSP port (please check “Anonymous” as required).

HTTP Port: the default HTTP port of the SMT is 80. The port number can be changed to others like 81. The port is mainly used to web client access. If you want to access the SMT through a web browser, you should enter IP address plus HTTP port in the address bar of the web browser like http://192.168.11.61:81.

HTTPS Port: the default HTTPS port of the SMT is 443.

HTTPS provides authentication of the web site and protects user privacy. How to use it?

① Enter IP address plus HTTP port in the address bar of the web browser. Then enter username and password to log in. Click Functional Panel→Network→HTTPS to go to the following interface.

② Install a certificate.

- * You can create a private certificate here. Click the “Create” button to create a private certificate. Enter the country (only two letters available), domain (SMT’s IP address/domain), validity date, password, province/state, region and so on. Then click “OK” to save the settings.
- * If there is a signed certificate, click “Browse” to select it and then click “Install” to install it.
- * Click “Create a certificate request” to enter the following interface.

Click “Create” to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, import the certificate to the device.

③ After the certificate has been installed, enable this function and apply it. Then the camera can be accessed by entering `https://IP: https port` via the web browser (eg. `https://192.168.1.201:443`).

Server Port: the default server port of the SMT is 6036. The server port number can be changed as required. The port is mainly used in network video management system.


Note: The HTTP port and server port of the SMT should be mapped to the router before you access the SMT via WAN.

third-party can further develop through API service.

Authentication: Basic authentication and digest authentication are optional.

14.1.3 PPPoE Configuration


Click Start→Settings→Network→PPPoE to go to the interface as shown below. Check “Enable” in “PPPoE Settings” and then enter the username and password obtained from the dealer. Click “Apply” to save the settings.

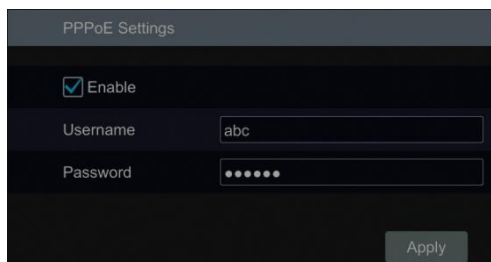

14.1.4 DDNS Configuration

The DDNS is used to control the dynamic IP address through domain name. You can access to the SMT easily if the DDNS is enabled and configured.

Click Start→Settings→Network→DDNS to go to the interface as shown below.

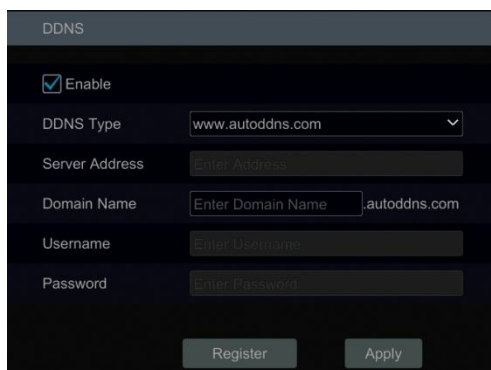

Check “Enable” and then select the DDNS type. Enter the server address, domain name, username and password according to the selected DDNS type. Click “Test” to test the effectiveness of the input information. If “www.autoddns.com” is selected, you need to enter the domain name only and then click “Register” to register the DDNS name. Click “Apply” to save the settings.

Then you can use you this domain name to access the device remotely.

14.1.5 E-mail Configuration


Click Start→Settings→Network→E-mail to go to the following interface.

Enter the sender's name, e-mail address, SMTP server and SMTP port (you can click "Default" to reset the SMTP port to the default value) and then enable or disable the SSL and attaching image. Select the username (the username list will be updated automatically according to the email address you enter) and enter the password of the sender and then click "Apply" to save the settings (you don't have to enter the username and password if "Anonymous Login" is enabled). Click "Test" to pop up a window. Enter the e-mail address of the recipient in the window and then click "OK". The e-mail address of the sender will send an e-mail to the recipient. If the e-mail is sent successfully, it indicates that the e-mail address of the sender is configured correctly.

Click "Edit Recipient" to go to the following interface.

No.	Recipients	Schedule	Delete
1	xxx@163.com	24x7	


Click "Add" and then enter the recipient's e-mail address and select the schedule (if a schedule is selected, the system will send the alarm email and the recipient will receive it only in the selected schedule time) in the popup window. Click "Add" in the window to add the recipient. You can also change the recipient's receiving schedule by clicking in the "Schedule"

column. Click  to delete the recipient in the list. Click “Apply” to save the settings. Click “Edit Sender” to go to the e-mail configuration interface of the sender.




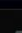
14.1.6 UPnP Configuration

By UPnP you can access the SMT through web client which is in WAN via router without port mapping.

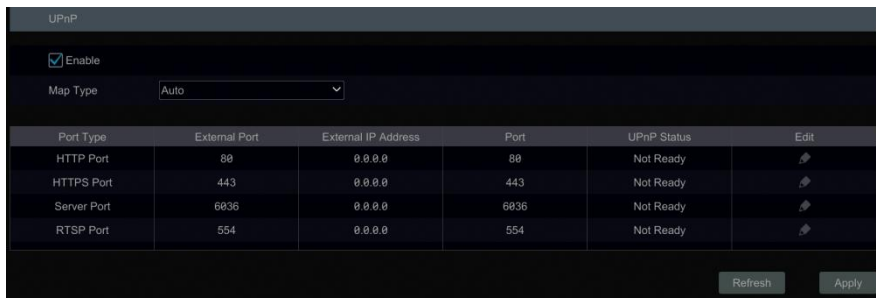- ① Click Start→Settings→Network→UPnP to go to the following interface.




The UPnP configuration interface shows a table of port mappings. The 'Enable' checkbox is checked, and the 'Map Type' is set to 'Auto'.

Port Type	External Port	External IP Address	Port	UPnP Status	Edit
HTTP Port	80	0.0.0.0	80	Not Ready	
HTTPS Port	443	0.0.0.0	443	Not Ready	
Server Port	6036	0.0.0.0	6036	Not Ready	
RTSP Port	554	0.0.0.0	554	Not Ready	


Buttons: Refresh, Apply

- ② Make sure the router supports UPnP function and the UPnP is enabled in the router.
- ③ Set the SMT's IP address, subnet mask and gateway and so on corresponding to the router.
- ④ Check “Enable” in the interface as shown below and then click “Apply”.

Click the “Refresh” button to refresh the UPnP status. If the UPnP status is “Invalid UPnP” after refreshing it a few times, the port number may be wrong. Please change the mapping type to “Manual” and then click  to modify the port until the UPnP status turns to “Valid UPnP”. Refer to the following picture. You can view the external IP address of the SMT. Enter the external IP address plus port in the address bar to access the SMT such as <http://183.17.254.19:81>.

14.1.7 802.1X

If it is enabled, the SMT data can be protected. When the SMT is connected to the network protected by the IEEE 802.1X, user authentication is needed.

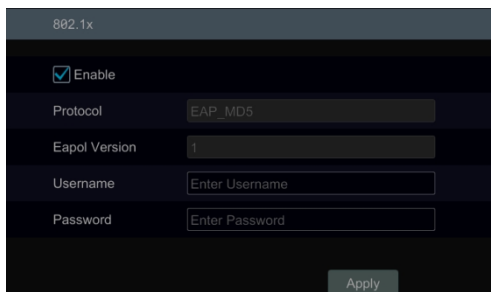

The 802.1X configuration interface shows the 'Enable' checkbox checked. The 'Protocol' is set to 'EAP_MD5', 'Eapol Version' is set to '1', and there are input fields for 'Username' and 'Password'.

Buttons: Apply

To use this function, the SMT shall be connected to a switch supporting 802.1x protocol. The switch can be considered as an authentication system to identify the device in a local network. If the SMT connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.


Protocol type and EAPOL version: Please use the default settings.

User name and password: The user name and password must be the same with the user name and password applied for and registered in the authentication server.

14.1.8 NAT Configuration

Click Start→Settings→Network→NAT to go to the interface for NAT configuration. Check “Enable” and then select the NAT server address. Click “Apply” to save the settings.

You can scan the QRCode through mobile client which is installed in the mobile phone or tablet PC to log in the mobile client instantly.

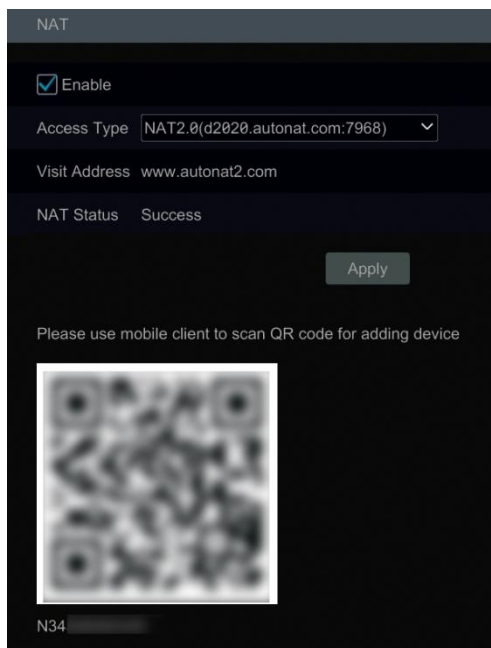

14.1.9 FTP Configuration

Click Start→Settings→Network→FTP to go to the interface for FTP configuration. Check “Enable” and enter the server name, port, username and password, max file size and remote directory.

FTP

☒ Enable

Server Address

Enter Address

Port

21

Username

Enter Username

Password

Enter Password

☐ Anonymous

Max File Size

64

M

Remote Directory

Uploading Settings

		Uploading record							Uploading Image
No.	Camera Name	Schedule	Motion	Intelligence	Sensor	Exception	Stream Type	Snapshot	
1	IPC	24x7	OFF	OFF	OFF	OFF	Sub Stream	OFF	
2	attendance terminal	24x7	OFF	OFF	OFF	OFF	Sub Stream	OFF	
3	facial ipc	24x7	OFF	OFF	OFF	OFF	Sub Stream	OFF	
4	ipc	24x7	OFF	OFF	OFF	OFF	Sub Stream	OFF	

Edit Schedule

Test

Apply

Additionally, you also can choose the records and image to upload here.

14.1.10 SNMP

- ① Click Start→Settings→Network→SNMP to go to the interface for SNMP configuration.

SNMP

☒

Enable SNMPv1

☒

Enable SNMPv2

SNMP Port

Read Community

Write Community

Trap Address

Trap Port

Apply


- ② Check SNMPv1 or SNMPv2 to enable this function.
- ③ Set the port of the SNMP.
- ④ Set the trap address and the trap port.
- ⑤ Click “Apply” to save the settings.

Trap Address: The IP address of SNMP host.

Trap Port: The port of SNMP host.

Tips: Before setting the SNMP, please download the SNMP software and manage to receive the device information via SNMP port. By setting the trap address, the device is allowed to send the alarm event and exception message to the monitoring center.


14.1.11 View Network Status

Click Start→Settings→Network→Network Status to view the network status or click  on the tool bar at the bottom of the live preview interface to view network status conveniently.

14.2 Basic Configuration

14.2.1 Common Configuration

Click Start→Settings→System→Basic→General Settings to go to the following interface. Set the device name, device No., language, video format and main output. Enable or disable wizard, “Log In Automatically”, “Log Out Automatically” (if checked, you can set the wait time), or “App Live Self-Adaption”. Click “Apply” to save the settings.

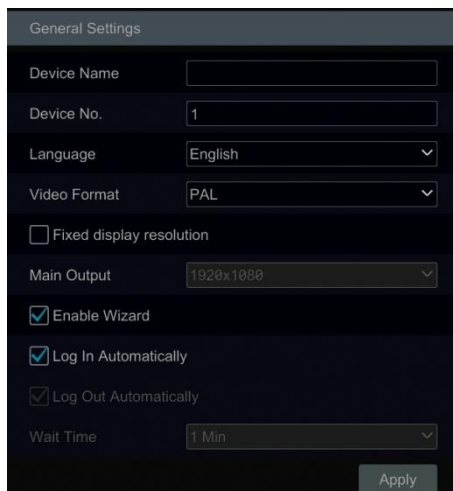

The image shows a 'General Settings' configuration window with a dark theme. It contains the following fields and controls:

- Device Name: A text input field.
- Device No.: A text input field containing the number '1'.
- Language: A dropdown menu showing 'English'.
- Video Format: A dropdown menu showing 'PAL'.
- Fixed display resolution: An unchecked checkbox.
- Main Output: A dropdown menu showing '1920x1080'.
- Enable Wizard: A checked checkbox.
- Log In Automatically: A checked checkbox.
- Log Out Automatically: A checked checkbox.
- Wait Time: A dropdown menu showing '1 Min'.
- An 'Apply' button at the bottom right.

Device Name: The name of the device. It may display on the client end or CMS that help user to recognize the device remotely.

Video Format: Two modes: PAL and NTSC. Select the video format according to the camera.


Main Output: Enable “Fixed display resolution” and then select the main output as needed.

14.2.2 Date and Time Configuration

Click Start→Settings→System→Basic→Date and Time to go to the interface as shown below.

Set the system time, date format, time format and time zone of the SMT. The default time zone is GMT+08 Beijing, Hong Kong, Shanghai, Taipei. If the selected time zone includes DST, the DST of the time zone will be checked by default. Click “Apply” to save the settings.

You can manually set the system time or synchronize system time with network through NTP.


Manual: select “Manual” in the “Synchronous” option and then click  after the “System Time” option to set the system time.

NTP: select “NTP” in the “Synchronous” option and then enter the NTP server.

Date and Time

System Time

2019/07/31 05:01:29

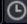

Date Format

Year/Month/Day

▼

Time Format

24-Hour

▼

Sync Time With Network

Synchronous

Manual

▼

NTP Server

time.windows.com

▼

Time Zone / DST

Time Zone

GMT-05 New York, Toronto, Wash▼

DST

☒ Enable

14.2.3 PoE Power Management

Click Start→Settings→System→Basic→PoE Power Management to go to the following interface. This function is only available for the POE device.

PoE Port	Enable	Current Power
Poe[01]	ON ▼	0.00W
Poe[02]	ON ▼	0.00W
Poe[03]	ON ▼	0.00W
Poe[04]	ON ▼	0.00W
Poe[05]	ON ▼	0.00W
Poe[06]	ON ▼	0.00W
Poe[07]	ON ▼	0.00W
Poe[08]	ON ▼	0.00W


In this interface, you can view the the current power consumption of the added POE camera/panel. The PoE power supply of the PoE camera/panel can be enabled or disabled by selecting “ON” or “OFF” as needed.

14.2.4 Recorder OSD Settings

Click Start→Settings→System→Basic→Recorder OSD settings to go to recorder OSD setting interface. OSD name and icon can be enabled here.

14.3 Factory Default

Click Start→Settings→System→Maintenance→Factory Default to go to the following interface. Please choose the item as needed.

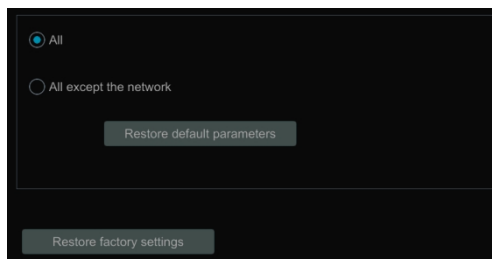

Note: Resetting to the factory default settings will not change time zone.

14.4 Device Software Upgrade

● Upgrade via SMT

You can click Start→Settings→System→Information→Basic to view MCU, kernel version and firmware version and so on. Before upgrade, please get the upgrade file from your dealer.

The upgrade steps are as follows:

- ① Copy the upgrade software (.tar) into the USB storage device.
- ② Insert the USB storage device into the USB interface of the SMT.
- ③ Click Start→Settings→System→Maintenance→Upgrade to go to “Upgrade” interface. Select the USB device in “Device Name” option and go to the path where the upgrade software exists. Select the upgrade software and then click “Upgrade”. The system may automatically restart during upgrading. Please wait for a while and do not power off the SMT during upgrading.

Note: The file system of the USB mobile device which is used for upgrading, backing up and restoring should be FAT32 format.

● Upgrade via Web Client

- ① Log in the web client (see chapter 15.2/15.3 for details). Then click Settings→System→Maintenance→Upgrade.
- ② Click “Browse” to select the upgrade file you get from your supplier.
- ③ Click “Upgrade” to upgrade your device.

14.5 Backup and Restore

You can back up the configuration file of the SMT by exporting the file to other storage devices; you can recover the configuration to other SMTs which are of the same model with the SMT by importing the configuration file to other SMTs for time saving.

Insert the USB storage device into the USB interface of the SMT and then click Start→Settings→System→Maintenance→Backup and Restore to go to the interface.

- **Backup**


Select the USB device in “Device Name” option; go to the path where you want to store the configuration backup file and then click “Backup”; finally click “OK” in the popup window.

- **Recover**

Select the USB device in “Device Name” option; find the configuration backup file and then click “Recover”; finally click “OK” in the popup window.


14.6 Restart Automatically

You can set the automatic restart time for the SMT to maintain it regularly. Click Start→Settings→System→Maintenance→Auto Maintenance to go to the interface as shown below. Enable auto maintenance, set the interval days and point of time and then click “Apply” to save the settings. The SMT will restart automatically at the pointed time every interval day.

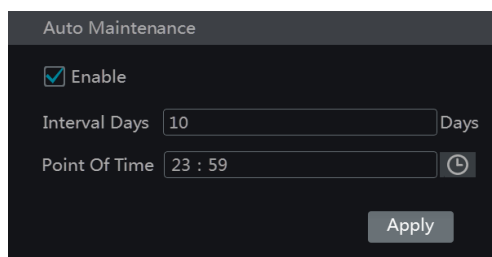



The screenshot shows a dark-themed window titled "Auto Maintenance". It contains the following elements: a checked checkbox labeled "Enable"; a text input field for "Interval Days" with the value "10" and a "Days" label to its right; a text input field for "Point Of Time" with the value "23 : 59" and a clock icon to its right; and an "Apply" button at the bottom right.

14.7 View Log

Click Start→Settings→System→Maintenance→View Log to go to the log view interface. Select the log main type, click  to set start time and end time and then click “Search”. The searched log files will be displayed in the list.

Main Type All Alarm Operation Settings Exception						
Start Time		05/12/2020 12:00:00 AM	🕒	End Time		05/14/2020 11:59:59 PM 🕒
		Search		Export		
No.	Main Type	Log Time	Content	Details	Play	
1	Alarm	05/14/2020 03:46:58 AM	Motion Alarm	ipc	📄	▶
2	Alarm	05/14/2020 03:46:27 AM	Motion Alarm	ipc	📄	▶
3	Alarm	05/14/2020 03:46:16 AM	Motion Alarm	ipc	📄	▶
4	Alarm	05/14/2020 03:46:10 AM	Motion Alarm	ipc	📄	▶
5	Alarm	05/14/2020 03:45:48 AM	Motion Alarm	facial ipc	📄	▶
6	Alarm	05/14/2020 03:45:33 AM	Motion Alarm	ipc	📄	▶
7	Alarm	05/14/2020 03:45:15 AM	Motion Alarm	facial ipc	📄	▶
8	Exception	05/14/2020 03:44:57 AM	IPC Offline	attendance terminal Address:10...	📄	—
9	Alarm	05/14/2020 03:44:54 AM	Motion Alarm	facial ipc	📄	▶
10	Alarm	05/14/2020 03:44:49 AM	Motion Alarm	ipc	📄	▶
11	Alarm	05/14/2020 03:44:26 AM	Motion Alarm	facial ipc	📄	▶
12	Alarm	05/14/2020 03:43:50 AM	Motion Alarm	facial ipc	📄	▶
13	Alarm	05/14/2020 03:43:48 AM	Over Temp	attendance terminal---Stranger	📄	—
14	Alarm	05/14/2020 03:43:34 AM	Motion Alarm	ipc	📄	▶
15	Alarm	05/14/2020 03:43:28 AM	Over Temp	attendance terminal---Stranger	📄	—
16	Alarm	05/14/2020 03:43:22 AM	Motion Alarm	ipc	📄	▶
17	Alarm	05/14/2020 03:43:16 AM	Over Temp	attendance terminal---Stranger	📄	—

Current Page: 1 / 100, All 5000



Choose the log file in the list and then click “Export” button to export the log file. Click  on the “Content” title bar to pop up a menu list. Check contents in the menu list and then the log list will show the checked log contents only. Click  to play the video log.


14.8 View System Information

Click Start→Settings→System→Information and then click the corresponding menu to view the “Basic”, “Camera Status”, “Alarm Status”, “Record Status”, “Network Status” and “Disk” information of the system.

15 Remote Surveillance


15.1 Mobile Client Surveillance

- ① Enable NAT in the SMT. Refer to [14.1.8 NAT Configuration](#) for details.
- ② Download and install the mobile client “SuperLive Plus” into the mobile device with the Android or iOS system.
- ③ Run the mobile client, go to the “Add Device” interface and then click  to scan the QRCode of the SMT (Click  in the live display interface to view the QR code).
- ④ After scanning the QRCode successfully, enter the login password to log in mobile client.

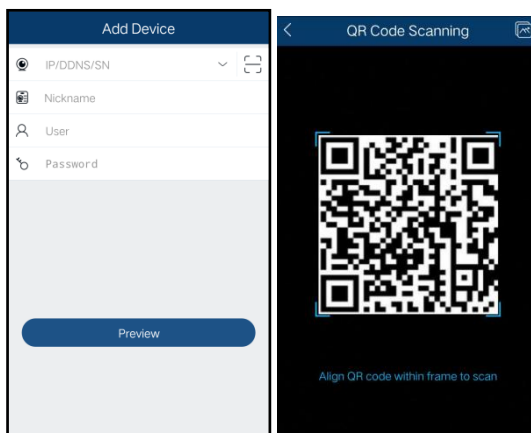

15.2 Web LAN Access

- ① Click Start→Settings→Network→TCP/IP to go to the “TCP/IP” interface. Set the IP address, subnet mask, gateway, preferred DNS and alternate DNS of the SMT.
- ② Open a web browser on your computer, enter the IP address of the SMT in the address bar and then press enter to go to the login interface as shown below. You can change the display language on the top right corner of the login interface. Enter the username and password of the SMT in the interface and then click “Login” to go to the live preview interface.

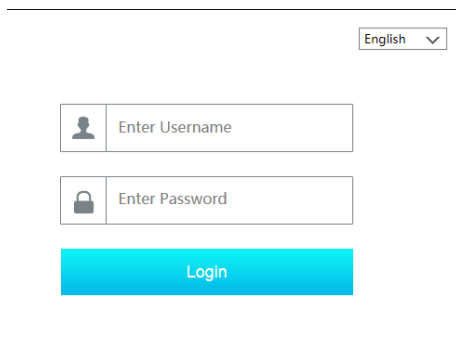


Notes:


1. Please make sure that the IP address of the SMT and the computer are both in the same local network segment. For example, supposing that the IP address of the computer is 192.168.1.41, the IP address of the SMT shall be set to 192.168.1.XXX.
2. If the HTTP port of the SMT is not 80, but other number instead, you need to enter the IP address plus port number in the address bar when accessing the SMT over network. For example, the HTTP port is 81. You should enter `http://192.168.1.42:81` in the address bar.

15.3 Web WAN Access

➤ NAT Access

- ① Set the network of the SMT. Please refer to [14.1.1 TCP/IP Configuration](#) for details.
- ② Enable NAT and then set the NAT server address. Please refer to [14.1.8 NAT Configuration](#) for details.
- ③ Open a web browser on your computer, enter the NAT server address **www.autonat2.com** in the address bar and then press enter to go to the interface as shown below (download and install the relative plug-in according to the tip if you access the SMT through NAT for the first time).

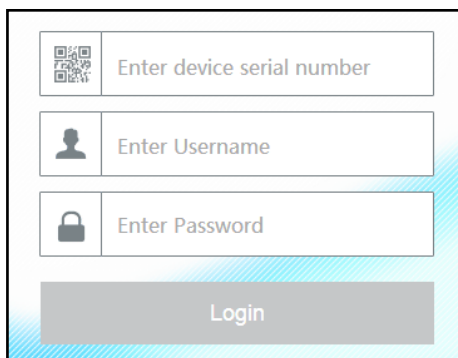

Enter the serial number (click  on the tool bar at the bottom of the live preview interface to see the serial number of the SMT), user name (the user name of the SMT, **admin** by default) and password (the password of the SMT) of the SMT, select the display language on the top right corner of the interface and then click “Login” to go to the web client interface.

➤ PPPoE Access

- ① Click Start→Settings→Network→PPPoE to go to the “PPPoE” interface. Check “Enable” in the “PPPoE settings” and then enter the username and password you get from your ISP. Click “Apply” to save the settings.
- ② Click Start→Settings→Network→Network Status to view the IP address of the SMT.
- ③ Open a web browser on your computer, enter the IP address of the SMT like http://210.21.229.138 in the address bar and then press enter to go to the login interface. Enter the username and password of the SMT in the interface and then click “Login” to go to the live preview interface.

➤ Router Access

- ① Click Start→Settings→Network→TCP/IP to go to the “TCP/IP” interface. Set the IP address, subnet mask, gateway, preferred DNS and alternate DNS of the SMT.
- ② Set the HTTP port (it is suggested to modify the HTTP port because the default HTTP port 80 might be taken up) and enable UPnP function in both the SMT and the router. If the UPnP function is not available in the router, you need to forward the LAN IP address, HTTP port and server port of the SMT to the router. Port mapping settings may be different in different routers, so please refer to the user manual of the router for details.
- ③ Get the WAN IP address of the SMT from the router. Open a web browser on your computer, enter the WAN IP address plus HTTP port like http://116.30.18.215:100 in the address bar and then press enter to go to the login interface. Enter the username and password of the SMT in the interface and then click “Login” to go to the live preview interface.

Note: If the WAN IP address is a dynamic IP address, it is necessary for you to use the domain name to access the SMT. Click Start→Settings→Network→DDNS to set DDNS (see [14.1.4 DDNS Configuration](#) for details). By using DDNS function you can use the domain name plus HTTP port like http://sunshine.SMTdydns.com:100 to access the SMT via internet.

15.4 Web Remote Control

The supported browsers for remote access are IE8/9/10/11, Firefox, Opera and Chrome (available only for the versions lower than 45) in Windows system and Safari in MAC system. When you access the SMT through web client for the first time, you need to download and install the relative components for normal preview and playback. Please refer to the tips in the remote interfaces for details. The buttons and icons on the top right corner of the remote interface are introduced as follows.


admin: the current login username.

Modify Password: click it to change the password of the current login user. Enter the current password and then set a new password in the popup window. Click “OK” to save the new password.


Logout: click it to log out and return to the login interface.

15.4.1 Live View via Web Client



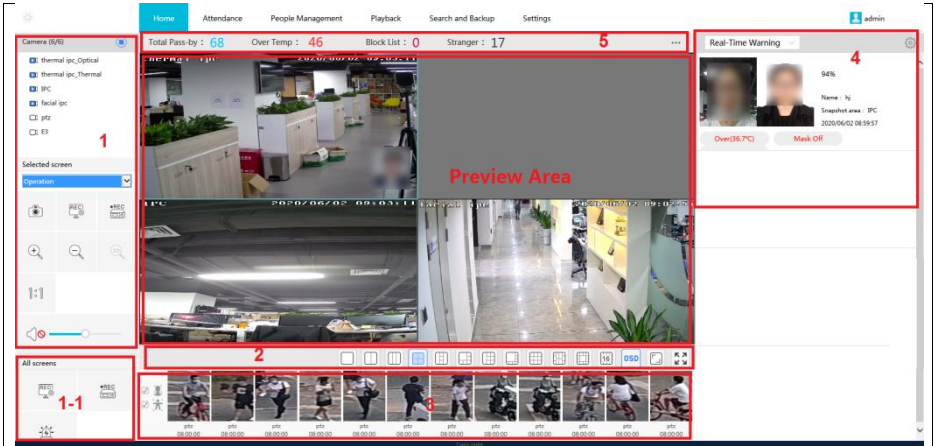



Click “Live Display” in the remote interface to go to the preview interface.







➤ Start Preview





Select a window in the preview area and then click one online camera in Area 1 to preview the camera in the window. You can click  in Area 1 to preview all the cameras.

Button Descriptions of Area 1




Button	Meaning
	Click it to take a snapshot.
	Click it to start record to computer
	Click it to start record to the HDDs of the SMT.
	Click it to zoom in the image of the camera and then drag the mouse on the camera image to view the hidden area.
	Click it to zoom out the image of the camera.
	The 3D zoom in function is designed for P.T.Z. Click it and then drag the image to zoom in or zoom out the image; click the image on different areas to view the image of the dome omni-directionally.

	Click it to close the preview of all cameras.
	Click it to close the preview of the camera.
	Click it to display original size
	Click it to enable audio and then drag the slider bar to adjust the volume. You can listen to the camera audio by enabling audio.

Button Descriptions of Area 2


Button	Meaning
	Screen mode button.
	Click it to disable OSD. Click it again to enable OSD.
	Click it to expand the preview area.
	Click it to show full screen.

Button Descriptions of Area 1-1

Button	Meaning
	Click it to start record of all cameras to computer
	Click it to start record of all cameras to the HDDs of the SMT.
	Manual alarm out

Stream Settings


In Area1, click  to select stream.

Stream 


Main S...

Sub Str...


Resolution



704x480 

FPS

30 

Max Bitrate

512Kbps 

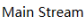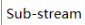Click one camera window in the preview area and then click  to set the camera's live preview stream and record stream to main stream in manual record mode; click  to set the camera's live preview stream and record stream to sub stream. In sub stream tab, set the

resolution, FPS and bitrate and then click “Apply” to save the settings.

Descriptions of Area 3


This area is the real-time captured picture display area, including face pictures and human body pictures.

Descriptions of Area 4

This area is the face match view and real-time warning display area. In this area, you can view the face match pictures, body temperature, mask status, the name of the captured person, snapshot area, snapshot time, etc.

Descriptions of Area 5

This area is the statistical information display area.

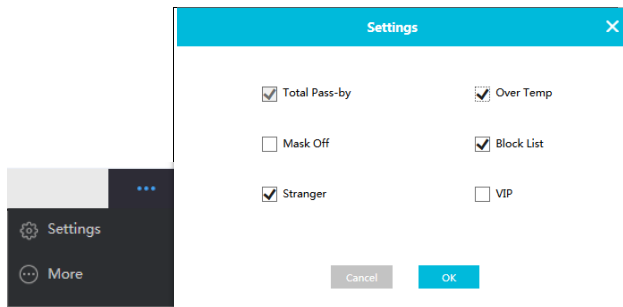

Click  in this area to view more menus.

Click “Settings” to select the statistical display items in the live display interface.

Click “More” to go to the statistics interface. (See [9 Statistics](#) for details).

➤ Home Introduction

Move the cursor on the “Home”. This will bring a pull-down list. You can view more menus, such as *Live Display*, *Smart Temperature Screening*, *Flow Control*, *Statistics and Welcome*. The above-mentioned functions in the web client are similar to that of the device. Please refer to the corresponding chapter for details.

15.4.2 People Management via Web Client


The settings of people management in the web client are the same as the people management setup of the device. Please refer to [6 People Management](#) for more details.


15.4.3 Attendance Management via Web Client


The settings of attendance management in the web client are the same as the attendance setup of the device. Please refer to [7 Attendance Management](#) for more details.

15.4.4 Face Greeting

Click Home → Welcome to go to the face greeting interface.

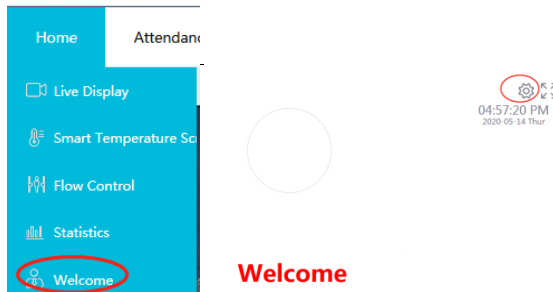


Click  to enter the face greeting setting interface.

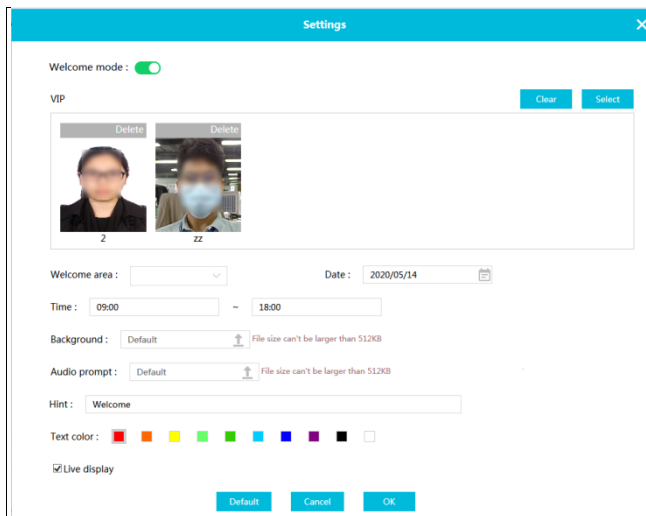

The setting steps are as follows:

1. Enable welcome mode.
2. Select people from VIP group. Click “Select” to select the people.
3. Select the welcome area, date and time.
4. Upload the background picture and audio prompt.
5. Set the text prompt and select the text color.
6. Enable “Live display” as needed.
7. Click “OK” to save settings.


When the VIP guests arrive, the captured picture and the pre-defined welcome word will be displayed. The welcome voice will be broadcasted if you upload it in advance.

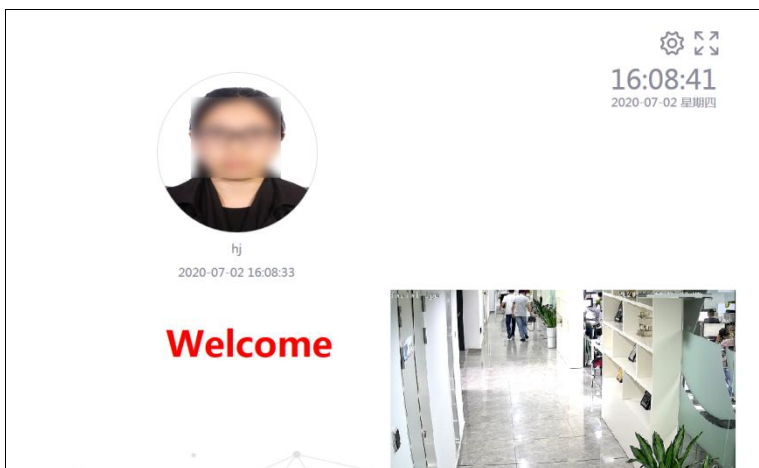

Click to display full screen.

15.4.5 Playback via Web Client

Click “Playback” in the remote interface to go to the playback interface.

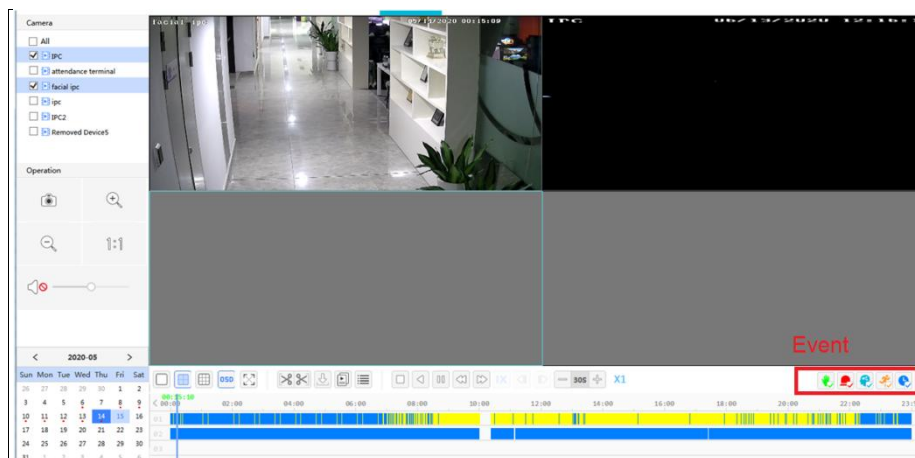

- ① Check camera and set the record date on the calendar beside the time scale.
- ② Select the event.
- ③ The record will automatically play on the window.

The operation of the playback time scale is similar to that of the time scale of the SMT. Please refer to [11.2 Playback Interface Introduction](#) for details.

Introduction of playback control buttons:

Button	Meaning
	Screen display mode
	Click to disable OSD; click it again to enable OSD
	Full Screen
	Backup start time button. Click the time scale and then click it to set the backup start time.
	Backup end time button. Click the time scale and then click it to set the backup end time.
	Backup button.
	Backup tasks button. Click it to view the backup status.
	Event list button. Click it to view the event record of manual/schedule/sensor/motion.
	Stop button.
	Rewind button. Click it to play video backward.
	Pause button.
	Play button. Click it to play video forward.
	Deceleration button. Click it to decrease the playing speed.
	Acceleration button. Click it to increase the playing speed.
	Previous frame button. It works only when the forward playing is paused in single screen mode.
	Next frame button. It works only when the forward playing is paused in single screen mode.
	Click to step backward 30s and click to step forward 30s.

15.4.6 Search and Backup via Web Client

Click “Search and Backup” in the remote interface to go to the backup interface. Please refer to [11 Playback & Backup](#) for details.

15.4.7 Settings via Web Client

Click “Settings” in the live display interface and then configure the camera, record, alarm, disk, network, account and authority and system of the SMT remotely. All of these settings are similar to that of the SMT (See the configurations of the SMT for details).

Local Settings: click it to change the local settings. Set the snapshot number and click “Browse” to set the snapshot path and record path as shown below. Click “Apply” to save the settings.

Snapshots number	<input type="text" value="5"/>	▼
Save snapshots to	<input type="text" value="C:\Users\Administrator\Pictures"/>	<input type="button" value="Browse"/>
Save record files to	<input type="text" value="C:\Users\Administrator\Videos"/>	<input type="button" value="Browse"/>
<input type="button" value="Apply"/>		

15.4.8 Upgrade via Web Client

Click Settings→System→Maintenance→Upgrade.

Home	Attendance	People Management	Playback	Search and Backup	Settings
Maintenance > Upgrade					
Please select the upgrading file: <input type="text"/> <input type="button" value="Browse"/> <input type="button" value="Upgrade"/>					
Note: The upgrading process will take a few minutes. The device will automatically reboot after the upgrade is complete. please don't					

Get the upgrade file from your supplier and then save it in your local PC. Click “Browse” to select your upgrade file and then click “Upgrade”. The upgrade requirement here is the same as the upgrade from the device.

Appendix A FAQ

Q1. Why can't I find the HDD?

- a. Please check the power and SATA data cables of the HDD to make sure they are well connected.
- b. For some SMTs with the 1U or small 1U case, the power of the adapter may be not enough for operating them. Please use the power adaptor supplied along with the SMT.
- c. Please make sure the HDDs are compatible with the SMT. See [Appendix C Compatible Device List](#) for details.
- d. The HDD could have gone bad.

Q2. Why are there no images output in some or all of the camera windows?

- a. Please make sure the resolutions of the cameras are supported by the SMT.
- b. Please make sure the network cables of the IP camera and SMT are both connected properly and the network parameters are set correctly.
- c. Please make sure the network and the switch both work normally.

Q3. The screen has no output after booting the SMT normally.

- a. Please make sure the screen, HDMI or VGA cables are good and well connected.
- b. Please make sure the screen supports the resolution of 1280*1024, 1920*1080 or 3840*2160 (4K*2K). The SMT cannot self-adapt to the screen of which the resolution is lower than 1280*1024, and then the screen will remind you that the screen resolution is not supported by the SMT or just have no display. Please change a screen at 1280*1024, 1920*1080 or 3840*2160 resolution before booting the SMT.

Q4. Forget the passwords?

- a. The password for **admin** can be reset through “Edit Security Question” function. Click “Edit Security Question” in the login window and then enter the corresponding answer of the selected question in the popup window. After you correctly answer all questions, you can reset the password for **admin**. If you forget the answer of the question, this way will be invalid, please contact your dealer for help.
- b. The passwords of other users can be reset by **admin**, please refer to [13.1.2 Edit User](#) for details.

Q5. The SMT cannot add up to the maximum number of IP cameras?

Take the 8 CH SMT as an example. Some 8CH SMT support a maximum of 80Mbps bandwidth input (the real product shall prevail). Refer to the picture below. The remaining bandwidth should be larger than the bandwidth of the IP camera you want to add, or you would fail to add the IP camera. You should lower the added cameras' bitrate to release the bandwidth. It is recommended to add cameras by “Quickly Add” for batch adding.

Search Camera

Add Camera

No.	Camera Name	Type	Status	Model	Preview	Edit	Delete	Detail
1	IPC	Attendance Terminal	Offline	E2128-TM				
2	attendance terminal	Attendance Terminal	Offline	E2128-TM/TP				
3	facial ipc	Facial IPC	Online	TD-9523A3-FR				
4	ipc	IP Camera	Online	TD-9523M2H				
5	IPC2	Facial IPC	Online	TD-9423A3-FR				

Camera Max Number: 8

Remain Bandwidth: 65 80 Mb

Q6. The IP camera which connects to the PoE port of the SMT cannot be displayed automatically in the camera list, why?

a. Please check whether the resource of the PoE port is occupied by another IP camera that is added through network.

- Take the 16 CH SMT with 8 PoE ports as an example. The resource distribution of the 16 CH IP cameras is shown in the picture below.

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	CH9	CH10	CH11	CH12	CH13	CH14	CH15	CH16
								POE-1	POE-2	POE-3	POE-4	POE-5	POE-6	POE-7	POE-8

When you add IP cameras through network, the IP cameras will occupy the resource from CH1, CH2, CH3, CH4...by the adding sequence; if you directly connect the IP cameras to the PoE ports of the SMT, the IP cameras will occupy the resource from CH9 to CH16 according to the number of the PoE port each IP camera is connecting to.

Supposing that 12 CH IP cameras have been added to the SMT through network and no IP camera has been directly connected to the PoE port. The 12 CH IP cameras occupy the 8 network resources from CH1 to CH8 and 4 PoE resources from CH9 to CH12 which are supposed to be occupied by connecting the IP cameras directly. In this situation, if you directly connect one IP camera to PoE5, PoE6, PoE7 or PoE8, the IP camera will be displayed in the camera list automatically; if you connect it to PoE1, PoE2, PoE3 or PoE4, it won't be displayed in the camera list by showing resource conflict; if you just need to connect it to PoE1, PoE2, PoE3 or PoE4, you should first delete the IP camera which occupies the PoE port resource and then reconnect it to the PoE port.

- Take the 8 CH SMT with 8 PoE ports as another example. The resource distribution of the 8 CH IP cameras is shown in the picture below and the adding rules of the IP cameras are similar to the rules mentioned in the above. Please refer to the above for details.

CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
POE-1	POE-2	POE-3	POE-4	POE-5	POE-6	POE-7	POE-8

b. Please make sure that the internal Ethernet port and the IP camera which directly connects

to the PoE port through ONVIF protocol are in the same network segment.


The internal Ethernet port and the IP camera which directly connects to the PoE port through ONVIF protocol should be in the same network segment, or you will fail to add the IP camera. Log in the IP camera's web client and then enable DHCP (obtain an IP address automatically); or manually change the IP address of the IP camera to make it in the same network segment with the internal Ethernet port.

c. Check whether the number of the added IP camera is the maximum.


If the number of the added IP camera is the maximum, the system will show you the message that the IP camera number is beyond the maximum when you directly connect another IP camera to the available PoE port and thus you will fail to add the IP camera.

Q7. The IP camera which directly connects to the PoE port of the SMT through ONVIF protocol is shown in the camera list, but there is no image output, why?

Please make sure the username and password of the IP camera are correct. The IP camera's username and password can be modified through the two ways mentioned as below.

① Click "Edit Camera" in the Camera module of the setup panel to go to the interface as shown below. Click  to modify the username and password of the IP camera (enter the correct username and password of the IP camera in the popup window and then click "OK").



② Go to the live preview interface and then click  in the preview window of the IP camera to edit the IP camera's username and password.

Q8. The system cannot record, why?


- Make sure the HDD was formatted prior to use.
- The record schedule has not been set in manual record mode. Please refer to [10.3.2 Record Schedule Configuration](#) for details.
- Maybe HDD is full and thus the SMT is not able to record. Check HDD information from Disk Management and if required, please enable the recycle function (please see [10.1.2 Advanced Configuration](#) for details).
- There is no disk but cameras in the disk group, so please add at least one disk to the group. Refer to [10.5.2 Storage Mode Configuration](#) for details.
- The HDD could have gone bad. Please change another one.


Q9. Fail to access the SMT remotely through IE.

- Please make sure the IE version is IE8 or above.

- b. Please check whether the PC has enabled the firewall or installed the antivirus software. Please try to access the SMT again after you disable the firewall and stop the antivirus software.
- c. Allow & block list may have been set in Account and Authority setting. The PC of which the IP address is in the black list or out of the white list cannot access the SMT remotely.

Q10. ActiveX control cannot be downloaded. What can I do?

- a. IE browser blocks ActiveX control. Please do setup as per the steps mentioned below.
 - ① Open IE browser. Click  → Internet Options.

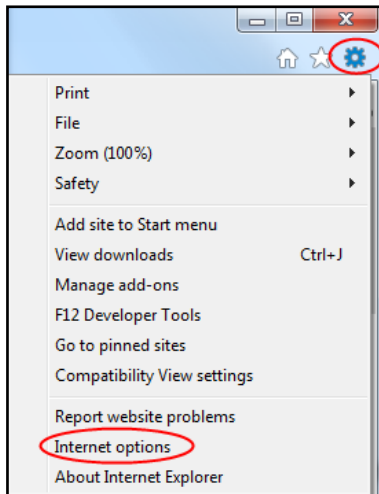

- ② Select Security → Custom Level. Refer to Fig10-1.
 - ③ Enable all the sub options under “ActiveX controls and plug-ins”. Refer to Fig 10-2.
 - ④ Then click “OK” to finish setup.
- b. Other plug-ins or anti-virus may block ActiveX. Please disable or do the required settings.

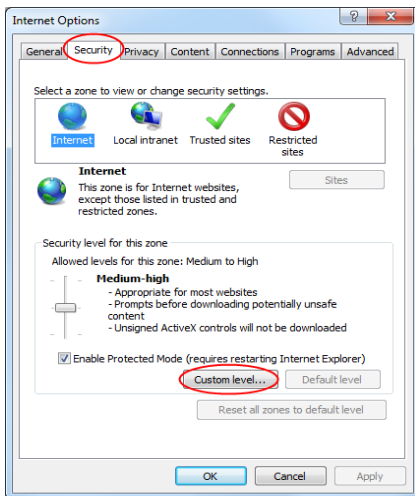


Fig 10-1

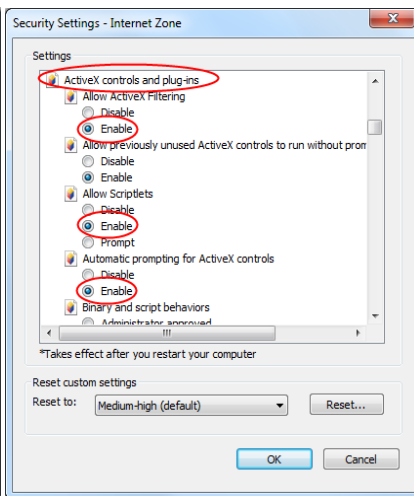



Fig 10-2

Q11. How to play the backup file?

- a. Recorded video backed up by SMT: insert the USB device in which the recorded video backup files is saved to the USB interface of the PC and then open the USB device path. The recorded video can be backed up in the private format and AVI format by SMT.
 - If you select the private format when backing up recorded video by SMT, a RPAS compression package will be backed up to the USB device automatically along with the recorded video data. Uncompress the “RPAS.zip” and then click “RPAS.exe” to set up RPAS. After the setup is completed, open RPAS player and then click “Open Folder” in the middle of the interface to select the record data. Refer to Fig 11-1.

Select camera in the resource tree on the left side of the interface to play the camera record. Click  on the tool bar under the camera image to enable audio. Refer to Fig 11-2.

Note: The record will not have audio output if you disable the audio when recording by SMT. Please see [10.1.1 Mode Configuration](#) and [10.2 Encode Parameters Setting](#) for details.

- If you select the AVI format when backing up recorded video by SMT, the recorded video backup data can be played by the video player which supports this format.
- b. Recorded video backed up through web. The recorded video can only be backed up with AVI format through web. The recorded video can be backed up to PC and played by the video player which supports this format.

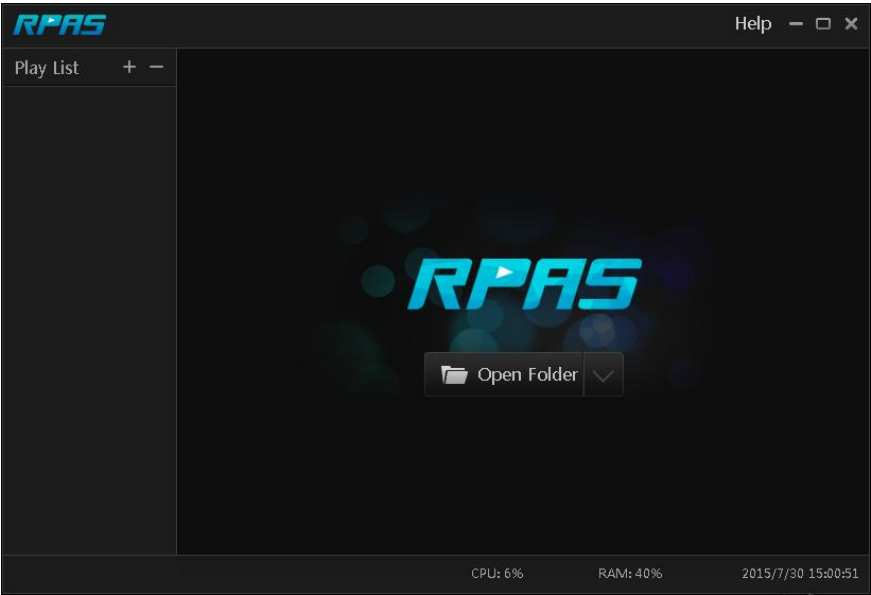


Fig 11-1

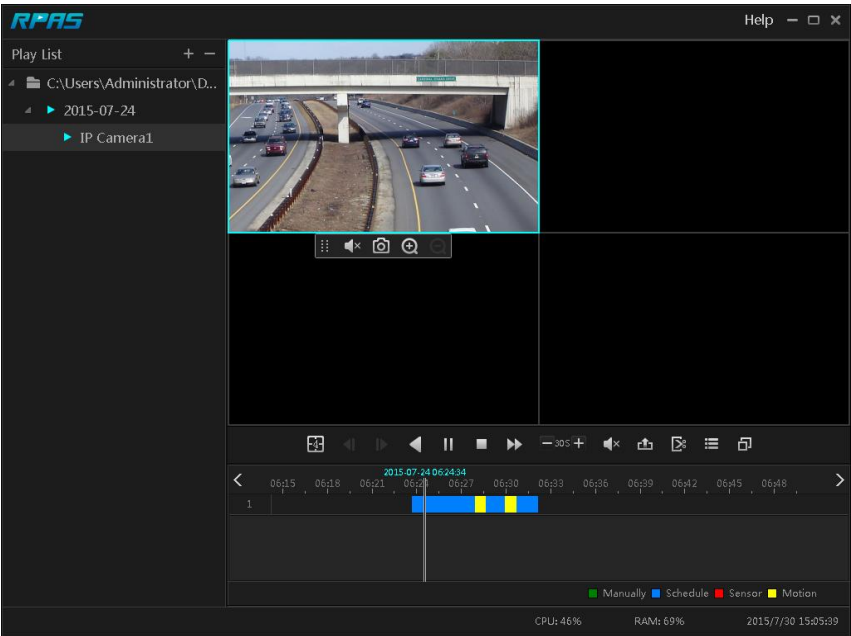


Fig 11-2

Appendix B Calculate Recording Capacity

The recording capacity is mainly up to the record resolution, record stream and bitrate. Different image quality parameters decide different disk capacity occupation in equal times. The bigger the record resolution, record stream and record bitrate is, the more disk capacity is taken up in equal times. The calculation format of recording capacity is shown as below.

Recording Capacity (MB) = Bitrate (Kbps) ÷ 1024 ÷ 8 × 3600 × Recording hours per day × Record Storage Days × channel numbers

3600 means record for an hour(1TB=1024GB , 1GB=1024MB , 1MB=1024KB , 1Byte=8bit).

Record Bitrate (Kbps)	Used Space (MB/H)	Used Space (MB/D)
10240	4500	108000
8192	3600	86400
6144	2700	64800
4096	1800	43200
3072	1350	32400
2048	900	21600
1024	450	10800
768	337.5	8100
512	225	5400
384	168.75	4050
256	112.5	2700

The table below shows the recording capacity requirements for record storage in 30 days.

Record Bitrate (Kbps)	Recording Capacity(TB)					
	1CH	4CH	8CH	16CH	32CH	64CH
10240	3.09	12.36	24.72	49.44	98.88	197.76
8192	2.48	9.89	19.78	39.56	79.11	158.21
6144	1.86	7.42	14.84	29.67	59.33	118.66
4096	1.24	4.95	9.89	19.78	39.56	79.11
3072	0.93	3.71	7.42	14.84	29.67	59.33
2048	0.62	2.48	4.95	9.89	19.78	39.56
1024	0.31	1.24	2.48	4.95	9.89	19.78
768	0.24	0.93	1.86	3.71	7.42	14.84
512	0.16	0.62	1.24	2.48	4.95	9.89
384	0.12	0.47	0.93	1.86	3.71	7.42
256	0.08	0.31	0.62	1.24	2.48	4.95

For instance, there is a 32CH SMT recording 24 hours per day and the record stores for 30 days. The SMT adopts dual stream recording. The main stream is 4096Kbps and the sub stream is 1024Kbps, then the total recording capacity is 49.45TB (39.56TB + 9.89TB).

Considering the format loss of the disk is about 10%, the required disk capacity will be 55TB (49.45TB \div (1-10%)).

Appendix C Compatible Device List

Compatible HDD list

Brand and Series		Capacity
Seagate	Barracuda Series	500GB/1TB /2TB/3TB
	SV35 Series(recommended)	1TB /2TB/3TB
	Surveillance HDD Series(recommended)	1TB /2TB/3TB /4TB /6TB/8TB/10TB
Western Digital	Blue Series	500GB/1TB
	Green Series	2TB/3TB /4TB
	Purple Series (recommended)	1TB /2TB/3TB /4TB /6TB/8TB/10TB

Compatible USB mobile device


Brand	Capacity
SSK	2GB
Netac	4GB
Kingston	2GB/8GB/16GB/32GB
Aigo	2GB
Smatter vider	1GB
SanDisk	4GB/8GB/16GB/32GB

Appendix D Communication Port List

Port	Protocol(TCP/UDP)	Descriptions
80	TCP	Description: HTTP communication port. It is opened by default and used to access the WEB client. Authentication: Username and password Encryption: NO
443	TCP	Description: HTTPs communication port. It is opened by default and used to access the WEB client. Authentication: Username and password Encryption: TLS
554	TCP	Description: RTSP communication port. It is closed by default. After enabling RTSP function, this port will be opened and used to transfer audio and video stream. Authentication: Username and password (Digest) Encryption: NO
6036	TCP	Description: Private communication port. It is opened by default and used to transfer audio and video stream. Authentication: Username and password (Digest) Encryption: AES
9036	TCP	Description: This port is opened by default which is mainly used to receive the information sent by the POS terminal or printer. The information will be overlaid on the image of the IPC you have configured in previewing or recording mode. Authentication: NO Encryption: NO
41952	TCP	Description: This port is opened by default which is mainly used to receive the request sent by other UPnP devices and communicate with other UPnP devices. Authentication: NO Encryption: NO
41953	TCP	Description: This port is closed by default. After the UPnP function is enabled, this port is enabled too. It is mainly used to receive the request sent by other UPnP devices and communicate with other UPnP devices. Authentication: NO Encryption: NO
1900	UDP	Description: This port is opened by default which is used to enable, find and run SSDP. Additionally, it is also used to listen to and receive the multicast packets from other online UPnP devices. Authentication: NO Encryption: NO

Appendix E Personal Data Collection Description


There are five functions concerning the personal data collection under the network modules of the device, including PPPoE, DDNS, E-mail, 802.1x and FTP. In the device, these functions are used by the client-end of the device to communicate with the server of the customer’s company (or service supplier). As the client-end, our device needs to keep the authentication credentials (username and password) used to connect the server. These credentials can be configured through the Web client of the device and then sent to the device. The process of the data transmission and storage are as follows.

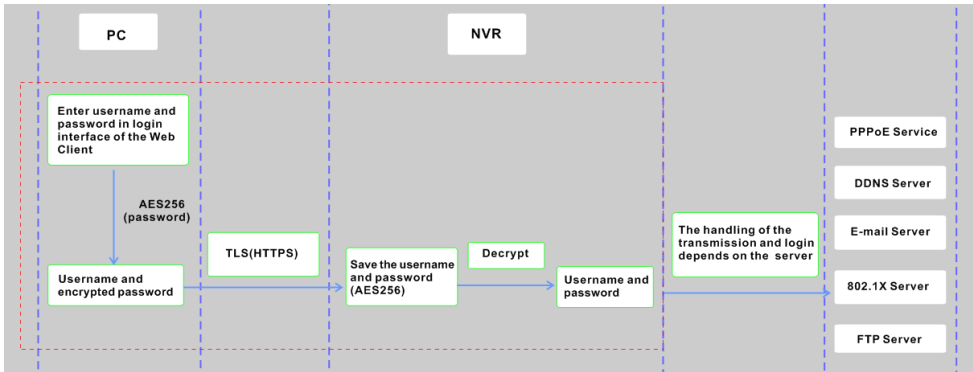

Function	Personal Data Type	Transmission Type	Storage Type	Authentication
PPPoE	Username, Password	TLS+AES256(password)	Password : AES256	Username/Password
DDNS	Username, Password	TLS+AES256(password)	Password : AES256	Username/Password
E-mail	Username, Password, E-mail address	TLS+AES256(password)	Password : AES256 The E-mail address will be desensitized before it is displayed on the page.	Username/Password
802.1x	Username, Password	TLS+AES256(password)	Password : AES256	Username/Password
FTP	Username, Password	TLS+AES256(password)	Password : AES256	Username/Password

Statement:
Except for service authentication when communicating with the server, we will never share these personal data stored on the device to the third-party or use them by ourselves without the client’s authorization.
The log will record the operator's operation steps and change records, and will not contain any information about the collected personal data.

Appendix F Default Account List

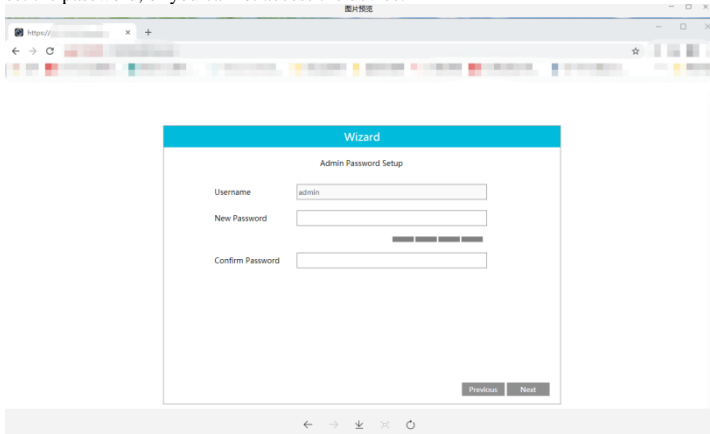Username	Default Password	Descriptions
admin	NO	<p>Purpose : log onto the device and its clients</p> <p>Description : When you log in for the first time, a wizard will be displayed. You must set the password, or you cannot access the device.</p> 
root	NO	<p>Purpose : Test via serial port</p> <p>Description : The default password of “root” is null. It doesn’t mean you can log in the device without password. You must set the password of “admin” in the above-mentioned interface first. Then you can log in by using “root”.</p>

Statement :

Remote testing/debugging doesn’t support (Telnet/SSH unavailable) for the device. When an error occurs, the customer needs to send the device back to our company and tell us the password of “admin” used to log in the device and web client. Then the corresponding technician of our company will log in the serial port to find the problem. Without the customer’s identity verification information and the customer’s authentication, we cannot log in and do not have permission to log into the device.

Appendix G Command List

Command Type	Function	Command Contents
Operating Command	Hilinux Operating System Command	add-shell addgroup adduser arp ash awk basename blkid blockdev btools busybox cat chat chmod chpst cmp cp cut date dd delgroup deluser depmod devmem df diff dmesg dnsdomainname dos2unix du echo ed egrep eject env envdir envuidgid expr fbset fgrep find free fsck.vfat fsync getty grep groups halt head hexdump hiddrs himc himd himd.l himm hostname hwclock i2c_read i2c_write id ifconfig ifstat init insmod iostat ip ipaddr iplink iproute iprule iptables iptunnel kill killall killall5 ln login logname ls lsmod lsof lspci lsusb lzcat lzma md5sum mdev mkdir mkfifo mknod modinfo modprobe mount mountpoint mv netstat nice passwd pidof ping ping6 pmap poweroff pppd pppoe printf ps pstree pwd readlink reboot remove-shell renice restoreCFG_N9000.sh rm rmdir rmmode route sed setsid setuidgid sh shutdown_os.sh sleep softlimit stat stty sync tail tar test time top touch tty ubiattach ubidetach udevadm udevd udhpcd umount uname unix2dos unlzma uptime usleep vconfig vi watch wc xargs yes

